



PILOT'S OPERATING HANDBOOK

Document Number: AS-POH-10-508

Date of Issue: 10. 03. 2020

Aircraft Model: WT9 Dynamic LSA / Club

Aircraft Serial Number: **DY-508/2014 LSA** Aircraft Registration Number: **F-HVXD**

THIS HANDBOOK INCLUDES THE INFORMATION REQUIRED TO BE FURNISHED TO THE PILOT BY REGULATIONS AND ADDITIONAL INFORMATION PROVIDED BY THE AIRCRAFT MANUFACTURER – AEROSPOOL, SPOL. S R. O.

PAGES MARKED AS "EASA APPROVED" ARE APPROVED BY EUROPEAN AVIATION SAFETY AGENCY.

THIS AIRCRAFT MUST BE OPERATED IN COMPLIANCE WITH THE INFORMATION AND LIMITATIONS STATED IN THIS MANUAL.

This page is left blank intentionally



Pilot's Operating Handbook

- AS-POH-10-508-

RECORD OF REVISIONS

Any revision of the present manual, except actual weight data, must be recorded in the following table, and in the case of approved chapters, endorsed by the responsible airworthiness authority.

The new or amended text in the revised pages will be indicated by a black vertical line in the page margin, and the revision will be shown on the bottom side of the page.

Revision	Date	Description of Revision	Approved by
Initial issue	10. 03. 2020	New issue.	



Pilot's Operating Handbook

- AS-POH-10-508 ----

This page is left blank intentionally



Pilot's Operating Handbook

- AS-POH-10-508-

LIST OF EFFECTIVE PAGES

Chapter	Page	Status	Chapter	Page	Status
Title page		Initial issue	EASA Approved	2-18	Initial issue
Page		Initial issue			
	Page A	Initial issue	3	3-1	Initial issue
	Page B	Initial issue	EASA Approved	3-2	Initial issue
	Page C	Initial issue	EASA Approved	3-3	Initial issue
	Page D	Initial issue	EASA Approved	3-4	Initial issue
	Page E	Initial issue	EASA Approved	3-5	Initial issue
	Page F	Initial issue	EASA Approved	3-6	Initial issue
	Page G	Initial issue	EASA Approved	3-7	Initial issue
	Page H	Initial issue	EASA Approved	3-8	Initial issue
			EASA Approved	3-9	Initial issue
0	0-1	Initial issue	EASA Approved	3-10	Initial issue
	0-2	Initial issue	EASA Approved	3-11	Initial issue
	0-3	Initial issue	EASA Approved	3-12	Initial issue
	0-4	Initial issue	EASA Approved	3-13	Initial issue
	0-5	Initial issue	EASA Approved	3-14	Initial issue
	0-6	Initial issue	EASA Approved	3-15	Initial issue
			EASA Approved	3-16	Initial issue
1	1-1	Initial issue	EASA Approved	3-17	Initial issue
	1-2	Initial issue	EASA Approved	3-18	Initial issue
	1-3	Initial issue	EASA Approved	3-19	Initial issue
	1-4	Initial issue	EASA Approved	3-20	Initial issue
	1-5	Initial issue	EASA Approved	3-21	Initial issue
	1-6	Initial issue	EASA Approved	3-22	Initial issue
	1-7	Initial issue	EASA Approved	3-23	Initial issue
	1-8	Initial issue	EASA Approved	3-24	Initial issue
			EASA Approved	3-25	Initial issue
2	2-1	Initial issue	EASA Approved	3-26	Initial issue
EASA Approved	2-2	Initial issue	EASA Approved	3-27	Initial issue
EASA Approved	2-3	Initial issue	EASA Approved	3-28	Initial issue
EASA Approved	2-4	Initial issue	EASA Approved	3-29	Initial issue
EASA Approved	2-5	Initial issue	EASA Approved	3-30	Initial issue
EASA Approved	2-6	Initial issue			
EASA Approved	2-7	Initial issue	4	4-1	Initial issue
EASA Approved	2-8	Initial issue		4-2	Initial issue
EASA Approved	2-9	Initial issue		4-3	Initial issue
EASA Approved	2-10	Initial issue		4-4	Initial issue
EASA Approved	2-11	Initial issue		4-5	Initial issue
EASA Approved	2-12	Initial issue		4-6	Initial issue
EASA Approved	2-13	Initial issue		4-7	Initial issue
EASA Approved	2-14	Initial issue		4-8	Initial issue
EASA Approved	2-15	Initial issue		4-9	Initial issue
EASA Approved	2-16	Initial issue		4-10	Initial issue
EASA Approved	2-17	Initial issue		4-11	Initial issue



Pilot's Operating Handbook

- AS-POH-10-508 ----

Chapter	Page	Status	Chapter	Page	Status
4	4-12	Initial issue	EASA Approved	6-9	Initial issue
	4-13	Initial issue	EASA Approved	6-10	Initial issue
	4-14	Initial issue	EASA Approved	6-11	Initial issue
	4-15	Initial issue	EASA Approved	6-12	Initial issue
	4-16	Initial issue	EASA Approved	6-13	Initial issue
	4-17	Initial issue	EASA Approved	6-14	Initial issue
	4-18	Initial issue	EASA Approved	6-15	Initial issue
	4-19	Initial issue	EASA Approved	6-16	Initial issue
	4-20	Initial issue	EASA Approved	6-17	Initial issue
	4-21	Initial issue	EASA Approved	6-18	Initial issue
	4-22	Initial issue	EASA Approved	6-19	Initial issue
	4-23	Initial issue	EASA Approved	6-20	Initial issue
	4-24	Initial issue	EASA Approved	6-21	Initial issue
	4-25	Initial issue	EASA Approved	6-22	Initial issue
	4-26	Initial issue	EASA Approved	6-23	Initial issue
	4-27	Initial issue	EASA Approved	6-24	Initial issue
	4-28	Initial issue			
	4-29	Initial issue	7	7-1	Initial issue
	4-30	Initial issue		7-2	Initial issue
				7-3	Initial issue
5	5-1	Initial issue		7-4	Initial issue
EASA Approved	5-5	Initial issue		7-5	Initial issue
EASA Approved	5-3	Initial issue		7-6	Initial issue
EASA Approved	5-4	Initial issue		7-7	Initial issue
EASA Approved	5-5	Initial issue		7-8	Initial issue
EASA Approved	5-6	Initial issue		7-9	Initial issue
EASA Approved	5-7	Initial issue		7-10	Initial issue
EASA Approved	5-8	Initial issue		7-11	Initial issue
EASA Approved	5-9	Initial issue		7-12	Initial issue
EASA Approved	5-10	Initial issue		7-13	Initial issue
EASA Approved	5-11	Initial issue		7-14	Initial issue
EASA Approved	5-12	Initial issue		7-15	Initial issue
EASA Approved	5-13	Initial issue		7-16	Initial issue
EASA Approved	5-14	Initial issue		7-17	Initial issue
EASA Approved	5-15	Initial issue		7-18	Initial issue
EASA Approved	5-16	Initial issue		7-19	Initial issue
				7-20	Initial issue
6	6-1	Initial issue		7-21	Initial issue
EASA Approved	6-2	Initial issue		7-22	Initial issue
EASA Approved	6-3	Initial issue		7-23	Initial issue
EASA Approved	6-4	Initial issue		7-24	Initial issue
EASA Approved	6-5	Initial issue		7-25	Initial issue
EASA Approved	6-6	Initial issue		7-26	Initial issue
EASA Approved	6-7	Initial issue		7-27	Initial issue
EASA Approved	6-8	Initial issue		7-28	Initial issue



Pilot's Operating Handbook

- AS-POH-10-508-

Chapter	Page	Status	Chapter	Page	Status
7	7-29	Initial issue	9	9-1	Initial issue
	7-30	Initial issue		9-2	Initial issue
	7-31	Initial issue		9-3	Initial issue
	7-32	Initial issue		9-4	Initial issue
	7-33	Initial issue		9-5	Initial issue
	7-34	Initial issue		9-6	Initial issue
	7-35	Initial issue			
	7-36	Initial issue			
	7-37	Initial issue			
	7-38	Initial issue			
	7-39	Initial issue			
	7-40	Initial issue			
	7-41	Initial issue			
	7-42	Initial issue			
	7-43	Initial issue			
	7-44	Initial issue			
	7-45	Initial issue			
	7-46	Initial issue			
8	8-1	Initial issue			
	8-2	Initial issue			
	8-3	Initial issue			
	8-4	Initial issue			
	8-5	Initial issue			
	8-6	Initial issue			
	8-7	Initial issue			
	8-8	Initial issue			
	8-9	Initial issue			
	8-10	Initial issue			
	8-11	Initial issue			
	8-12	Initial issue			
	8-13	Initial issue			
	8-14	Initial issue			
	8-15	Initial issue			
	8-16	Initial issue			
	8-17	Initial issue			
	8-18	Initial issue			
	8-19	Initial issue			
	8-20	Initial issue			



Pilot's Operating Handbook

- AS-POH-10-508 ----

Chapter	Page	Date	Chapter	Page	Date
chapter	1 450	Butc	Chapter	1 050	Butt





Chapter Name

Pilot's Operating Handbook AS-POH-10-508

TABLE OF CONTENTS

Chapter

INTRODUCTION
GENERAL INFORMATION
LIMITATIONS
EMERGENCY PROCEDURES
NORMAL PROCEDURES
PERFORMANCE
WEIGHT AND BALANCE, AND EQUIPMENT LIST
DESCRIPTION OF AIRCRAFT AND SYSTEMS
HANDLING AND SERVICING
SUPPLEMENTS



Pilot's Operating Handbook

- AS-POH-10-508 ----

This page is left blank intentionally

Pilot's Operating Handbook AS-POH-10-508



0 INTRODUCTION

TABLE OF CONTENTS

0.1	GENERAL	0-2
0.2	LIST OF STANDARDS	0-2
0.3	CONTINUED AIRWORTHINESS	0-2
0.4	AIRCRAFT MANUFACTURER CONTACT INFORMATION	0-2
0.5	DATA LOCATION AND CONTACT INFORMATION FOR RECOVERY OF APPROVAL DOCUMENTATION	- 0-2
0.6	SYMBOLS, ABBREVIATIONS AND TERMINOLOGY	0-3
0.6.1	Speed	0-3
0.6.2	Meteorological Terms	0-3
0.6.3	Power Plant	0-4
0.6.4	Flight Performance and Flight Planning	0-4
0.6.5	Weight and Balance	0-4
0.6.6	Equipment	0-5
0.6.7	Miscellaneous	0-5
0.7	CONVERSION FACTORS	0-6
0.7.1	Length or Altitude	0-6
0.7.2	Speed	0-6
0.7.3	Pressure	0-6
0.7.4	Weight	0-6
0.7.5	Volume	0-6
0.7.6	Area	0-6



Pilot's Operating Handbook

AS-POH-10-508 -

0.1 General

This Pilot's Operating Handbook (POH) has been prepared to provide pilots and instructors with all information needed for the safe and efficient operation of this aircraft. This manual contains supplementary data supplied by the manufacturer.

Before using the aircraft, read this handbook carefully: an in-depth knowledge of aircraft features and limitations will allow you to operate the aircraft safely.

0.2 List of Standards

EASA Approval Basis was Standard Specification for Design and Performance of a Light Sport Airplane ASTM F2245-10c. This aircraft is not type certified and is accepted for EASA Permit to Fly. See the related EASA Flight Conditions for the operational limitations and airworthiness conditions.

The noise requirements are shown according to Certification Specifications and Acceptable Means of Compliance for Aircraft Noise CS-36, Amendment 3 dated 20th January 2013.

0.3 Continued Airworthiness

Technical publications for continued airworthiness are released on the Aerospool website www.aerospool.sk and they may be downloaded free of charge.

Rotax Aircraft Engines releases technical publications on their website www.flyrotax.com from which they may be downloaded free of charge.

Documentation updates for the propeller may be downloaded on www.woodcomp.cz.

Documentation updates for avionics may be downloaded on the avionics manufacturer's website.

It is the responsibility of the owner/operator of the aircraft to keep the aircraft and its documentation up to date and to comply with all technical publications. The owner/operator is responsible for keeping a current POH onboard every flight.

0.4 Aircraft Manufacturer Contact Information

Aerospool spol. s r. o. Letisková 10 971 03 Prievidza Slovak republic Web: <u>www.aerospool.sk</u> E-mail: <u>dynamic@aerospool.sk</u>

0.5 Data Location and Contact Information for Recovery of Approval Documentation

European Aviation Safety Agency (EASA) Postfach 10 12 53 50452 Koeln Germany Web: <u>www.easa.europa.eu</u> E-mail: <u>info@easa.europa.eu</u>

Pilot's Operating Handbook

AS-POH-10-508



0.6 Symbols, Abbreviations and Terminology

0.6.1 Speed

- CAS Calibrated airspeed; Indicated speed in kilometers per hour corrected for installation and instrument errors. CAS is equal to TAS in standard atmospheric conditions at MSL.
- KCAS CAS indicated in knots.
- IAS Indicated airspeed in kilometers per hour as shown on the airspeed indicator.
- KIAS IAS indicated in knots.
- GS Ground Speed. Speed of the aircraft relative to the ground.
- TAS True airspeed. Speed of the aircraft relative to the air. TAS is CAS corrected for altitude and temperature errors.
- v_A Maneuvering airspeed. Maximum speed at which the aircraft is not overstressed at full deflection of control surfaces.
- v_{FE} Maximum airspeed with flaps extended.
- VLOF Airspeed at lift off.
- v_{NE} Airspeed which must never be exceeded in any operation.
- v_{NO} Normal operating airspeed (cruise speed).
- v_{RA} Maximum rough airspeed.
- vs The power-off stall airspeed with the aircraft in its standard configuration.
- v_{so} The power-off stall airspeed with the aircraft in landing configuration.
- vT Glider towing speed
- v_x Best angle-of-climb airspeed.
- vy Best rate-of-climb airspeed.
- v₅₀ Airspeed at height 15 m (50 ft).

0.6.2 Meteorological Terms

- AGL Above Ground Level
- MSL Above Mean Sea Level
- ISA International Standard Atmosphere at which air is identified as a dry gas. The temperature at mean sea level is 15° Celsius (59° F), the air pressure at sea level is 1013.25 mbar (29.92 inHg), the temperature gradient up to the altitude at which the temperature reaches -56.5 °C (-67.9 °F) is -0.0065 °C/m (-0.0036 °F/ft) and 0 °C/m (0 °F/ft) above.
- OAT Outside air temperature.

Indicated Pressure Altitude

Altitude reading with altimeter set to 1013.25 mbar (29.92 inHg) air pressure.

Pressure Altitude

Altitude measured at standard pressure at MSL (1013.25 mbar / 29.92 inHg) using a barometric altimeter. Pressure altitude is the indicated altitude corrected for installation and instrument errors. Within this manual the instrument errors are assumed to be zero.

Aerodrome/Airport Pressure

Actual atmospheric pressure at the aerodrome/airport altitude.

Wind The wind speeds used in the diagrams in this manual should be referred to as headwind or tailwind components of the measured wind.



Pilot's Operating Handbook

AS-POH-10-508 -

0.6.3 Power Plant

hp Horsepower

kW Kilowatt

Takeoff Power

Maximum engine power for takeoff.

Maximum Continuous Power

Maximum permissible continuous engine output power during flight.

0.6.4 Flight Performance and Flight Planning

Demonstrated Crosswind Component

The maximum speed of the crosswind component at which the maneuverability of the aircraft during takeoff and landing has been demonstrated during type certification test flights.

Service Ceiling

The altitude at which the maximum rate of climb is 100 fpm / 0.5 m/s.

0.6.5 Weight and Balance

Reference Datum (RD)

An imaginary vertical plane from which all horizontal distances for the center of gravity calculations are measured. The Reference Datum is located 1.975 m / 77.76 in forward direction from inner surface of the firewall, perpendicular to the longitudinal axis of the aircraft.

Station A defined point along the longitudinal axis which is generally presented as a specific distance from the reference datum.

Lever Arm The horizontal distance from the reference datum to the center of gravity (of a component).

Moment The weight of a component multiplied by its lever arm.

Center of Gravity (CG)

Point of equilibrium for the aircraft weight.

CG position

Distance from the reference datum to the CG. It is determined by dividing the total moment (sum of the individual moments) by the total weight.

Center of Gravity Limits

The CG range which an aircraft with a given weight must be operated within.

MAC Mean Aerodynamic Chord

Usable Fuel

The amount of fuel available for the flight plan calculation.

Unusable Fuel

The amount of fuel remaining in the tank, which cannot be safely used in flight.

Empty Weight

Weight of the aircraft including all operating fluids and maximum oil amount without unusable fuel.

Basic Empty Weight

Weight of the aircraft including all operating fluids and maximum oil amount with unusable fuel.

Useful Load

The difference between takeoff weight and empty weight.

Maximum Takeoff Weight

Maximum weight permissible for takeoff.



Pilot's Operating Handbook

AS-POH-10-508

- ALT Altitude or Altimeter
- ASI Airspeed Indicator
- CDI Course Deviation Indicator
- COMM Communication Transceiver
- CRS Course
- EFIS Electronic Flight Information System
- ELT Emergency Locator Transmitter
- EMS Engine Monitoring System
- EPS Emergency Parachute System
- GPS Global Positioning System
- HDG Heading
- MFD Multi-function Display
- OEM Original Equipment Manufacturer, company that controls the engineering and design rights for the LSA or an assembly, subassembly, accessory, or part installed in the aircraft, the consumable material, tools, fixtures, and test equipment used to service or maintain the aircraft.
- VSI Vertical Speed Indicator

0.6.7 Miscellaneous

- ATC Air Traffic Control
- CS-LSA Certification Specification for Light Sport Aeroplanes
- EASA European Aviation Safety Agency
- IFR Instrument Flight Rules
- PIC Pilot in Command
- POH Pilot's Operating Handbook
- VFR Visual Flight Rules
- RWY Runway



Pilot's Operating Handbook

- AS-POH-10-508 ----

0.7 Conversion Factors

0.7.1 Length or Altitude

1 [m] = 3.281 [ft] 1 [ft] = 0.305 [m] 1 [m] = 39.37 [in] 1 [in] = 0.0254 [m] 1 [km] = 0.5399 [nm] 1 [nm] = 1.852 [km]

0.7.2 Speed

1 [km/h] = 0.54 [knots] 1 [knots] = 1.852 [km/h] 1 [m/s] = 1.9425 [knots] 1 [knots] = 0.5148 [m/s] 1 [m/s] = 196.86 [fpm] 1 [fpm] = 0.00508 [m/s]

0.7.3 Pressure

1 [atm] = 1013.25 [mbar] = 101325 [Pa] = 29.92 [inHg] 1 [inHg] = 0.03342 [atm] = 33.865 [mbar] = 3386.5 [Pa]

0.7.4 Weight

1 [kg] = 2.205 [lb] 1 [lb] = 0.454 [kg]

0.7.5 Volume

1 [liter] = 0.2642 [U. S. gallon] 1 [U. S. gallon] = 3.785 [liter]

0.7.6 Area

1 [m²] = 10.76 [ft²] 1 [ft²] = 0.0929 [m²]



Pilot's Operating Handbook AS-POH-10-508

1 GENERAL INFORMATION

TABLE OF CONTENTS

1.1	GENERAL	.1-2
1.2	INTRODUCTION TO THE POH	.1-2
1.2.1	Warnings, Cautions and Notes	1-2
1.2.2	Procedures	1-2
1.3	INTRODUCTION TO THE AIRCRAFT	.1-3
1.3.1	Dimensions	1-3
1.3.2	Engine	1-3
1.3.3	Propeller	1-3
1.3.4	Three View Drawing	1-4
1.3.5	Ground Turning Clearance	1-5
1.4	SUMMARY OF PERFORMANCE	.1-6
1.4.1	Weights	1-6
1.4.2	Top and Cruise Speeds	1-6
1.4.2.1	Top Speeds at Sea Level	1-6
1.4.2.2	Cruise Speeds at Altitudes and Power Setting	1-6
1.4.3	Fuel Operating Ranges	1-7
1.4.4	Rate of Climb	1-7
1.4.5	Stall Speeds	1-7
1.4.6	Approved Fuel Types and Fuel Capacity	1-8
1.4.7	Maximum Engine Power Output	1-8
1.4.8	Specific Loadings	1-8



Pilot's Operating Handbook

AS-POH-10-508 -

1.1 General

This chapter contains information of general interest to pilots and owners. You will find useful information to familiarize yourself with the aircraft, such as dimensions, ground turning clearance, loading, fuelling and summary of performance.

1.2 Introduction to the POH

1.2.1 Warnings, Cautions and Notes

The following highlighting styles are used in this handbook to focus attention on particular information that is important.

WARNING Warnings are used to call attention to operating procedures that if not strictly observed, may result in personal injury or loss of life!

CAUTION

Cautions are used to call attention to operating procedures that if not strictly observed, may result in damage of equipment!

NOTE

Notes are used to call attention to any special item, not directly related to safety, but which is important or unusual.

1.2.2 Procedures

The procedures, listed in this POH are formed into tables with three columns as shown in the example below:

Column A	Column B	Column C
а.	Item 1	OFF
b.	ITEM 2	As required
с.	ITEM 3 handle	OPEN, carefully

Column A contains letters in the alphabetical order, defining the order of the actions in the procedure.

Plain text in Column B defines the item, which is not marked by a placard in the cabin, but is generally identifiable; or supplements the other text.

Bold capital text in column B defines the item, which is marked by a placard with the identical expression in the cabin. Plain text in Column C defines the setting or action which is generally understandable; or supplements the other text.

Capital text in Column C defines the setting or action, which usually changes the state of the item from one setting to another; and/or emphasizes the importance of the setting or action.

Bold capital text in Column C defines the setting or action, which is marked by a placard with the identical expression in the cabin.



Pilot's Operating Handbook

- AS-POH-10-508-

1.3 Introduction to the Aircraft

1.3.1 Dimensions

Wing area	10.500 m ²	112.98 ft ²
Wing span	8.926 m	29.28 ft
Overall length	6.460 m	21.19 ft
Maximum height	1.850 m	6.07 ft
Wheel base	1.400 m	4.59 ft
Main landing gear track	2.240 m	7.35 ft
Maximum propeller diameter	1.750 m	68.90 in
Mean aerodynamic chord (MAC)	1.172 m	3.84 ft

1.3.2 Engine

Number of engines	1
Number of cylinders	4
Engine manufacturer	BRP-Rotax GmbH & Co KG
Engine model number	Rotax 912 ULS2
Engine type	Horizontally opposed, geared, normally aspirated, spark ignition
Cooling	Combined liquid and air
Maximum takeoff power at 5800 rpm (max. 5 min.)	73.5 kW / 100 hp
Maximum continuous power at 5500 rpm	69.0 kW / 92.5 hp

1.3.3 Propeller

Number of propellers	1
Propeller manufacturer	WOODCOMP s. r. o., Odolená Voda, Czech republic
Propeller model number	SR 2000DN
Number of blades	3
Propeller diameter	1.726 m (67.95 in)
Propeller type	In-flight electrically adjustable, constant speed
Pitch range	17° - 30°



Pilot's Operating Handbook

- AS-POH-10- 508 -----

1.3.4 Three View Drawing



Fig. 1-1 Three view drawing



Pilot's Operating Handbook

- AS-POH-10-508----

1.3.5 Ground Turning Clearance



Fig. 1-2 Ground turning clearance

Α	Wing tip radius	9.850 m	32.32 ft
В	Outside main gear radius	6.500 m	21.32 ft
С	Nose gear radius	5.380 m	17.65 ft
D	Inside main gear radius	4.260 m	13.98 ft

CAUTION

The data are valid for dry paved surface, fully turned nose gear and minimum taxi speed! Expect greater turning radius on unpaved, wet and/or slippery surfaces!



Pilot's Operating Handbook

- AS-POH-10-508 -----

1.4 Summary of Performance

L

NOTE

All airspeeds shown in the POH are IAS / KIAS, unless not stated otherwise.

1.4.1 Weights

Maximum takeoff weight	600.0 kg	1323 lb
Maximum landing weight	600.0 kg	1323 lb
Empty weight	Max. 410.8 kg	Max. 906 lb
Maximum load per seat	120.0 kg	265 lb
Maximum total baggage weight	2 x 20.0 kg	2 x 44 lb

1.4.2 Top and Cruise Speeds

1.4.2.1 Top Speeds at Sea Level

		IAS	KIAS
Tan speeds at see lovel	At 5700 rpm*	250	135
Top speeds at sea level	At 5500 rpm	240	130

* Propeller regulator in **CONSTANT SPEED** mode permits to set max. 5700 rpm.

1.4.2.2 Cruise Speeds at Altitudes and Power Setting

Pressure altitude	Engine speed	MAP	Cruise speeds	
ft	rpm	inHg	IAS	KIAS
2000	5 500	27.1	229	124
4000	5 500	25.1	219	118
6000	5 500	23.1	209	113
8000	5 500	21.3	199	108
10000	5 500	20.1	191	103

|------

NOTE

For more details see Chapter 5.6.

Page 1-6



Pilot's Operating Handbook

- AS-POH-10-508-

1.4.3 Fuel Operating Ranges

Endurances and ranges at altitude 2000 ft ISA							
Engine speed		rpm	5 500	5 500	5 500	5 500	5 500
МАР		inHg	27.1	26.1	25.1	24.1	23.1
Fuel consumptio	n	l/h	27.8	22.8	20.9	18.9	17.9
IAS		km/h	229	218	207	195	184
KIAS		knots	124	118	112	105	99
CAS		km/h	221	211	201	190	180
KCAS		knots	119	114	109	103	97
TAS		km/h	228	217	207	196	185
KTAS		knots	123	117	112	106	100
		hh:mm	4:16	5:12	5:42	6:18	6:39
	119	km	974	1132	1181	1234	1234
		nm	526	611	638	666	666
	100	hh:mm	3:35	4:22	4:47	5:18	5:35
		km	819	952	993	1037	1037
		nm	442	514	536	560	560
	80	hh:mm	2:52	3:30	3:50	4:14	4:28
Ē		km	655	761	794	830	830
fue		nm	354	411	429	448	448
ple		hh:mm	2:09	2:37	2:52	3:10	3:21
Usa	60	km	491	571	596	622	622
		nm	265	308	322	336	336
		hh:mm	1:26	1:45	1:55	2:07	2:14
	40	km	327	381	397	415	415
		nm	177	206	214	224	224
		hh:mm	0:43	0:52	0:57	1:03	1:07
	20	km	164	190	199	207	207
		nm	88	103	107	112	112

1.4.4 Rate of Climb

	IAS	KIAS
Best angle of climb airspeed V _x (at SL)	104 IAS	57 KIAS
Rate of climb at V_x (at SL)	1127 fpm (5.7 m/s)	
Best rate of climb airspeed V _Y (at SL)	127 IAS	69 KIAS
Rate of climb at V _Y (at SL)	1190 fpm (6.0 m/s)	

1.4.5 Stall Speeds

	IAS	KIAS
Cruise, FLAPS 0 (0°)	78	42
Takeoff, FLAPS 1 (15°)	68	37
Landing – normal, FLAPS 2 (24°)	64	35
Landing – emergency, FLAPS 3 (35°)	61	33



Pilot's Operating Handbook

- AS-POH-10-508 -

1.4.6 Approved Fuel Types and Fuel Capacity

	EN 228 Super		
Approved types of fuel (Min. RON 95)	EN 228 Super Plus		
	AVGAS	AVGAS 100 LL	
Total capacity of fuel tanks	126.0 l	33.29 U. S. gal	
	90.7 kg	200 lb	
Total weekle fuel	119.0 l	31.44 U. S. gal	
Total usable fuel	85.7 kg	189 lb	
Total unusable fuel	7.01	1.85 U. S. gal	
	5.0 kg	11 lb	

1.4.7 Maximum Engine Power Output

Maximum takeoff power at 5800 rpm (max. 5 min.)	73.5 kW	100.0 hp
Maximum continuous power at 5500 rpm	69.0 kW	92.5 hp

1.4.8 Specific Loadings

Wing loading	57.14 kg/m ²	11.71 lb/ft ²
Devier leading	8.16 kg/kW	18.00 lb/kW
Power loading	6.00 kg/hp	13.23 lb/hp

Pilot's Operating Handbook AS-POH-10-508



2 LIMITATIONS

TABLE OF CONTENTS

2.1	GENERAL	2-3
2.2	AIRSPEED LIMITATIONS	2-3
2.2.1	Airspeed Indicator Marking	2-3
2.2.2	Stalling Speeds at Maximum Takeoff Weight (Vs and Vso)	2-3
2.2.3	Flap Extended Speed Range ($V_{S0} - V_{FE}$)	2-3
2.2.4	Operating Maneuvering Speed (V ₀)	2-4
2.2.5	Never Exceed Speed (V _{NE})	2-4
2.2.6	Rough Air Speed (V _{RA})	2-4
2.3	POWER PLANT LIMITATIONS	2-5
2.3.1	Engine Limitations	2-5
2.3.2	Power Plant Instrument Markings	2-6
2.3.3	Taxi Power	2-6
2.4	WEIGHT LIMITS	2-7
2.5	CENTER OF GRAVITY LIMITS	2-7
2.6	APPROVED MANEUVERS	2-8
2.7	FLIGHT LOAD FACTOR LIMITS	2-8
2.8	FLIGHT CREW LIMITATIONS	2-8
2.9	FLUIDS	2-9
2.9.1	Fuel	2-9
2.9.2	Oil	2-10
2.9.3	Coolant	2-10
2.10	ENVIRONMENTAL LIMITATIONS	2-11
2.11	KIND OF OPERATION	2-11
2.12	SERVICE CEILING	2-11
2.13	SYSTEMS AND EQUIPMENT LIMITATIONS	2-12
2.13.1	Flap Limitations	2-12
2.13.2	Emergency Parachute System	2-12
2.13.3	Minimum Equipment for Flight Operation	2-13



Pilot's Operating Handbook

- AS-POH-10-508 ----

2.14	OTHER LIMITATIONS	2-13
2.14.1	Smoking	2-13
2.14.2	Dynon SkyView System Limitations	2-13
2.14.3	External Power Source and Battery	2-14
2.14.4	Towing Operation	2-14
2.15	PLACARDS	2-15
2.15.1	Interior Placards	2-15
2.15.2	Exterior Placards	2-16



Pilot's Operating Handbook AS-POH-10-508

2.1 General

The limitations included in this section are approved by the European Aviation Safety Agency.

Chapter 2 includes operating limitations, instrument markings, and basic placards necessary for safe operation of the aircraft, its standard systems and equipment.

WARNING Aircraft must be operated within the limitations stated in this chapter!

2.2 Airspeed Limitations

2.2.1 Airspeed Indicator Marking

Color code	Significance	Airspeed or a	irspeed range
White arc	Operating range with extended flaps.Lower limit is maximum weight stallingspeed in landing configuration V_{50} .Upper limit is maximum speed permissiblewith flaps extended V_{FE} .		33 – 76 KIAS
Green arc	Normal operating range. Lower limit is maximum weight stalling speed with flaps retracted V _S . Upper limit is maximum cruising speed V _{NO} .	78 – 218 IAS	42 – 118 KIAS
Yellow arc	Maneuvers must be conducted with caution and only in smooth air. (Lower limit is V_{NO} . Upper limit is V_{NE})	218 – 275 IAS	118 – 148 KIAS
Red line	Maximum speed for all operations V _{NE} 275 IA		148 KIAS

2.2.2 Stalling Speeds at Maximum Takeoff Weight (Vs and Vso)

Configuration	Flaps positions	Airs	peed
Cruise	FLAPS 0 (0°)	78 IAS	42 KIAS
Takeoff	FLAPS 1 (15°)	68 IAS	37 KIAS
Landing – Normal	FLAPS 2 (24°)	64 IAS	35 KIAS
Landing – Emergency	FLAPS 3 (35°)	61 IAS	33 KIAS

2.2.3 Flap Extended Speed Range (V_{S0} – V_{FE})

Vso - Vfe	Speed range from stalling airspeed (flaps fully extended) to maximum airspeed with flaps extended	61 – 140 IAS	33 – 76 KIAS



Pilot's Operating Handbook

- AS-POH-10-508 ----

2.2.4 Operating Maneuvering Speed (V₀)

Vo			
at maximum takeoff	Do not make full or abrupt control	180 IAS	97 KIAS
weight	movements above this airspeed, because		
Vo	under certain conditions the aircraft may		
at minimum flying	be overstressed by full control deflections.	140 IAS	76 KIAS
weight			

2.2.5 Never Exceed Speed (V_{NE})

N	Do not exceed this airspeed in any	275 145	148 KIAS
VNE	operation.	275 IAS	140 KIA5

2.2.6 Rough Air Speed (V_{RA})

Vra	Do not exceed this airspeed except in smooth air and then only with caution. Air movements in lee-wave rotors, thunderclouds, visible whirlwind, or over mountain crests are to be understood as rough air.	218 IAS	118 KIAS
-----	--	---------	----------



Pilot's Operating Handbook

- AS-POH-10-508-

2.3 Power Plant Limitations

2.3.1 Engine Limitations

Engine manufacturer	BRP-Powertrain GmbH&Co.KG	
Engine model number	Rotax 912 ULS2	
Engine power	Max. takeoff	73.5 kW / 100.0 hp at 5800 rpm (max. 5 min.)
	Max. continuous	69.0 kW / 92.5 hp at 5500 rpm
	Takeoff	5800 rpm (max. 5 min.)
Engine speed	Continuous	5500 rpm
	Idle	1400 rpm (minimum)
Manifold pressure	Maximum	29.5 inHg
Coolant temperature	Maximum	120 °C
	Minimum	50 °C
	Maximum	130 °C
Oil proseuro	Minimum	0.8 bar
	Maximum	7.0 bar
Exhaust gas temperature	Maximum	880 °C
	Minimum	0.15 bar
Fuel pressure	Maximum	0.50 bar
	Minimum	-25 °C
Engine start operating temperature	Maximum	50 °C
Engine zero/negative load condition	Maximum	-0.5 g (max. 5 seconds)

NOTE

For complete performance data and limitations see OPERATORS MANUAL FOR ROTAX ENGINE TYPE 912 SERIES, Doc. No. OM-912, latest edition.



Pilot's Operating Handbook

- AS-POH-10-508 -

2.3.2 Power Plant Instrument Markings

Digital power plant instrument SkyView SV D1000 for monitoring of engine parameters is complemented with engine rpm indicator (propeller governor) and analogue fuel pressure indicator. Powerplant instruments, except of propeller governor are marked with following color code significance:

Dynon SkyView SV-D1000	Unit	Red Line Minimum Limit	Green Arc Normal Operating	Yellow Arc Caution Range	Red Line Maximum Limit
Engine speed	rpm	-	1400 – 5500	0 – 1400 5500 – 5800	5800
Manifold pressure	inHg	-	0.0 – 28.0	28.0 – 29.5	29.5
Coolant temperature	°C	-	50 – 120	-	120
Oil temperature	°C	50	90 - 110	50 – 90 110 – 130	130
Oil pressure	bar	0.8	2.0 - 5.0	0.8 – 2.0 5.0 – 7.0	7.0
Exhaust gas temperature	°C	-	200 – 880	-	880
Fuel pressure	bar	0.15	0.15 – 0.50	-	0.50
Fuel flow meter	l/h	_	0.0 - 30.0	_	over 30.0
Fuel level	I	0 - 16	16 – 45 45+	_	_

CAUTION

Illumination of the fuel reserve warning lamp signals that in the appropriate tank is 16 liters / 4.23 U. S. gal of fuel remaining, of which 3.5 liters / 0.92 U. S. gal is unusable fuel! This fuel is sufficient for half-hour flight at maximum continuous power!

2.3.3 Taxi Power

Use the minimum power settings for taxiing.

Power settings for taxiing on flat, smooth, hard surfaces is idle (min. 1400 rpm). Power settings for grassy, inclined, soft surfaces or when start motion is slightly above idle (1400 rpm).



Pilot's Operating Handbook

- AS-POH-10-508-

2.4 Weight Limits

Maximum takeoff weight	600.0 kg	1323 lb
Maximum landing weight	600.0 kg	1323 lb
Minimum flying weight	405.0 kg	893 lb
Maximum load per seat	120.0 kg	265 lb
Maximum total baggage weight	2x 20.0 kg	2x 44 lb

WARNING

Do not exceed maximum takeoff weight 600.0 kg!

WARNING

Do not place any baggage or objects to the compartment below your legs! It is not a baggage compartment!

NOTE

Actual aircraft empty weight is mentioned in Chapter 6.

2.5 Center of Gravity Limits

	Metric Units	U. S. Standard Units
Roforonco Datum	1.975 m forward from inner surface	77.76 in forward from inner surface
Reference Datum	of the firewall	of the firewall
	2.704 m (18.3 %MAC) at 542.5 kg	106.48 in (18.3 %MAC) at 1196 lb
Forward CG	with straight line taper to	with straight line taper to
	2.748 m (22.0 %MAC) at 600.0 kg	108.18 in (22.0 %MAC) at 1323 lb
Rearward CG	2.824 m (28.5 %MAC)	111.18 in (28.5 %MAC)

Center of gravity limits charts are shown at Fig. 6-2 (Metric Units) and Fig. 6-3 (U. S. Standard Units). Rearward center of gravity limit is obtained at maximum crew weight and minimum fuel amount. Forward center of gravity limit is obtained at minimum pilot weight and maximum fuel amount. For more details see the Chapter 6.

WARNING A flight shall not be commenced until the pilot-in-command is

satisfied that the mass of the aircraft and CG location are within the allowed limits for takeoff and landing! Fuel consumption moves the CG rearwards, therefore the CG location must be calculated for empty tanks as well! The mass of the baggage must be taken into account for every CG calculation!



Pilot's Operating Handbook

- AS-POH-10-508 -

2.6 Approved Maneuvers

Aerobatic maneuvers, including spins are prohibited.

The aircraft is not approved for pitch attitudes greater than 30°.

The aircraft is not designed for aerobatic operations. Only those operations incidental to normal flight are approved.

These operations include normal stalls (except whip stalls), chandelles, lazy eights and turns in which the bank angle does not exceeding 60°.

WARNING

Aerobatic maneuvers and intentional spins are prohibited!

2.7 Flight Load Factor Limits

Flaps	Load Factor
Flaps retracted: FLAPS 0 (0°)	+4 / -2*
Flaps extended: FLAPS 1 (15°), FLAPS 2 (24°), FLAPS 3 (35°)	+2 / 0

* Rotax 912 ULS2 limit is -0.5 for no more than 5 seconds.

WARNING		
Exceeding of the maximum allowed load factor may result in		
overstressing of the aircraft!		
Simultaneous full deflection of control surfaces around more than		
one axis may result in overstressing of the aircraft, even at speeds		
below V _A !		
Rapid pull / push of the control stick (pitch control) may result in		
exceeding the operating envelope limits!		

2.8 Flight Crew Limitations

Minimum flight crew	1 pilot	
Pilot in command (PIC)	Left seat only	



Pilot's Operating Handbook

AS-POH-10-508-

2.9 Fluids

2.9.1 Fuel

The electric fuel pump must be ON for takeoff and landing.

Approved types of fuel (min. RON 95)	EN 228 Super	
	EN 228 Super Plus	
	AVGAS 100 LL	
Total capacity of fuel tanks	126.0 l	33.29 U. S. gal
	90.7 kg	200 lb
Total usable fuel	119.0 l	31.44 U. S. gal
	85.7 kg	189 lb
Total unusable fuel	7.01	1.85 U. S. gal
	5.0 kg	11 lb

WARNING

Fuelling must be done with respect to the allowed CG range and MTOW, see Chapter 6!

Use of unapproved fuel may result in damage of engine and fuel system and eventually can lead to the engine failure!

WARNING

The electric fuel pump must be ON for takeoff and landing!

NOTE

Use of AVGAS 100 LL is not recommended, as it increases the engine wear. Use AVGAS 100 LL only when no other approved type of fuel is available.

For complete fuel specifications see OPERATORS MANUAL FOR ROTAX ENGINE TYPE 912 SERIES, Doc. No. OM-912 and Rotax Service Instructions SI-912-016, latest edition.



Pilot's Operating Handbook

- AS-POH-10-508 -

2.9.2 Oil

Oil capacity is 3.0 – 3.5 l (oil system + oil tank).

CAUTION

Use only suitable oil according to the specification stated at placard in the engine compartment!

CAUTION

Never use AVGAS, LB 95 with fully synthetic engine oils!

NOTE For complete oil specifications see OPERATORS MANUAL FOR ROTAX ENGINE TYPE 912 SERIES, Doc. No. OM-912 and Rotax Service Instructions SI-912-016, latest edition.

2.9.3 Coolant

Coolant capacity is approximately 2.5 I (cooling system + overflow bottle).

CAUTION

Use only suitable conventional coolant according to the specification stated on placard in the engine compartment! Never mix different types of coolants! Do not use waterless coolant!

NOTE

For complete conventional coolant specifications see OPERATORS MANUAL FOR ROTAX ENGINE TYPE 912 SERIES, Doc. No. OM-912 and Rotax Service Instructions SI-912-016, latest edition.



Pilot's Operating Handbook AS-POH-10-508

2.10 Environmental Limitations

Before starting preheat the engine and oil if outside temperature falls below +5 °C. Do not operate the aircraft below outside temperature -25 °C and above +50 °C. Flights in icing conditions are not allowed.



2.11 Kind of Operation

WT9 Dynamic LSA is equipped and approved for VFR day operations only. VFR night, IFR day and IFR night operation is prohibited.



2.12 Service Ceiling

Service ceiling is 17 800 ft.



Pilot's Operating Handbook

- AS-POH-10-508 -

2.13 Systems and Equipment Limitations

2.13.1 Flap Limitations

Normal takeoff	FLAPS 1		
Normal landing	FLAPS 2		
Emergency landing	FLAPS 3		

2.13.2 Emergency Parachute System

The emergency parachute system must be operative.

Maximum airspeed	290 CAS	157 KCAS
	303 IAS	164 KIAS
Minimum height above terrain	660 ft (200 m)	

WARNING

The emergency parachute system must be operative, otherwise the aircraft is not airworthy!

WARNING

Minimum recommended height for EPS activation

is 660 ft (200 m) AGL and maximum airspeed is 303 IAS / 164 KIAS! Activation of EPS in a height less than 660 ft (200 m) may alleviate

the consequences of an accident!
Pilot's Operating Handbook

AS-POH-10-508



2.13.3 Minimum Equipment for Flight Operation

a. Flight indications:

b.

c.

- a.1 Airspeed
- a.2 Altitude
- a.3 Magnetic compass
- Engine indications:
 - b.1 Engine RPM
 - b.2 Fuel pressure
 - b.3 Manifold pressure
 - b.4 Oil pressure
 - b.5 Oil temperature
 - b.6 Coolant temperature
 - b.7 Exhaust gas temperature
 - b.8 Airbox temperature
 - b.9 Fuel quantity
- ATC equipment (radio, XPDR)
- d. Stall Warning System (buzzer, warning lamp)
- e. Safety harness for each occupied seat
- f. Operative emergency parachute system
- g. Operative propeller regulator
- h. Operative towing release (for towing operation only)
- i. Operative rear-view mirrors (for towing operation only)

WARNING

A flight shall not be commenced if the minimum equipment for flight operation is not serviceable!

CAUTION

Failure of any indication not listed in the minimum equipment for flight operation should be inspected and repaired as soon as practical. Continuous operation of the aircraft with indications available only from backup instruments is not recommended!

2.14 Other Limitations

2.14.1 Smoking

Smoking on board is prohibited!

2.14.2 Dynon SkyView System Limitations

- a. Using of the Synthetic Vision information for primary terrain and obstacle avoidance is prohibited. The terrain map is intended only to enhance the situational awareness. It is the pilot's responsibility to provide terrain clearance at all time.
- b. Use of the MAP screen for pilotage navigation is prohibited. The navigation map is intended only to enhance the situational awareness.
- c. It is allowed to use autopilot in cruise only.



Pilot's Operating Handbook

- AS-POH-10-508 -

2.14.3 External Power Source and Battery

Max. power source output connected to the external power socket for engine starting is limited to 12 V / 90 A DC! Do not use external power to start the engine with a "dead" battery.

2.14.4 Towing Operation

•	Tow aircraft crew – 1 person:	
	 Maximum tow aircraft weight 	490 kg / 1080 lb
	 Maximum glider weight 	545 kg / 1202 lb
•	Tow aircraft crew – 2 persons, training only:	
	 Maximum tow aircraft weight 	580 kg / 1278 lb
	 Maximum glider weight 	380 kg / 838 lb
•	Tow aircraft FWD CG limit for towing operation	2.730 m (20.5 %MAC) at 500 kg with straight line taper to 2.783 m (25 %MAC) at 600 kg
•	Minimum towing speed V _{Tmin}	110 IAS / 59 KIAS
•	Maximum towing speed V _{Tmax}	180 IAS / 97 KIAS
•	Maximum weak link strength	400 daN
•	Tow rope length	40 – 60 m / 130 – 197 ft
•	Tow rope flexibility	Static rope
•	Rear-view mirrors	Operative
•	Multiple towing	Not approved

WARNING

All limitations for airframe and engine must be observed!

Pilot's Operating Handbook

- AS-POH-10-508-



2.15 Placards

NOTE If any placard is found missing or unreadable it should be replaced.

List of all placards is given in the Aircraft Maintenance Manual AS-AMM-10-000, Chapter 11.

2.15.1 Interior Placards

a. Placards on the left part of instrument panel.

L

AIR	SPE	EDS:
VNE	275	km/h
VA	180	km/h
Vfe	140	km/h
Vs0	61	km/h

b. Placards on the left side of cabin.

WARNING IFR flights and flights in icing conditions are prohibited!	WARNING Aerobatic manoeuvres and intentional spins are prohibited!	
APPROVED FOR: DAY - VFR	WARNING	
NO SMOKING	take-off weight: 600 kg / 1323 lbs	
This aircraft is not type certified and is accepted for EASA Permit to Fly. See the related EASA approved Flight Conditions for the operational limitations and airworthiness conditions.	Autopilot is allowed to be used in cruise only.	

WARNING			
Tow aircraft crew	1	2, Training only	
Max. tow aircraft weight	490 kg / 1080 lb	580 kg / 1278 lb	
Max. glider weight	545 kg / 1202 lb	380 kg / 838 lb	
Max. towing speed 180 IAS / 97 KIAS			
Min. towing speed 110 IAS / 59 KIAS			
Max. weak link strength 400 daN			



Pilot's Operating Handbook

- AS-POH-10-508 -

c. Placards on the LH / RH side of the baggage compartment bulkhead.



d. Placards on the LH / RH side in the baggage compartment on the flap's torsion tube cover.

DO NOT LOAD

2.15.2 Exterior Placards

a. Placards on the wing center section, wing flaps.



b. Placards near fuel tank caps LH / RH.

FUEL CAPACITY: MAX. 63.0 | / 16.64 U. S. gal

MOGAS RON 95 / AKI 91 AVGAS 100 LL

c. Placard on the upper engine cowling near door for oil level check.

MAX 3.0 I / 0.79 U. S. gal

AEROSHELL SPORT PLUS 4 API SL / SAE-10W-40

d. Placards on the outer part of the main landing gear legs.

e. Placard on the left part of the nose landing gear leg.





AERO

- AS-POH-10-508-----

f. Placards on the trailing edge of the control surfaces.



g. Placards near jack points on the fuselage / wing center section bottom part.



h. Placards near drain valves on the wing bottom part.



i. Placards are located on the both sides of fuselage in the baggage compartment area.



j. Placard is located on the emergency parachute system cover.





Pilot's Operating Handbook

- AS-POH-10-508 -

k. Placard is located at the tow release holder.





Pilot's Operating Handbook
AS-POH-10-508

3 EMERGENCY PROCEDURES

TABLE OF CONTENTS

3.1	GENERAL	3-3
3.2	AIRSPEED FOR EMERGENCY PROCEDURES	3-3
3.3	EMERGENCY ENGINE SHUTDOWN ON GROUND	3-3
3.4	ENGINE FAILURE	3-4
3.4.1	Engine Failure on Takeoff Roll	3-4
3.4.2	Engine Failure on Takeoff up to Height 500 ft (150 m) AGL	3-4
3.4.3	Engine Failure in Flight	3-5
3.4.4	Engine Partial Power Loss	3-5
3.5	AIR START	3-6
3.6	SMOKE AND FIRE	3-7
3.6.1	Engine Fire on Ground	3-7
3.6.2	Engine Fire on Takeoff	3-7
3.6.3	Engine Fire in Flight	3-8
3.6.4	Cabin Fire on Ground	3-8
3.6.5	Cabin Fire on Takeoff and in Flight	3-9
3.7	EMERGENCY DESCENT	3-9
3.7 3.8	EMERGENCY DESCENT	3-9 3-10
3.7 3.8 3.8.1	EMERGENCY DESCENT	3-9 3-10 3-10
 3.7 3.8 3.8.1 3.8.2 	EMERGENCY DESCENT	3-9 3-10 3-10 3-11
 3.7 3.8 3.8.1 3.8.2 3.8.2.1 	EMERGENCY DESCENT	3-9 3-10 3-11 3-11 3-11
 3.7 3.8 3.8.1 3.8.2 3.8.2.1 3.8.2.2 	EMERGENCY DESCENT	3-9 3-10 3-11 3-11 3-11 3-11
 3.7 3.8 3.8.1 3.8.2 3.8.2.1 3.8.2.2 3.8.3 	EMERGENCY DESCENT	3-9 3-10 3-11 3-11 3-11 3-11 3-12
 3.7 3.8 3.8.1 3.8.2 3.8.2.1 3.8.2.2 3.8.3 3.8.4 	EMERGENCY DESCENT	3-9 3-10 3-11 3-11 3-11 3-12 3-13
 3.7 3.8 3.8.1 3.8.2 3.8.2.1 3.8.2.2 3.8.3 3.8.4 3.9 	EMERGENCY DESCENT	3-9 3-10 3-11 3-11 3-11 3-12 3-13 3-14
 3.7 3.8 3.8.1 3.8.2 3.8.2.1 3.8.2.2 3.8.3 3.8.4 3.9 3.9.1 	EMERGENCY DESCENT	3-9 3-10 3-11 3-11 3-11 3-12 3-13 3-14
 3.7 3.8 3.8.1 3.8.2 3.8.2.1 3.8.2.2 3.8.3 3.8.4 3.9 3.9.1 3.9.2 	EMERGENCY DESCENT	3-9 3-10 3-11 3-11 3-11 3-12 3-13 3-13 3-14 3-14 3-14
 3.7 3.8 3.8.1 3.8.2 3.8.2.1 3.8.2.2 3.8.3 3.8.4 3.9 3.9.1 3.9.2 3.9.3 	EMERGENCY DESCENT	3-9 3-10 3-11 3-11 3-11 3-12 3-13 3-13 3-14 3-14 3-14 3-15
 3.7 3.8 3.8.1 3.8.2 3.8.2.1 3.8.2.2 3.8.3 3.8.4 3.9 3.9.1 3.9.2 3.9.3 3.9.4 	EMERGENCY DESCENT	3-9 3-10 3-11 3-11 3-11 3-12 3-12 3-13 3-14 3-14 3-14 3-15 3-15
 3.7 3.8 3.8.1 3.8.2 3.8.2.1 3.8.2.2 3.8.3 3.8.4 3.9 3.9.1 3.9.2 3.9.3 3.9.4 3.9.5 	EMERGENCY DESCENT	3-9 3-10 3-11 3-11 3-11 3-11 3-12 3-13 3-14 3-14 3-14 3-15 3-15 3-16



Pilot's Operating Handbook

- AS-POH-10-508 ----

3.9.7	Elevator Trim System Failure
3.9.8	Brake Failure during Taxi3-18
3.9.9	Loss of Primary Instruments3-19
3.10	INADVERTENT ICING ENCOUNTER
3.11	LOSS OF FLIGHT CONTROLS
3.11.1	Aileron Control Failure
3.11.2	Elevator Control Failure
3.11.3	Rudder Control Failure
3.12	SPINS
3.12.1	Inadvertent spin
3.13	OTHER EMERGENCIES
3.13.1	Vibrations
3.13.2	Fuel Selector Failure
3.13.3	Unsecured Canopy
3.13.3.1	During Takeoff Roll
3.13.3.2	After Lift Off or during Climbing
3.13.3.3	During Level Flight
3.13.4	Emergency Parachute System Activation3-26
3.13.5	Propeller SR 2000DN
3.13.5.1	Propeller Pitch Control Failure
3.13.5.2	MIN PITCH LED Failure
3.14	TOWING OPERATION
3.14.1	Abnormal Attitude of Towed Glider
3.14.2	Tow Rope Break
3.14.3	Towed Glider Cannot Release
3.14.4	Tow Rope Cannot be Dropped3-30



Pilot's Operating Handbook AS-POH-10-508

3.1 General

While this chapter covers most emergencies and critical situations that could occur in the WT9 Dynamic LSA, it is not a substitute for a thorough knowledge of the aircraft and aviation techniques. Proper study of this chapter while on the ground will help you prepare for critical situations.

Emergencies caused by aircraft or engine malfunction are extremely rare if proper pre-flight inspection and maintenance are performed. Nevertheless, an emergency may arise. The basic instructions described in this chapter should be considered and applied as necessary to correct the problem.

When face an emergency situation, keep in mind the following:

Control the aircraft – Maintain aircraft control and do not stop flying. Always proceed in this order: aviate, navigate and communicate.

Analyze the situation – While you maintain control of the aircraft, evaluate the situation. Check the engine parameters and determine the possible reasons.

Perform appropriate action – To correct the problem or allow safe recovery of the aircraft, follow the procedures in this chapter.

Land as soon as possible – Once you get out of the emergency situation, evaluate if it is safe to continue the flight. Land at the nearest suitable airport.

3.2 Airspeed for Emergency Procedures

Maneuvering speed	600 kg / 1323 lb	180 IAS	97 KIAS
Emergency landing speed	FLAPS 3	110 – 115 IAS	59 – 62 KIAS
Emergency descent speed	Smooth air max.	275 IAS	148 KIAS
Emergency descent speed	Rough air max.	218 IAS	118 KIAS

3.3 Emergency Engine Shutdown on Ground

a.	IGNITION	OFF both circuits
b.	FUEL PUMP	OFF if used
C.	FUEL selector	OFF
d.	Starter key	OFF
e.	MASTER SWITCH	OFF
f.	THROTTLE	IDLE



Pilot's Operating Handbook

AS-POH-10-508 —

3.4 Engine Failure

3.4.1 Engine Failure on Takeoff Roll

If the engine failure occurs during the takeoff roll, abort the takeoff and stop the aircraft.

a.	THROTTLE	IDLE
b.	Brake	As required
с.	FUEL PUMP	OFF
d.	IGNITION	OFF both circuits
e.	Starter key	OFF
f.	MASTER SWITCH	OFF
g.	FUEL selector	OFF
h.	All switches	OFF
i.	Brake	PARK

WARNING

While exiting the aircraft, make sure the exit path is clear of other aircraft, spinning propellers and other hazards!

3.4.2 Engine Failure on Takeoff up to Height 500 ft (150 m) AGL

If the engine failure occurs during takeoff at low height, pitch the nose down to maintain airspeed. Landing should be made straight ahead, turning only to avoid obstructions.

a.	Airspeed	120 – 130 IAS / 65 – 70 KIAS	
Suffic	Sufficient runway:		
b.	Land	According to Chapter 3.8.3, straight ahead on runway	
Insufficient runway:			
c.	Land	According to Chapter 3.8.3, only straight ahead	

WARNING In the case of insufficient runway, do not turn back to the runway at height below 500 ft (150 m) AGL. Perform straight ahead landing, turning only to avoid obstructions!

WARNING

In the case of rough terrain activate the EPS according to Chapter 3.13.4!



Pilot's Operating Handbook

- AS-POH-10-508-

3.4.3 Engine Failure in Flight

If the engine failure occurs during flight, pitch the nose down to establish the best glide speed. Select a suitable landing area and try to identify the cause of engine failure and correct it. If altitude or terrain does not permit a safe landing, activation of the EPS may be required (see Chapter 3.13.4).

a.	Airspeed	120 – 130 IAS / 65 – 70 KIAS
b.	Emergency landing area	Select a suitable landing area, if possible against the wind, and with no obstacle on the final approach
c.	Air start	If altitude permits, start the engine according to Chapter 3.5
Unsu	Unsuccessful engine start:	
d.	Land	According to Chapter 3.8.3



3.4.4 Engine Partial Power Loss

Partial power loss is indicated by fluctuating engine rpm, reduced or fluctuating manifold pressure, rough or irregular engine running. If the engine partial power loss permits a level flight, land at a suitable airfield as soon as possible.

There is a procedure to correct some conditions contributing to a partial power loss.

Insufficiency of fuel in the tank (detected through loss of fuel pressure):

a.	FUEL selector	Fullest tank
b.	FUEL PUMP	ON
c.	Engine parameters	Check

Irregular running of the engine may occur due to carburetor icing:

d.	CARBUR. PREHEATING	OPEN (pull to open) to restore normal power, smooth running
e.	Engine parameters	Check
f.	Smooth running not recovered	Perform an emergency landing without engine power according to Chapter 3.8.3

Inconsistent fuel supply due to obstructed coarse fuel filter (detected through loss of fuel pressure):

g.	FUEL selector	Switch to the other tank (than previously selected)
h.	FUEL PUMP	ON
i.	Engine parameters	Check

WARNING

If there is a strong smell of fuel in the cabin, shut down the engine and perform the emergency landing without engine power according to Chapter 3.8.3!



Pilot's Operating Handbook

- AS-POH-10-508 ----

3.5 Air Start

a.	Airspeed	120 – 130 IAS / 65 – 70 KIAS
b.	Altitude	Check
с.	Field selection	Select according to available altitude
d.	AVIONICS	OFF
e.	LAND lights	Check OFF
f.	NAV / ACL lights	OFF
g.	FUEL selector	Fullest tank
h.	СНОКЕ	CLOSED
i.	THROTTLE	Slightly OPEN (1 turn of throttle control)
j.	Propeller regulator	CONSTANT SPEED mode (MIN. PITCH LED must be illuminated)
k.	MASTER SWITCH	ON
I.	FUEL PUMP	ON
m.	IGNITION	ON both circuits
n.	Starter key	First OFF, hold START, after engine is started release to CHARGE
As so	on as engine runs:	
0.	Engine parameters	Check
p.	AVIONICS	ON
q.	FUEL PUMP	OFF
Unsu	ccessful start:	
r.	Land	According to Chapter 3.8.3

WARNING

If fuel fumes or a fuel leak is discovered in the cabin, do not perform an air start and turn off all unnecessary equipment!

WARNING

If the air start is unsuccessful up to 500 ft (150 m) AGL, perform an emergency landing according to Chapter 3.8.3!



Pilot's Operating Handbook

- AS-POH-10-508-

3.6 Smoke and Fire

Engine fire is indicated by the red **ENGINE FIRE** warning lamp coming on.

3.6.1 Engine Fire on Ground

a.	Brake	ΜΑΧ
b.	FUEL PUMP	OFF
C.	FUEL selector	OFF
d.	THROTTLE	МАХ
e.	IGNITION	OFF both circuits after the engine has stopped
f.	Starter key	OFF
g.	MASTER SWITCH	OFF
h.	Safety harness	Release
i.	Canopy	Open (if stuck, break glass with best available means)
j.	Aircraft	Exit immediately
k.	Fire	Try to extinguish with best available means

WARNING

While exiting the aircraft, make sure the exit path is clear of other aircraft, spinning propellers and other hazards!

3.6.2 Engine Fire on Takeoff

a.	FUEL PUMP	OFF
b.	FUEL selector	OFF
c.	THROTTLE	МАХ
d.	CABIN HEATING/VENTILATION	CLOSE
e.	Windows	CLOSE (if smoke is in the cabin OPEN)
f.	IGNITION	OFF both circuits after the fuel has been consumed
g.	Land	According to Chapter 3.8.3
h.	Safety harness	Release
i.	Canopy	OPEN (if stuck, break glass with best available means)
j.	Aircraft	Exit immediately
k.	Fire	Try to extinguish with best available means



Pilot's Operating Handbook

- AS-POH-10-508 -----

3.6.3 Engine Fire in Flight

a.	FUEL PUMP	Check OFF
b.	FUEL selector	OFF
C.	THROTTLE	МАХ
d.	CABIN HEATING/VENTILATION	CLOSE
e.	Windows	CLOSE (if smoke is in the cabin OPEN)
f.	IGNITION	OFF both circuits after the fuel has been consumed
g.	Fire	Try to extinguish with a sideslip
Ŀ	Airspeed	Smooth air – max. 275 IAS / 148 KIAS
n.		Rough air – max. 218 IAS / 118 KIAS
i.	Land	According to Chapter 3.8.3
j.	Safety harness	Release
k	Canopy	OPEN (if stuck, break glass with best available means)
١.	Aircraft	Exit immediately
m.	Fire	Try to extinguish with best available means

CAUTION After the fire has been extinguished, do not start the engine again!

3.6.4 Cabin Fire on Ground

a.	Brake	ΜΑΧ
b.	Fire source	Locate
c.	IGNITION	OFF both circuits
d.	Starter key	OFF
e.	MASTER SWITCH	OFF
f.	Safety harness	Release
g.	Canopy	OPEN (if stuck, break glass with best available means)
h.	Aircraft	Exit immediately
i.	Fire	Try to extinguish with best available means

WARNING While exiting the aircraft, make sure the exit path is clear of other aircraft, spinning propellers and other hazards!



Pilot's Operating Handbook

AS-POH-10-508

3.6.5 Cabin Fire on Takeoff and in Flight

Opening of cabin heating and venting may feed the fire. It may be necessary to ventilate the cabin to avoid of crew incapacitation from smoke inhalation.

a.	MASTER SWITCH	OFF
b.	CABIN HEATING / VENTILATION	CLOSE to not feed the fire
c.	Fire source	Locate
d.	Fire	Try to extinguish with best available means
e.	CABIN VENTILATION and Windows	FULLY OPEN to ventilate the cabin
f.	Land	According to Chapter 3.8.1
g.	Safety harness	Release
h.	Canopy	OPEN (if stuck, break glass with best available means)
i.	Aircraft	Exit immediately
j.	Fire	Try to extinguish with best available means

WARNING

Opened heat/ventilation and windows may feed the fire. To avoid of crew incapacitation from smoke inhalation, it may be necessary to ventilate the cabin!

NOTE With **MASTER SWITCH** OFF, the engine will continue to run.

The EFIS system will operate with its own backup battery.

3.7 Emergency Descent

a.	THROTTLE	IDLE
b.	Propeller regulator	CONSTANT SPEED mode, rpm as required
C.	Airspeed	Smooth air – max. 275 IAS / 148 KIAS
		Rough air – max. 218 IAS / 118 KIAS
d.	Engine speed	Do not overrun

CAUTION

Do not exceed V_{RA} 218 IAS / 118 KIAS when descending

in rough air!



Pilot's Operating Handbook

- AS-POH-10-508 -

3.8 Landing Emergencies

3.8.1 Precautionary Landing with Engine Power

In the event of a major failure, disorientation, shortage of fuel, dangerous deterioration of meteorological conditions (visibility, thunderstorm) or the pilot experiencing nausea which could lead to incapacitation, a precautionary landing should be conducted.

a.	Landing area	Select, determine wind direction
b.	Radio	Transmit MAYDAY (121.5 MHz) giving position and intentions
c.	Transponder	Set 7700
d.	ELT REMOTE CONTROL	ACTIVATE if off airfield
e.	Field check	Check the preferred area for landing carefully to inspect the terrain properties (obstructions, surface conditions)
f.	Circle pattern	At a safe altitude as permitted by cloud base, extend "down wind" position
g.	FUEL PUMP	ON
h.	Wing flaps	FLAPS 3, extend gradually, check locked
i.	Airspeed	110 – 115 IAS / 59 – 62 KIAS
j.	THROTTLE	As required
k.	Propeller regulator	CONSTANT SPEED mode (MIN. PITCH LED must be illuminated)
I.	Visual contact	Don't lose sight of the selected field in the case of low visibility
m.	Touchdown	Immediately after passing the edge of the selected landing field; Avoid any obstacles in the final approach path
n.	Brake	Apply heavily until stopped (depending on the surface)
0.	ELT REMOTE CONTROL	If OK then OFF



Pilot's Operating Handbook

- AS-POH-10-508-

3.8.2 Landing with Flat Tire

If a flat tire occurs during takeoff and you cannot abort, land as soon as conditions permit.

3.8.2.	1 Main Wheel Tire	
a.	Safety harness	Fasten
b.	Wing flaps	FLAPS 3, extend gradually, check locked
c.	Airspeed	110 – 115 IAS / 59 – 62 KIAS
d.	THROTTLE	As required
e.	Touch-down	Land on the side of the runway corresponding to the good tire
f.	Flat tire	Relieve using aileron control
g.	Directional control	Maintain with rudder control
h.	Brake	Do not apply; Apply carefully only if insufficient runway remaining
i.	Taxiing	Do not taxi.
j.	Engine	Perform normal engine shutdown
k.	Crew	Seek assistance

CAUTION During landing keep the damaged wheel off the ground as long as possible using the aileron control!

3.8.2.2 Nose Wheel Tire

a.	Safety harness	Fasten
b.	Wing flaps	FLAPS 3, extend gradually, check locked
c.	Airspeed	110 – 115 IAS / 59 – 62 KIAS
d.	THROTTLE	As required
e.	Nose wheel	Hold off the ground as long as possible using elevator control
f.	Brake	Do not apply; Apply carefully only if insufficient runway remaining
g.	Taxiing	Do not taxi
h.	Engine	Perform normal engine shutdown
i.	Crew	Seek assistance

CAUTION During landing keep the damaged wheel off the ground as long as possible using the elevator control!



Pilot's Operating Handbook

- AS-POH-10-508 -

3.8.3 Emergency Landing without Engine Power

After establishing a glide or landing speed, perform as many of the checklist items as time permits.

a.	Airspeed	120 – 130 IAS / 65 – 70 KIAS
b.	Emergency landing area	Select a suitable landing area, if possible against the wind, and with no obstacles on the final approach
c.	Radio	Transmit MAYDAY (121.5 MHz) giving position and intentions
d.	Transponder	Set 7700
e.	ELT REMOTE CONTROL	ACTIVATE if off airfield
f.	Flaps	FLAPS 3, extend gradually, check locked
g.	Airspeed	110 – 115 IAS / 59 – 62 KIAS
h	FUEL PUMP	OFF
i.	FUEL selector	OFF
j.	IGNITION	OFF both circuits
k.	Starter key	OFF
١.	MASTER SWITCH	OFF shortly before landing
m.	Safety harness	Fasten
After landing:		
n.	ELT REMOTE CONTROL	If OK then OFF
о.	Crew	Seek assistance

WARNING

Along with the emergency landing, activation of EPS according to Chapter 3.13.4 should always be considered, especially if no suitable area for landing can be selected!

NOTE

With **MASTER SWITCH** OFF the EFIS system will operate with its own backup battery.



Pilot's Operating Handbook

- AS-POH-10-508-

3.8.4 Ditching

After establishing a descent, perform as many of the checklist items as time permits.

a.	Emergency call	Transmit MAYDAY (121.5 MHz) giving position and intentions (if time and altitude permit)
b.	Transponder	Set 7700
c.	ELT REMOTE CONTROL	ACTIVATE
d.	RESCUE SYSTEM actuator	ACTIVATE according to Chapter 3.13.4
e.	Aircraft	Exit immediately
f.	Life vests and rafts	If available, inflate when clear of aircraft
g.	Crew	Seek assistance

WARNING

Do not try to ditch due to the risk of capsizing the aircraft!



Pilot's Operating Handbook

- AS-POH-10-508 -

3.9 System Emergencies

3.9.1 Low Oil Pressure

Low oil pressure is indicated by the red **OIL PRESS** warning lamp coming on.

a.	Oil temperature	Check
If oil	temperature is rising:	
b.	THROTTLE	Reduce power to minimum required for flight
c.	Land	According to Chapter 3.8.1
If oil temperature is normal:		
d.	Oil temperature	Monitor
e.	Oil pressure	Monitor
f.	Land	As soon as possible

CAUTION

Be prepared for engine failure and emergency landing without engine power according to Chapter 3.8.3!

3.9.2 High Oil Pressure

		Y	
a.	THROTTLE	Reduce power to minimum required for flight	
b.	Oil pressure	Monitor	
с.	Oil temperature	Monitor	
If oil	If oil temperature / pressure is rising:		
d.	Land	According to Chapter 3.8.1	
If oil pressure remains unchanged:			
e.	Land	As soon as possible	

CAUTION

Be prepared for engine failure and emergency landing without engine power according to Chapter 3.8.3!



Pilot's Operating Handbook

- AS-POH-10-508----

3.9.3 Low Fuel Pressure

a.	FUEL selector	Fullest tank	
b.	FUEL PUMP	ON	
If fuel	If fuel pressure is decreasing:		
c.	Land	According to Chapter 3.8.1	
If fuel pressure is normal:			
d.	Fuel pressure	Monitor	
e.	Land	As soon as possible	

CAUTION
Be prepared for engine failure and emergency landing without
engine power according to Chapter 3.8.3!

3.9.4 High Coolant Temperature

a.	THROTTLE	Reduce power to minimum required for flight
If coo	If coolant temperature is rising:	
b.	Land	According to Chapter 3.8.1
If coolant temperature is normal:		
c.	Coolant temperature	Monitor
d.	Land	As soon as possible

CAUTION

Be prepared for engine failure and emergency landing without engine power according to Chapter 3.8.3!



Pilot's Operating Handbook

· AS-POH-10-508 ----

3.9.5 Alternator Failure

Loss of alternator output is detected through a zero or minus values reading on the ammeter and warning lamp **CHARGE** coming on. Electrical power malfunctions are accompanied by an excessive rate of charge or a discharge rate indicated by ammeter.

a.	THROTTLE	Increase above 3000 rpm
b.	NAV / ACL lights	OFF
c.	LAND lights	OFF
d.	FUEL PUMP	OFF
e.	Propeller regulator	Switch to MANUAL mode, adjust only if required

	NOTE
he operati	ng mode switch has a safety lock to avoid accidental
operation	; it must be first pulled outwards and then moved
	to the desired position.

f.	MASTER SWITCH	OFF - ON
		dina in matrid.

If no increase in the ammeter reading is noted:

g.	All unnecessary electrical equipment	OFF
h.	Voltmeter	Monitor battery voltage
i.	Land	As soon as possible

CAUTION

All electrical loads are being supplied by the battery! Turn off all unnecessary equipment! Disconnect all external equipment from the power outlets!

Operating time of battery in good condition is up to 30 minutes!

CAUTION

Be aware, if the **AVIONICS** switch is turned OFF, the radio communication is lost!

CAUTION

When the propeller regulator is switched to **MANUAL** mode, automatic propeller regulation is disabled! Pay attention to not overspeed the engine!

ΝΟΤΕ

Operating time of battery depends on its condition. Dynon SkyView system has its own backup battery.



Pilot's Operating Handbook

- AS-POH-10-508-

3.9.6 Overvoltage

If the trouble was caused by a momentary overvoltage condition (16.5 V and up), the following procedure should return the voltmeter to a normal reading.

c		
e.	FUEL PUMP	OFF
d.	LAND lights	OFF
c.	NAV / ACL lights	OFF
b.	AVIONICS, AP	OFF
a.	THROTTLE	Reduce power to minimum for flight

f. Propeller regulator Switch to **MANUAL** mode, adjust as required

ſ	ΝΟΤΕ
	The operating mode switch has a safety lock to avoid accidental operation; it must be first pulled outwards and then moved to the desired position.
MASTER SWITCH	OFF - ON

If the overvoltage condition (16.5 V and up) is noted:

h.	All unnecessary electrical equipment	OFF
i.	Voltmeter	Monitor battery voltage
j.	Land	As soon as possible

CAUTION

All electrical loads are being supplied by the battery! Turn off all unnecessary equipment! Disconnect all external equipment from the power outlets!

Operating time of battery in good condition is up to 30 minutes!

CAUTION

Be aware, if the **AVIONICS** switch is turned OFF, the radio communication is lost!

CAUTION

When the propeller regulator is switched to **MANUAL** mode, automatic propeller regulation is disabled! Pay attention to not overspeed the engine!

NOTE

With **MASTER SWITCH** OFF, the engine will continue to run.

The EFIS will operate with its own backup battery.

g.



Pilot's Operating Handbook

- AS-POH-10-508 ----

3.9.7 Elevator Trim System Failure

If the failure of trim system occurs, the control system can be overridden by use of the control stick. The forces on the control stick will increase with the deflection.

a.	Aircraft control	Maintain manually
b.	THROTTLE	As required
C.	Control stick	Manually hold the pressure

3.9.8 Brake Failure during Taxi

If the brakes fail, the aircraft is fully steerable by nose wheel.

a.	THROTTLE	IDLE
b.	Directional control	Direct the aircraft to a safe area
c.	Engine	Perform an emergency engine shutdown on ground according to Chapter 3.3



Pilot's Operating Handbook AS-POH-10-508

3.9.9 Loss of Primary Instruments

The primary flight instruments are analogue airspeed indicator, altimeter and magnetic compass.

The primary engine instrument is RH Dynon SkyView SV-D1000.

If a failure of primary source of flight or engine information occurs, perform the following procedure:

Loss of primary flight information (analogue instruments):

a.	LH D1000 or RH D1000	Use for flight information

Loss of primary engine information:

Dynon SkyView SV-D1000 annunciates important notifications on screen, in a dedicated message window, and via audio output.

Dynon SkyView SV-D1000 notifies users with a large RED X and a descriptive label if a major failure occurs that prevents the display from displaying information. A RED X may overlay an entire page if a data source such as an EMS module fails or a RED X may overlay a single widget if a single engine sensor fails or is not connected.

Red X on RH D1000 MFD page:

a.	RH D1000 circuit breaker	Check pressed in - if open, reset (close) circuit breaker; if circuit breaker opens again, do not reset again
b.	LH D1000	Use for engine information

Red X on both RH and LH D1000 MFD page:

a.	Backup RPM indicator	Use for monitoring of the engine speed
b.	Backup fuel pressure indicator	Use for monitoring of the fuel pressure
c.	OIL PRESS. warning lamp	Use for monitoring of the oil pressure; illumination of warning lamp signalizes that oil pressure is low
d.	LH FUEL RES. / RH FUEL RES. warning lamp	Use for monitoring of the fuel low level; a red warning lamp will be illuminated when 16 liters of fuel remain in the fuel tank
e.	Land	As soon as possible

RH D1000 Frozen Screen or Black Out:

a.	RH D1000	Restart RH D1000; if impossible, or it refreezes, or black out occurs, do not restart again
b.	LH D1000	Use for engine information



Pilot's Operating Handbook

- AS-POH-10-508 ----

Both RH and LH D1000 Frozen Screen or Black Out:

a.	RH D1000 circuit breaker	Check pressed in – if open, reset (close) circuit breaker; if circuit breaker opens again, do not reset again
b.	LH D1000 circuit breaker	Check pressed in – if open, reset (close) circuit breaker; if circuit breaker opens again, do not reset again
с.	RH D1000	Restart
d.	LH D1000	Restart
If Both RH and LH D1000 Frozen Screen or Black Out persists:		
e.	Backup RPM indicator	Use for monitoring of the engine speed
f.	Backup fuel pressure indicator	Use for monitoring of the fuel pressure
g.	OIL PRESS. warning lamp	Use for monitoring of the oil pressure; illumination of warning lamp signalizes that oil pressure is low
h.	LH FUEL RES. / RH FUEL RES. warning lamp	Use for monitoring of the fuel low level; a red warning lamp will be illuminated when 16 liters of fuel remain in the fuel tank
i.	Land	As soon as possible

WARNING

If both RH and LH D1000 display fail, land at the nearest airfield!

CAUTION

It is not recommended to fly intentionally with only one serviceable Dynon SkyView SV-D1000 display!

NOTE

For more details refer to Dynon Avionics SkyView System Pilot's Guide, Document No. 101321-016 (revision Q or later).



Pilot's Operating Handbook

- AS-POH-10-508-

3.10 Inadvertent Icing Encounter

a.	CARBUR. PREHEATING	OPEN (pull to open)
b.	lcing area	Leave - turn back or change altitude to obtain an outside air temperature that is less conducive to icing
с.	CABIN HEATING	OPEN (pull to open)
d.	THROTTLE	Increase engine speed to minimize ice build-up on the propeller blades; if excessive vibration is noted, immediately reduce engine speed to idle, and then rapidly apply full throttle
e.	Manifold pressure indicator	Check - a loss of manifold pressure could be caused by ice blocking the air intake filter
f.	THROTTLE	As required to hold manifold pressure
g.	Control surfaces	Continue move to maintain their movability
h.	Landing planning	Plan a landing at the nearest airport; with an extremely rapid ice build-up, select a suitable off airfield landing site
i.	Wing flaps	Leave FLAPS 0 ; with a severe ice build-up on the horizontal tail, the change in wing wake airflow direction caused by wing flap extension could result in a loss of elevator effectiveness
j.	Windshield	Open left window and, if practical, scrape ice from a portion of the windshield for visibility in the landing approach
k.	Approach	Perform approach using a forward slip, if necessary, for improved visibility
Ι.	Airspeed	130 to 140 IAS / 70 to 76 KIAS depending upon the amount of ice accumulation.
m.	Landing	Perform in level attitude

WARNING

Flights in icing conditions are prohibited!

If icing is formed on the wing leading edge, expect false indication of the airspeed, altitude, vertical speed and stall warning system!

CAUTION

With an ice accumulation of 6.4 mm / 0.25 inch or more on the wing leading edges, expect significantly higher power requirements, higher approach and stall airspeeds, increased vibration, worse climb characteristics and a longer landing roll. Missed approaches should be avoided whenever possible!

NOTE

When using the carburetor preheating, engine power will decrease due to hot air suction from the heat exchanger.



Pilot's Operating Handbook

- AS-POH-10-508 ----

3.11 Loss of Flight Controls

3.11.1 Aileron Control Failure

a.	Rudder control	As required
b.	THROTTLE	As required, carefully

CAUTION

Avoid steep turns – more than 15° of bank!

3.11.2 Elevator Control Failure

a.	THROTTLE	As required, carefully
b.	TRIM	As required
If you cannot control the aircraft in the longitudinal direction by means of TRIM :		
C.	Wing flaps	Carefully use for attitude change (use incremental positions of flaps if required by holding the flaps lever in desired position)

If you cannot control the aircraft in the longitudinal direction:

d.	RESCUE SYSTEM actuator	ACTIVATE according to Chapter 3.13.4
----	---------------------------	--------------------------------------

WARNING

Extension of flaps causes the aircraft to become nose-heavy! Do not retract the flaps to the previous position at low airspeed close to the stall!

CAUTION

Avoid steep turns – more than 15° of bank!

Avoid abrupt maneuvers!

Longer runway will be necessary for landing!

3.11.3 Rudder Control Failure

a.	Aileron control	As required, carefully
b.	THROTTLE	As required, carefully

CAUTION Avoid steep turns – more than 15° of bank!



Pilot's Operating Handbook

- AS-POH-10-508-

3.12 Spins

3.12.1 Inadvertent spin

I

The WT9 Dynamic LSA is not approved for spins. Although the stall warning system makes accidental entry into a spin extremely unlikely, it is possible. The best means for preventing an inadvertent stall and spin entry is good airmanship, monitoring of the airspeed and avoiding abrupt maneuvers at low speed and altitude.

WARNING Intentional spins are prohibited!
WARNING
Do not waste time and altitude trying to recover from spin before activating of EPS!

For recovery from an inadvertent spin the following procedure must be used:

2	RESCUE SYSTEM	ACTIVATE according to Chapter 2 12 4
d.	actuator	ACTIVATE according to Chapter 5.15.4



Pilot's Operating Handbook

AS-POH-10-508 -

3.13 Other Emergencies

3.13.1 Vibrations

The power plant can be the source of the vibrations.

a.	Engine speed	Reduce to minimize the vibrations
b.	Land	According to Chapter 3.8.1

CAUTION

Be prepared for engine failure and emergency landing without engine power according to Chapter 3.8.3!

3.13.2 Fuel Selector Failure

Due to **FUEL** selector failure, it may be impossible to switch to the desired tank or shut off the fuel supply.

а.	LH FUEL RES. / RH FUEL RES. warning lamp	Use for monitoring the fuel low level; red warning lamp will be illuminated when 16 liters of fuel remain in the fuel tank
b.	Land	According to Chapter 3.8.1

CAUTION Be prepared for engine failure and emergency landing without engine power according to Chapter 3.8.3!

3.13.3 Unsecured Canopy

If the "Before takeoff" checklist is not performed properly (see Chapter 4.9, step 9), there is a danger of partial canopy latching and insufficient locking. For detailed information on canopy operation refer to Chapter 7.12. Due to airflow and the function of gas struts the canopy can open spontaneously during straight line flight or sideslip. Partially latched and insufficiently locked canopy will be indicated by increased noise due to the airflow passing through the gap between fuselage and canopy. The canopy can be closed safely during straight line flight without sideslip as follows, according to the appropriate stage of flight:

3.13.3.1 During Takeoff Roll

a.	Takeoff roll	Abort
b.	Сапору	Latch and lock by normal procedure after stopping. (Pull down the canopy handle and check the red ring indicates latched and locked position) (see Chapter 7.12).



Pilot's Operating Handbook

- AS-POH-10-508-

а.	Takeoff	Abort (if sufficient RWY is remaining), otherwise continue
b.	Climb	Climb to safety altitude
c.	Flight	Keep straight level flight without sideslip and carry out procedure according to Chapter 3.13.3.3

3.13.3.2 After Lift Off or during Climbing

3.13.3.3 During Level Flight

a.	Sliding windows	OPEN
b.	Airspeed	120 – 130 IAS / 65 – 70 KIAS
c.	Control stick	Hold with one hand
d.	Canopy handle	Pull down for canopy latching and locking (see Chapter 7.12)
e.	Canopy latching and locking	Check by canopy frame and red ring position
f.	Sliding windows	CLOSE

WARNING

During sideslip (incorrect turn – slipping turn, skidding turn, and sideslip during approach) with the canopy partially latched and locked, due to asymmetrical flow over the fuselage, the canopy will be carved through the gap and subsequently will be fully opened with contribution of gas struts. The canopy will become a braking shield, which will cause abnormal aircraft descent due to increased drag!



Pilot's Operating Handbook

- AS-POH-10-508 -

3.13.4 Emergency Parachute System Activation

The aircraft is equipped with Emergency Parachute System. (EPS) should be activated in the event of a life-threatening emergency where EPS deployment is safer than continued flight and landing.

Occupants must be in the emergency landing body braced position before touchdown. After touchdown, maintain the emergency landing body position until the aircraft is completely stopped.

The recommended emergency landing body position is assumed with the both hands placed on the lap, one wrist clasped with the opposite hand and with the upper torso erect against the backrest.

Follow this procedure when deciding to deploy EPS:

a.	Impact area	Determine (flat terrain, no trees or obstacles – if possible)
b.	Airspeed	Minimum, if possible
c.	IGNITION	OFF both circuits (if time and altitude permit)
d.	RESCUE SYSTEM actuator protector	Lift (see Chapter 7.22, Fig. 7-35)
e.	RESCUE SYSTEM actuator	PULL STRONGLY (see Chapter 7.22, Fig. 7-35) (force up to 12 kg / 26.5 lb or greater may be required)

After deployment:

f.	FUEL PUMP	OFF
g.	FUEL selector	OFF
h.	Starter key	OFF
i.	MASTER SWITCH	OFF
j.	Safety harness	Fasten
k.	Emergency landing body position	Assume

WARNING

EPS deployment results in loss of the airframe. Depending on high deployment speed, low altitude, rough terrain or high wind conditions may result in severe injury or death of the occupants!

WARNING

If the aircraft enters an unusual attitude from which the recovery is not expected before ground impact, immediate deployment of EPS is required!

Pilot's Operating Handbook

AS-POH-10-508



WARNING

The extreme emergency in which the EPS must be activated requires that it be activated in a timely manner. Do not wait until the aircraft has exceeded the airspeed and load factor operating envelope, is at an altitude which does not allow the parachute to fully deploy prior to ground impact, or is in an extreme attitude!

WARNING

If the aircraft is controllable and structurally capable of flying to a safe landing site, the EPS should not be activated!

WARNING

Minimum height for EPS activation is 660 ft (200 m) AGL and maximum airspeed is 303 IAS / 164 KIAS!

CAUTION

Ground impact is expected to be equivalent to touchdown from a height of approximately 8.2-9.8 ft (2.5-3.0 m). Occupants must assume emergency landing body position before touchdown!

CAUTION

The EPS is not intended to be a substitute for good pilot judgment, skills and training, proper pre-flight planning, proper aircraft maintenance and pre-flight inspections, and safe aircraft operations!

NOTE

The recommended emergency landing body position is assumed with both hands placed on the lap, one wrist clasped with the opposite hand and with the upper torso erect against the backrest.



Pilot's Operating Handbook

- AS-POH-10-508 ----

3.13.5 Propeller SR 2000DN

3.13.5.1 Propeller Pitch Control Failure

а	Propeller regulator
a.	FIOPENEI TEguiator

Switch to MANUAL mode

NOTE

The operating mode switch has a safety lock to avoid accidental operation; it must be first pulled outwards and then moved to the desired position.

b.	THROTTLE	As required			
с.	Propeller regulator	Adjust rpm manually as required			
If the rpm regulation does not work in MANUAL mode:					
d.	Engine parameters	Check			
e.	THROTTLE	As required			

CAUTION

When the propeller regulator is switched to **MANUAL** mode, automatic propeller regulation is disabled! Pay attention to not overspeed the engine!

CAUTION

If the propeller regulation does not work in **MANUAL** mode, the propeller blade pitch remains at the last set position! If the propeller blades are set to coarse pitch, expect worse climb performance and avoid go-around when landing, if possible!

3.13.5.2 MIN PITCH LED Failure

If the green LED does not illuminate during the final approach check:

a.	Approach airspeed	120 - 130 IAS / 65 - 70 KIAS according to the weight
b.	THROTTLE	Increase; if the max. allowable rpm is easy to reach, the LED is defective
с.	Propeller regulator	Inspect failure after landing



Pilot's Operating Handbook

- AS-POH-10-508-

3.14 Towing Operation

It is pilot's consideration when to release the glider. In the case of emergencies during glider towing perform following steps:

a.	Glider pilot	Advise the situation and intention – if situation permits
b.	Towed glider	Tow to a safe area – if situation permits
с.	Glider pilot	Give sign to release immediately (via radio or by other appropriate means) – if situation permits
d.	TOW RELEASE	PULL repeatedly, if the towed glider has not released
e.	Rear-view mirrors	Monitor the glider position to avoid collision
f.	Emergency procedure	Proceed

WARNING			
Drop the tow rope above suitable area before emergency or precautionary landing to avoid of tow rope tangle with objects on the ground!			
ΝΟΤΕ			
If time and situation permit, advise the glider pilot of the situation and intended actions.			

3.14.1 Abnormal Attitude of Towed Glider

If the glider is apparently out of the normal attitude behind the tow aircraft and sufficient maneuverability can no longer be maintained, release the tow rope immediately.

If the glider is getting out of the normal attitude, advise the glider pilot to return to the standard position (via radio or by other appropriate means), if this is not possible or unsuccessful, release the tow rope immediately.



3.14.2 Tow Rope Break

If the tow rope breaks, verify operation of control systems and land normally.



Pilot's Operating Handbook

- AS-POH-10-508 -

3.14.3 Towed Glider Cannot Release

In case of repeated unsuccessful attempt to release the tow rope from the glider, it is necessary to release the tow rope from the tow aircraft.

Advise the glider pilot about the intended action, tow the glider into a safe area (above the airport – if possible) and release the tow rope.

3.14.4 Tow Rope Cannot be Dropped

Repeat the attempts to drop the tow rope. If it is impossible, repeat the circuit with the tow rope, approach with tow rope and carry out a landing with tow rope.


Pilot's Operating Handbook AS-POH-10-508

4 NORMAL PROCEDURES

TABLE OF CONTENTS

4.1	GENERAL
4.2	AIRSPEEDS FOR NORMAL OPERATION4-3
4.3	PRE-FLIGHT INSPECTION4-4
4.4	BEFORE ENGINE STARTING4-10
4.5	USE OF EXTERNAL POWER4-10
4.6	ENGINE STARTING4-11
4.7	BEFORE TAXIING4-13
4.8	TAXIING4-13
4.9	BEFORE TAKEOFF
4.9.1	Ignition and Engine Ground Tests4-14
4.9.2	Before Line Up4-15
4.10	TAKEOFF4-16
4.10.1	Normal and Short Field Takeoff4-16
4.10.2	Soft Field Takeoff4-17
4.11	CLIMB4-18
4.11 4.12	CLIMB4-18 CRUISE
4.11 4.12 4.13	CLIMB
4.11 4.12 4.13 4.14	CLIMB
4.11 4.12 4.13 4.14 4.15	CLIMB
 4.11 4.12 4.13 4.14 4.15 4.15.1 	CLIMB
 4.11 4.12 4.13 4.14 4.15 4.15.1 4.15.2 	CLIMB
 4.11 4.12 4.13 4.14 4.15 4.15.1 4.15.2 4.15.3 	CLIMB.4-18CRUISE.4-18DESCENT.4-19APPROACH4-19LANDING4-20Normal Landing4-20Short Field Landing.4-21Soft Field Landing4-21
 4.11 4.12 4.13 4.14 4.15 4.15.1 4.15.2 4.15.3 4.15.4 	CLIMB.4-18CRUISE.4-18DESCENT.4-19APPROACH4-19LANDING4-20Normal Landing4-20Short Field Landing4-21Soft Field Landing4-21Balked Landing4-22
 4.11 4.12 4.13 4.14 4.15.1 4.15.2 4.15.3 4.15.4 4.16 	CLIMB.4-18CRUISE.4-18DESCENT.4-19APPROACH4-19LANDING4-20Normal Landing4-20Short Field Landing4-21Soft Field Landing4-21Balked Landing4-22AFTER LANDING4-22
 4.11 4.12 4.13 4.14 4.15.1 4.15.2 4.15.3 4.15.4 4.16 4.17 	CLIMB.4-18CRUISE.4-18DESCENT.4-19APPROACH4-19LANDING4-20Normal Landing4-20Short Field Landing4-21Soft Field Landing4-21Balked Landing4-22AFTER LANDING4-23
 4.11 4.12 4.13 4.14 4.15 4.15.1 4.15.2 4.15.3 4.15.4 4.16 4.17 4.18 	CLIMB4-18CRUISE4-18DESCENT4-19APPROACH4-19LANDING4-20Normal Landing4-20Short Field Landing4-21Soft Field Landing4-21Balked Landing4-22AFTER LANDING4-22SHUTDOWN4-23ENVIRONMENTAL CONSIDERATION4-23
 4.11 4.12 4.13 4.14 4.15 4.15.1 4.15.2 4.15.3 4.15.4 4.16 4.17 4.18 4.18.1 	CLIMB4-18CRUISE4-18DESCENT4-19APPROACH4-19LANDING4-20Normal Landing4-20Short Field Landing4-20Short Field Landing4-21Soft Field Landing4-21Balked Landing4-22AFTER LANDING4-22SHUTDOWN4-23ENVIRONMENTAL CONSIDERATION4-23Cold Weather Operation4-23



Pilot's Operating Handbook

- AS-POH-10-508 ----

4.19	OTHER NORMAL PROCEDURES	4-24
4.19.1	Stall	4-24
4.19.2	Sideslip	4-25
4.19.3	Crosswind Takeoff	4-26
4.19.4	Crosswind Landing	4-26
4.20	NOISE CHARACTERISTICS	4-27
4.21	TOWING OPERATION	4-28
4.21.1	Attaching Tow Rope	4-28
4.21.2	Attaching the Glider	4-28
4.21.3	Takeoff with Glider	4-28
4.21.4	Climb with Glider	4-29
4.21.5	Cruise with Glider	4-29
4.21.6	Glider Release	4-30
4.21.7	Approach with Tow Rope	4-30
4.21.8	Tow Rope Drop	4-30
4.21.9	Landing with Tow Rope	4-30



Pilot's Operating Handbook

AS-POH-10-508 —

4.1 General

This chapter provides checklists and recommended procedures for normal operation of the aircraft. Normal procedures associated with equipment can be found in the Chapter 9.

The control surfaces do not return to neutral or trimmed position automatically when the control is released.

CAUTION

The ailerons do not return to neutral automatically when the roll control is released!

CAUTION

The elevator does not return to the precise trimmed position when the pitch control is released!

The aircraft may not maintain positive longitudinal stability, when the pitch control is released!

CAUTION

The rudder does not return to neutral automatically when the yaw control is released!

NOTE

The pitch trim range may be insufficient for the speeds less than 1.5 $V_{\rm S0}$ and above $V_{\rm C}.$

4.2 Airspeeds for Normal Operation

Unless stated otherwise, the following speeds are based on maximum takeoff weight 600 kg / 1323 lb.

Takeoff rotation	FLAPS 1	65 – 70 IAS	35 – 38 KIAS
	Normal	104 – 127 IAS	57 – 69 KIAS
Climb	Best rate of climb speed (at sea level)	127 IAS	69 KIAS
	Best angle of climb speed (at sea level)	104 IAS	57 KIAS
Landing approach	FLAPS 1, FLAPS 2	120 – 130 IAS	65 – 70 KIAS
Balked landing	Full power (FLAPS 1)	110 – 130 IAS	60 – 70 KIAS
Rough air penetration	Maximum	218 IAS	118 KIAS
Demonstrated encounted value ity	Takeoff	8.3 m/s	16.1 knots
Demonstrated crosswind velocity	Landing	7.5 m/s	14.6 knots
	Minimum	110 IAS	59 KIAS
Towing speed v _T	Maximum	180 IAS	97 KIAS



Pilot's Operating Handbook

AS-POH-10-508 -

4.3 Pre-Flight Inspection

It is most important to perform a pre-flight inspection carefully to prevent possible troubles. The pre-flight inspection is essential for flight safety. Pre-flight inspection procedure is shown on Fig. 4-1. Review your flight plan and calculate the weight and balance before each flight.

WARNING

If any problems are found they must be rectified before flying!

WARNING

Remove the pitot probe cover before flight!

CAUTION

Pay special attention to the parts, which are affected by vibrations and high temperatures!

NOTE

The word "condition" in the pre-flight inspection means a visual inspection of surface for damage, deformations, scratching, chafing, evidence of delamination, corrosion or other damages, which may lead to flight safety degradation.



Fig. 4-1 Pre-flight inspection procedure



Pilot's Operating Handbook

- AS-POH-10-508-

1	CABIN	
a.	Aircraft documents	Check, on board
b.	Baggage	Restrained
c.	Flight controls	Freedom and proper direction of movement
d.	IGNITION	OFF both circuits
e.	MASTER SWITCH	OFF
f.	THROTTLE	Freedom of movement, set IDLE
g.	CARBUR. PREHEATING	Freedom of movement, set CLOSED
h.	CABIN VENTILATION	Freedom of movement
i.	CABIN HEATING	Freedom of movement
j.	FUEL selector	Freedom of movement
k.	СНОКЕ	Freedom of movement, set CLOSED
١.	RESCUE SYSTEM actuator	Check the condition of actuator attachment, arming and locking, service dates for expiration
m.	Circuit breakers	Pressed in
n.	Brake	Freedom of movement, function, set PARK
0.	Wing flaps	Freedom of movement, set FLAPS 3 , check locked
p.	MASTER SWITCH	ON
q.	TEST button	Press, check warning and check lamps illumination
r.	Propeller regulator	Switch to MANUAL mode; Hold INC/DEC , check the propeller regulator function; Switch back to CONSTANT SPEED mode; Set 5700 rpm (MIN. PITCH LED must be illuminated)
s.	AVIONICS	ON
t.	Radio	ON, check, then OFF
u.	XPDR	ON, check, then OFF
٧.	Intercom	Check
w.	Flight display, MFD	Check
z.	Fuel quantity	Check (if shown 45+, use a dipstick for appropriate fuel tank)
aa.	Voltmeter	Check, min. 11.5 V
bb.	Instruments	Check
cc.	LAND lights	ON, check function
dd.	NAV / ACL lights	ON, check function
ee.	TRIM	Check movement and indication
ff.	All switches	OFF
gg.	MASTER SWITCH	OFF



Pilot's Operating Handbook

AS-POH-10-508 -

		AS-POH-10-508
hh.	Сапору	Cleanness of glass, canopy lock function
ii.	Safety harness	Inspect
jj.	TOW RELEASE handle	Condition, attachment
2	LEFT FUSELAGE	
a.	Rear-view mirror LH	Condition, attachment and cleanness
b.	Left wing walk	Condition
c.	Surface	Condition
d.	XPDR antenna (underside)	Condition, attachment
3	EMPENNAGE	
a.	VOR antenna	Conditions, attachment
b.	Horizontal and vertical stabilizers	Condition
c.	Elevator	Condition, freedom of movement, without excessive play
d.	Rudder	Condition, without excessive play
e.	Elevator / rudder attachment	Secured
f.	Elevator / rudder sealing tapes	All in place, condition, attachment
g.	Tow release mechanism	Condition, attachment
4	RIGHT FUSELAGE	·
a.	Surface	Condition
b.	Right wing walk	Condition
c.	Rear-view mirror RH	Condition, attachment and cleanness
5	RIGHT WING TRAILING EDG)E
a.	Wing flap	Condition, without excessive play
b.	Wing flap attachment	Secured
c.	Aileron	Condition, remove control locks if installed, freedom of movement, without excessive play
d.	Aileron attachment	Secured
e.	Aileron sealing tapes	All in place, condition, attachment
6	RIGHT WING TIP	
a.	Winglet	Condition
b.	NAV/ACL light	Condition, attachment



Pilot's Operating Handbook

- AS-POH-10-508-

7 RIGHT WING LEADING EDGE

a.	Surface	Condition
b.	Pitot probe	Remove cover, condition, check for blockage
c.	Leading edge and stall strips	Condition, attachment, cleanness
d.	Fuel tank cap	Condition, check quantity of fuel by means of dipstick and secure
e.	Inspection hole cover	Installed
f.	Tie-down ropes	Remove
g.	Fuel drains (2 underside)	Drain and sample (see 8.3.2), check for leaks after draining

8 RIGHT MAIN LANDING GEAR

a.	Wheel fairing	Condition, attachment, accumulation of debris
b.	Main gear leg	Condition, attachment
c.	Inspection hole cover	Installed
d.	Brakes	Condition, fluid leaks
e.	Tire	Condition, inflation, wear
f.	Chocks	Remove

9 POWER PLANT

a.	Propeller	Condition (check for nicks and damage), attachment, secured
b.	Spinner	Condition, attachment
c.	Air inlets	Unobstructed
d.	Oil cowl door	OPEN
e.	Operating fluids	Check leaks
f.	Oil tank cap	OPEN
g.	Engine compression	Crank the propeller by hand several times until a noticeable gurgle is heard; Check for excessive resistance and normal compression
h.	Oil quantity	Check the level with a dipstick and replenish as required (see Chapter 8.3.3)
i.	Coolant quantity	Check level and replenish as required (see Chapter 8.3.4)
j.	Exhaust system	Condition, attachment
k.	Engine compartment	Check visually accessible areas
١.	Hoses, wires, plugs	Condition of hoses and attachment, condition and integrity of wires and plugs
m.	Lower engine cowlings	Condition, attachment
n.	Landing lights	Condition, attachment
0.	Oil cowl door	CLOSE



Pilot's Operating Handbook

- AS-POH-10-508 ----

WARNING

Never crank the propeller by hand with **IGNITION** switches ON! Before cranking the propeller, ensure that nobody is in the cockpit!

WARNING

Do not replenish the coolant if the engine is hot.

Always let the engine cool down to ambient temperature!

CAUTION

The propeller must be grabbed by the blade surface every time!

10 NOSE LANDING GEAR

a.	Tow bar	Remove and stow
b.	Wheel fairing	Condition, attachment, accumulation of debris
c.	Nose gear leg	Condition, attachment, suspension check
d.	Tire	Condition, inflation, wear

11 LEFT MAIN LANDING GEAR

a.	Wheel fairing	Condition, attachment, accumulation of debris
b.	Main gear leg	Condition, attachment
c.	Inspection hole cover	Installed
d.	Brakes	Condition, fluid leaks
e.	Tire	Condition, inflation, wear
f.	Chocks	Remove

12 LEFT WING LEADING EDGE

a.	Fuel drains (2 underside)	Drain and sample (see 8.3.2), check for leaks after draining
b.	Tie-down ropes	Remove
c.	Inspection hole cover	Installed
d.	Fuel tank cap	Condition, check quantity of fuel by means of dipstick and secure
e.	Leading edge and stall strips	Condition, attachment, cleanness
f.	ACI stall warner	Attached, flap unobstructed
g.	Surface	Condition



Pilot's Operating Handbook

- AS-POH-10-508-

13 LEFT WING TIP

 a.
 Winglet
 Condition

 b.
 NAV/ACL light
 Condition, attachment

14 LEFT WING TRAILING EDGE

a.	Aileron	Condition, remove control locks if installed, freedom of movement, without excessive play
b.	Aileron attachment	Secured
с.	Aileron sealing tapes	All in place, condition, attachment
d.	Wing flap	Condition, without excessive play
e.	Wing flap attachment	Secured



Pilot's Operating Handbook

- AS-POH-10-508 ·

Before Engine Starting 4.4

a.	Ground equipme	It Removed
b.	Pre-flight inspect	on Performed
с.	Co-pilot (passeng	er) Briefed
d.	Weight and bala	ce Verified within limits for takeoff and landing
e.	RESCUE SYSTEM actuator	Remove lock (see Chapter 7.22, Fig. 7-35)
f.	Safety harness	Adjust and lock, not twisted
g.	Wing flaps	FLAPS 0
h.	Brake	МАХ
		NOTE

۱P safety harness, use of EPS, canopy opening, what to expect during an emergency and other safety recommendations.

4.5 **Use of External Power**

The aircraft is equipped with external power socket for connection to ground power unit. It is located on the left side under the instrument panel.

a.	External power source	Ensure that external power source is regulated to max. 12 V / 90 A DC
b.	MASTER SWITCH	Check OFF
C.	External power	Plug in external power source
d.	Engine start	Perform according to Chapter 4.6
e.	External power	Unplug external power source

WARNING

If the aircraft will be started using external power, keep all personnel and power unit cables clear of the propeller rotation plane!

CAUTION

Max. power source output connected to the external power socket for engine starting is limited to 12 V / 90 A DC!

CAUTION

Do not use external power to start the engine with a "dead" battery. Takeoff with a weak battery should be avoided. The battery must be maintained according to appropriate Aircraft Maintenance Manual procedures!



Pilot's Operating Handbook

- AS-POH-10-508-

4.6 Engine Starting

a.	FUEL selector	LEFT (if the fuel tank volume is 45+, see Chapter 7.16) or RIGHT
b.	CHOKE - cold engine - warm engine	OPEN (pull to open) CLOSE (push to close)
C.	THROTTLE - cold engine - warm engine	IDLE Slightly open (1 turn of throttle controller)
d.	MASTER SWITCH	ON, wait until Flight Display and MFD start up
e.	Propeller regulator	CONSTANT SPEED mode (MIN. PITCH LED must be illuminated)
f.	Instruments	Check and set
g.	NAV / ACL lights	ON
h.	Starter key	INST.
i.	FUEL PUMP	ON, establish the fuel pressure and then OFF
j.	IGNITION	ON both circuits
k.	Propeller area	Clear
١.	Starter key	Hold START, after engine started release to CHARGE
As so	on as engine runs:	
m.	THROTTLE	Adjust to achieve smooth running at approx. 2500 rpm, then decrease to approx. 2000 rpm
n.	Oil pressure	Minimum 2.00 bar within maximum of 10 seconds If not, shut down the engine and investigate the cause
0.	CHARGE warning lamp	Check OFF
p.	СНОКЕ	CLOSE and add throttle simultaneously
q.	AVIONICS	ON
r.	Radio	ON
s.	Transponder	ON or STBY

WARNING

Never start the engine by hand!

WARNING

Before engine starting ensure that the propeller area is clear!

CAUTION

The starter should be activated for a maximum of 10 sec, followed by 2 min pause for starter cooling!



Pilot's Operating Handbook

- AS-POH-10-508 -

CAUTION

Do not actuate starter key as long as the engine is running. Wait until the engine is completely stopped!

CAUTION

After engine starting, if the oil pressure does not reach the minimum pressure 2.00 bar within 10 seconds, shut down the engine and investigate the cause! The loss of lubrication can cause severe engine damage!

CAUTION

At an engine start with low oil temperature, continue to observe the oil pressure as it could drop again due to the increased flow resistance in the suction line. The number of revolutions may be only so far increased that the oil pressure remains steady!



Pilot's Operating Handbook

- AS-POH-10-508-

4.7 Before Taxiing

Before taxiing, start the warming up period at 2000 rpm for approx. 2 minutes and continue at 2500 rpm. Duration depends on ambient temperature. Monitor temperatures and pressures. Carburetor preheating may be opened to shorten the warming up period. Warm up the engine until the oil temperature reaches 50 °C according to following procedure:

a.	CARBUR. PREHEATING	As required
b.	THROTTLE	2000 rpm for 2 minutes, then continue at 2500 rpm
с.	Altimeter	Set
d.	Rudder pedals	Adjust
e.	CARBUR. PREHEATING	CLOSED

4.8 Taxiing

When taxiing, the direction of the aircraft is controlled by the rudder pedals which are connected to the nose wheel and rudder. Use the minimum power settings for taxi. Power settings for taxi on flat, smooth, hard surfaces is idle (min. 1400 rpm). Power settings for grassy, inclined, soft surfaces or when start motion is slightly above idle (1400 rpm). Control the taxi speed by means of power setting. Always taxi with the flaps retracted (**FLAPS 0**).



When taxiing, relieve the nose wheel load using elevator control.



Pilot's Operating Handbook

AS-POH-10-508 ----

4.9 Before Takeoff

Before takeoff the engine should be properly warmed. The engine oil temperature must reach min. 50 °C. Then the ignition and engine ground tests may be performed as follows:

4.9.1 Ignition and Engine Ground Tests

a.	CARBUR. PREHEATING	Check CLOSED
b.	Brake	МАХ
Igniti	on and engine ground tests:	·
с.	Propeller regulator	CONSTANT SPEED mode, set 5700 rpm (MIN. PITCH LED must be illuminated)
d.	THROTTLE	4000 rpm
e.	IGNITION	Switch OFF first ignition circuit, then back ON; Switch OFF second ignition circuit, then back ON; Engine speed drop with only one ignition circuit must not exceed 300 rpm; Max. difference of engine speed by use of either circuit A or B is 115 rpm
f.	THROTTLE	5000 rpm
g.	Propeller regulator	Switch to MANUAL mode; Hold INC until MIN. PITCH LED is illuminated (if not already); Hold DEC until MAX. PITCH LED is illuminated, check engine rpm drop; Switch back to CONSTANT SPEED mode; Set 5700 rpm (MIN. PITCH LED must be illuminated)
h.	THROTTLE	Short MAX
i.	Engine speed	Check, 5500 rpm ±200 rpm
j.	Engine parameters	Check
k.	CARBUR. PREHEATING	OPEN, check carburetor preheating function (engine speed drop min. 100 rpm); Then CLOSE
I.	THROTTLE	IDLE, check min. 1400 rpm

WARNING

Before engine full-power ground test ensure that the propeller area is clear!

WARNING

Position the aircraft so that the prop wash will not hurt any persons, or cause any damage! Never perform a ground test against any buildings or obstacles!

CAUTION

The engine full-power ground test should be performed with the aircraft heading upwind. Do not perform the engine full-power ground test on a gravel surface. The propeller may sucks the gravel and damage the blades!



- AS-POH-10-508-----



CAUTION

After an engine full-power ground test, allow a short cooling run to prevent vapor formation in the cylinder head!

CAUTION

When performing the engine full-power ground test on grassy or slick surface, the aircraft may move despite MAX brake being used!

4.9.2 Before Line Up

a.	RESCUE SYSTEM actuator	Check removed lock (see Chapter 7.22, Fig. 7-35)
b.	Controls	Freedom of movement
c.	TRIM	Set neutral
d.	Wing flaps	FLAPS 1, check locked
e.	СНОКЕ	Check CLOSED
f.	CARBUR. PREHEATING	Check CLOSED
g.	FUEL PUMP	ON
h.	LAND lights	ON
i.	NAV/ACL lights	Check ON
j.	AVIONICS	Check ON and set
k.	Transponder	ALT
١.	Engine parameters	Check
m.	Warning and check lights	Check
n.	Circuit breakers	Check pressed in
0.	Canopy	Latched and locked (see Chapter 7.12)
p.	Safety harness	Fasten
q.	Wind	Check windsocks
r.	Propeller regulator	CONSTANT SPEED mode, set 5700 rpm (MIN. PITCH LED must be illuminated)



Pilot's Operating Handbook

- AS-POH-10-508 -

4.10 Takeoff

The engine should be properly warmed up before takeoff (oil temperature min. 50 $^{\circ}$ C).

For takeoff over a gravel surface, apply the throttle slowly and the gravel will be blown behind the propeller rather than pulled into it.

WARNING

Takeoff is prohibited if:

- Engine is running unsteadily, roughly or with vibrations!
- Engine parameters are beyond operational limits!
- Aircraft systems (e. g. brakes, flight controls or avionics) are working incorrectly!
- Canopy is not properly latched and locked!
- Weight and balance for both takeoff and landing is out of approved limits!
- There is a frost, ice, snow or other contamination on fuselage, wings, stabilizers and control surfaces!

4.10.1 Normal and Short Field Takeoff

a.	Brake	МАХ
b.	THROTTLE	МАХ
C.	Engine parameters	Check
d.	Propeller regulator	Check
e.	Brake	Release
f.	Control stick	Slightly tail low
g.	Directional control	Maintain with rudder control
h.	Rotate	Smoothly at 68 – 70 IAS / 37 – 38 KIAS
i	Airspeed	104 IAS / 57 KIAS for best angle of climb 127 IAS / 69 KIAS for best rate of climb



Pilot's Operating Handbook

- AS-POH-10-508-

4.10.2 Soft Field Takeoff

For takeoffs from a soft or rough field, it is recommended to lift the aircraft off the ground as soon as practical. The aircraft should be leveled after liftoff immediately to accelerate.

a.	Brake	Release
b.	THROTTLE	Smoothly MAX
C.	Engine parameters	Check
d.	Propeller regulator	Check
e.	Control stick	Slightly tail low
f.	Directional control	Maintain with rudder control
g.	Rotate	Smoothly at 68 – 70 IAS / 37 – 38 KIAS
h.	Airspeed	104 IAS / 57 KIAS for best angle of climb 127 IAS / 69 KIAS for best rate of climb



Pilot's Operating Handbook

- AS-POH-10-508 -

4.11 Climb

Climb is performed with flaps retracted and maximum continuous power. For maximum rate of climb establish the best rate of climb. If an obstacle clearance is required using a steep climb angle, establish the best angle of climb speed.

a.	THROTTLE	As required, max. 5500 rpm
b.	Propeller regulator	CONSTANT SPEED mode, set rpm as required
C.	Airspeed	104 IAS / 57 KIAS for best angle of climb 127 IAS / 69 KIAS for best rate of climb
d.	Wing flaps	FLAPS 0 slowly at safety altitude (not below 165 ft (50 m) AGL and 127 IAS / 69 KIAS)
e.	TRIM	As required
f.	FUEL PUMP	OFF
g.	LAND lights	OFF
h.	Engine parameters	Monitor

	IAS	KIAS
Best angle of climb airspeed V_X (at SL)	104 IAS	57 KIAS
Best rate of climb airspeed V _Y (at SL)	127 IAS	69 KIAS

CAUTION

If the coolant temperature or oil temperature approaches or exceeds limits, reduce the climb angle to increase airspeed and possibly return within limits! If readings do not improve, troubleshoot causes other than high power setting at low airspeed!

4.12 Cruise

Normal cruising is performed in the airspeed range 180 - 230 IAS / 97 - 124 KIAS at engine speed 5500 rpm and throttle set as required. In the case of turbulence reduce the cruising airspeed below 218 IAS / 118 KIAS to avoid of aircraft overstressing.

a.	THROTTLE	As required
b.	Propeller regulator	CONSTANT SPEED mode, set rpm as required
c.	TRIM	As required
d.	Engine parameters	Monitor
e.	Fuel flow and fuel balance	Monitor

|------|

NOTE See OPERATORS MANUAL FOR ROTAX ENGINE TYPE 912 SERIES, Doc. No. OM-912, latest edition.



Pilot's Operating Handbook

AS-POH-10-508

4.13 Descent

It is not advisable to reduce the engine power to idle when descending from a very high altitude. In such case the engine may become under-cooled and a loss of power may occur. It is recommended to descend at increased rpm (approximately 3000 rpm) and check the engine parameters are within permitted limits.

For increasing the rate of descent, it is recommended extend the wing flaps.

a.	THROTTLE	As required
b.	Propeller regulator	CONSTANT SPEED mode, set rpm as required
c.	Airspeed	As required
d.	TRIM	As required
e.	Engine parameters	Monitor

WARNING

When descending with flaps extended, do not exceed V_{FE}!

CAUTION

Engine undercooling and loss of power may occur when descent engine power is set to idle! Increase the engine power during descent to keep the engine parameters within permitted limits!

4.14 Approach

a.	Wing flaps	As required, check locked
b.	Airspeed	120 – 130 IAS / 65 – 70 KIAS
c.	TRIM	As required
d.	THROTTLE	As required
e.	Propeller regulator	CONSTANT SPEED mode, set 5700 rpm (MIN. PITCH LED must be illuminated)
f.	Engine parameters	Check
g.	FUEL selector	Fullest tank
h.	FUEL PUMP	ON
i.	LAND lights	ON
j.	Safety harness	Fasten



Pilot's Operating Handbook

- AS-POH-10-508 -

4.15 Landing

WARNING

Do not extend the flaps at speed above $V_{\mbox{\scriptsize FE}}!$

WARNING

When setting the flaps position **FLAPS 1**, **FLAPS 2** always ensure that the flap lever is properly locked! If not locked properly, the flaps may retract inadvertently, which will cause the aircraft to pitch the nose up and lose of airspeed quickly!

CAUTION

Extending the flaps significantly increase the nose-heavy attitude! Always extend the flaps gradually through incremental positions of the flaps lever! At each incremental position, trim the aircraft appropriately!

NOTE

Always extend the flaps gradually through incremental positions and trim the aircraft appropriately. Optimum airspeed for flaps extension is:

FLAPS 1 at 130 IAS / 70 KIAS

FLAPS 2 at 120 IAS / 65 KIAS

4.15.1 Normal Landing

Landing approach is conducted at a small glide slope angle due to the long distance of the float before touchdown.

a.	Wing flaps	FLAPS 2, extend gradually, check locked
b.	Airspeed	120 – 130 IAS / 65 – 70 KIAS
c.	TRIM	As required
d.	THROTTLE	IDLE
e.	Flare	Begin approximately 7 - 10 ft (2 - 3 m) above ground
f.	Touchdown	Perform on the main wheels first; the nose wheel should be lowered smoothly to the runway as airspeed is diminished
g.	Directional control	Maintain with rudder control
h.	Brake	As required
i.	After landing	Perform according to Chapter 4.16



Pilot's Operating Handbook

- AS-POH-10-508-

4.15.2 Short Field Landing

Landing approach is conducted at a small glide slope angle due to the long distance of the float before touchdown.

a.	Wing flaps	FLAPS 2, extend gradually, check locked
b.	Airspeed	110 – 115 IAS / 59 – 62 KIAS
с.	TRIM	As required
d.	THROTTLE	IDLE
e.	Flare	Begin approximately 7 - 10 ft / 2 - 3 m above ground
f.	Touchdown	Perform on the main wheels first; the nose wheel should be lowered smoothly to the runway as airspeed is diminished
g.	Directional control	Maintain with rudder control
h.	Wing flaps	FLAPS 0
i.	Brake	Apply heavily
j.	After landing	Perform according to Chapter 4.16

NOTE For maximum brake effectiveness, retract the flaps, hold the control stick full backward and apply max. braking without skidding.

4.15.3 Soft Field Landing

a.	Wing flaps	FLAPS 2, extend gradually, check locked
b.	Airspeed	120 – 130 IAS / 65 – 70 KIAS
c.	TRIM	As required
d.	THROTTLE	IDLE
e.	Flare	Begin approximately 7 - 10 ft (2 - 3 m) above ground
f.	Touchdown	Perform as gently as possible on the main wheels first; the nose wheel should be lowered smoothly to the runway as airspeed is diminished
g.	Directional control	Maintain with rudder control
h.	Brake	Apply gently
i.	After landing	Perform according to Chapter 4.16



Pilot's Operating Handbook

- AS-POH-10-508 ----

4.15.4 Balked Landing

a.	THROTTLE	Smoothly MAX
b.	Wing flaps	FLAPS 1 slowly, check locked
c.	Airspeed	104 IAS / 57 KIAS for best angle of climb 127 IAS / 69 KIAS for best rate of climb
d.	Wing flaps	FLAPS 0 slowly at safety altitude (not below 165 ft (50 m) AGL and 130 IAS / 70 KIAS)
e.	TRIM	As required

NOTE
A thrust yawing moment is manifested in the case of the rapid full
throttle application.

4.16 After Landing

a.	THROTTLE	Adjust for taxiing
b.	Wing flaps	FLAPS 0
с.	TRIM	Set neutral
d.	FUEL PUMP	OFF
e.	LAND lights	OFF
f.	Transponder	STBY
g.	Taxiing	To the parking position

WARNING

Do not simultaneously increase power and apply brakes! The brake system may overheat and result in brake failure

or brake fire!

NOTE

When taxiing, relieve the nose wheel load using elevator control.



Pilot's Operating Handbook

- AS-POH-10-508-

4.17 Shutdown

а	Brake	PARK
b.	THROTTLE	IDLE
c.	Radio	OFF
d.	Transponder	OFF
e.	AVIONICS	OFF
f.	IGNITION	OFF the first circuit, after 2-3 s OFF the second circuit
g.	Starter key	OFF
h.	MASTER SWITCH	OFF
i.	NAV/ACL lights	OFF
j.	RESCUE SYSTEM actuator	Install lock (see Chapter 7.22, Fig. 7-35)

CAUTION

Do not park the aircraft in direct sunlight with the canopy left open (see Chapter 8.2.2)!

NOTE Canopy cover prevents the effects of the sun.

4.18 Environmental Consideration

4.18.1 Cold Weather Operation

It is recommended to preheat the engine if the outside temperature falls below +5 °C. Use a suitable air heater. Temperature of hot air should not exceed 100 °C. Preheat until coolant and oil temperature exceed +20 °C. Before engine starting remove ice from the aircraft surfaces, check the free movement of control surfaces and flaps. Also check and remove frost, ice, snow and any other contamination from wheels, wheel brakes and wheel fairings. In the case of low battery an external power source may be used. Plug in the external power source to the socket in the cabin. Keep the cables and all personnel clear of propeller rotation plane during starting and disconnecting of external power source.

WARNING

When the aircraft will be started using external power, keep all personnel and power unit cables clear of the propeller!

4.18.2 Hot Weather Operation

Avoid prolonged engine operation on the ground.



Pilot's Operating Handbook

- AS-POH-10-508 -

4.19 Other Normal Procedures

4.19.1 Stall

The stall speeds are presented in the Chapter 5.

When the airspeed is slowly reduced, an imminent stall is noticed by vibrations felt in the seat. To prevent an inadvertent stall, the aircraft is equipped with two independent stall warning systems. First system is triggered by ADAHRS module of Dynon SkyView system and has aural indication (headset sound) and visual indication (EFIS screen indicator). Second system is triggered by ACI stall warner with aural indication (buzzer) and visual indication (**STALL** warning lamp). The stall warning triggers approximately 9-19 km/h (5 – 10 kts) before the stall occurs.

The best means for preventing an inadvertent stall and spin entry is good airmanship, monitoring of the airspeed and avoiding abrupt maneuvers at low speed and altitude.

For recovery from a stall or approaching stall the following procedure should be used:

a.	Elevator control	Push
b.	THROTTLE	Add power smoothly to regain the airspeed
с.	Ailerons / rudder control	Correct bank to maintain wing leveled

WARNING

If held in the stall intentionally, the aircraft may eventually rapidly bank to the side!

WARNING

Do not add the power rapidly during stall to avoid of sudden bank of aircraft to the side!



Pilot's Operating Handbook

AS-POH-10-508 —

4.19.2 Sideslip

The sideslip is usually used during approach to landing with airspeed 120 IAS / 65 KIAS and flaps in position **FLAPS 2**. During the sideslip maneuver the fuel in the fuel tanks shifts laterally. In the fuel tank that is lower during the sideslip, the fuel shifts towards the wingtip and drains from the fuel outlet at the root rib (Fig. 4-2, A). In the case of prolonged side slip, when the **FUEL** selector is set to the lower fuel tank, there is a potential risk of fuel shortage. The fuel shortage may cause the engine to stop. Therefore, the fuel tank, which is higher, must be always selected during the sideslip.



Fig. 4-2 Shifting of fuel in the fuel tanks during sideslip

WARNING
In a prolonged sideslip, the fuel in the lower wing tank will shift towards the wingtip and may cause fuel shortage to the engine!
Even short-term fuel shortage may cause the engine to stop immediately!
In a sideslip, always set the higher wing tank on the FUEL selector!
(e.g. LEFT SLIP ¹ => RIGHT TANK, RIGHT SLIP ² => LEFT TANK)
¹ left aileron, right rudder ² right aileron, left rudder

Using engine power during slip / skid conditions may induce an oscillating regime known as Dutch roll. For recovery from a Dutch roll the following procedure should be used:

a.	Rudder control	Slightly decrease rudder deflection
b.	Aileron control	Keep deflected
After the oscillations have stopped:		
с.	Sideslip	Continue or recover normal flight





Pilot's Operating Handbook

- AS-POH-10-508 ----

4.19.3 Crosswind Takeoff

Takeoffs under strong crosswind conditions are performed with the flaps setting in position **FLAPS 1** and the ailerons partially deflected into the wind. The aircraft is accelerated to airspeed slightly higher than normal, then the elevator control is used quickly, but carefully to lift the aircraft off the ground and prevent the possibility of setting back onto the runway while drifting.

When clear of the ground, make a coordinated turn into the wind to correct the drift and continue in takeoff.

a.	Brake	Release
b.	THROTTLE	Smoothly MAX
с.	Engine parameters	Check
d.	Propeller regulator	Check
e.	Control stick	Slightly tail low, ailerons into the wind
f.	Directional control	Maintain with rudder control
g.	Rotate	Quickly, but carefully at 73 – 75 IAS / 40 – 41 KIAS
h.	Control stick / rudder control	Correct drift using ailerons and rudder
i.	Airspeed	127 IAS / 69 KIAS

4.19.4 Crosswind Landing

When landing in a strong crosswind, use the minimum flap setting **FLAPS 1** or **FLAPS 2** position depending on the field length. Although the crab or combination method of drift correction may be used, the wing low method gives the best control.

After touchdown, hold a straight course with the steerable nose wheel, with aileron deflection as applicable and occasional braking if necessary.

a.	Wing flaps	FLAPS 1 or FLAPS 2 (as appropriate), extend gradually, check locked	
b.	Airspeed	120 – 130 IAS / 65 – 70 KIAS	
с.	TRIM	As required	
d.	Control stick / rudder control	Correct drift using ailerons and rudder	
e.	Flare	Begin approximately 7 - 10 ft / 2 - 3 m above ground	
f.	Touchdown	Perform on the main wheels first; the nose wheel should be lowered smoothly to the runway as airspeed is diminished	
g.	THROTTLE	IDLE	
h.	Directional control	Maintain with rudder control	
i.	Brake	As required	
j.	Wing flaps	FLAPS 0	
k.	After landing	Perform according to Chapter 4.16	



Pilot's Operating Handbook

AS-POH-10-508

4.20 Noise Characteristics

The noise level in accordance with requirements of the CS-36, Am. 2 (ICAO Annex 16, Volume I, Chapter 10 - 10.4 b) has been established to be 62.4 dB(A).



Pilot's Operating Handbook

- AS-POH-10-508 -

4.21 Towing Operation

4.21.1 Attaching Tow Rope

When attaching the tow rope to the tow aircraft, the assistance of ground staff is required.

a.	Tow rope	Condition, wear and proper weak link	
Tow rope release test:			
b. TOW RELEASE handle PULL, when the rope is placed then RELEASE PULL and RELEASE (tow rope release test), if successful PULL, when the rope is placed then RELEASE		PULL, when the rope is placed then RELEASE PULL and RELEASE (tow rope release test), if successful PULL, when the rope is placed then RELEASE	

WARNING
It is not recommended to taxi with attached tow rope.
Be aware that persons or objects on ground may be hit or tangled by the tow rope!

4.21.2 Attaching the Glider

a.	Rear-view mirrors	Adjust	
b.	Radio check	Perform, request glider pilot to acknowledge	
c.	Tow aircraft	Position the aircraft in front of the towed glider at a 45° angle, so that the glider and all ground personnel is visible from the cabin	
d.	Towed glider	Verify the ground personnel has attached the glider	
e.	Tow aircraft	Align with the runway axis	
f.	Tow rope	Stretch by slow taxiing	
g.	Rear-view mirrors	Check, clear view of the glider	

WARNING

Always observe the actions and position of the ground personnel while attaching the glider!

Be prepared to immediately switch OFF the **IGNITION** to stop the engine, in the case that any person unexpectedly enters the propeller area or other hazardous situation arises!

4.21.3 Takeoff with Glider

a. Rear-view mirrors Check if the glider is ready for takeoff and tow rope is stretched; Monitor the actions of the ground staff		Check if the glider is ready for takeoff and tow rope is stretched; Monitor the actions of the ground staff	
b.	Airspeed	Accelerate to minimum towing speed while still close to the ground	
с.	Climb	If the glider is airborne, change to climb steadily	
d.	Airspeed	Maintain towing speed (depends on glider type)	

Pilot's Operating Handbook

- AS-POH-10-508-



WARNING

When towing heavy gliders, acceleration must be performed close to the ground as the takeoff speed of the glider will be higher than the takeoff speed of the tow aircraft!

WARNING

Takeoff with the towed glider's wing on the ground is prohibited!

WARNING

Do not exceed the maximum weight of tow aircraft!

WARNING

Do not exceed the maximum weight of glider for selected towing speed at takeoff!

CAUTION

Takeoff distance 1640 ft / 500 m limited by certification basis is achieved by limiting of tow aircraft and glider takeoff weight. Increasing of towing speed at takeoff will result in increasing of takeoff distance!

4.21.4 Climb with Glider

a.	Airspeed	Maintain glider towing speed	
b.	Flight	Straight, without abrupt maneuvers or steep turns (max. bank angle 30°)	
c.	Rear-view mirrors	Monitor the glider position	

CAUTION

If the coolant temperature or oil temperature approaches or exceeds limits, reduce the climb angle to increase airspeed and possibly return within limits!

4.21.5 Cruise with Glider

a.	Airspeed	Maintain glider towing speed	
b.	Flight	Straight, without abrupt maneuvers or steep turns (max. bank angle 30°)	
c.	Rear-view mirrors	Monitor the glider position	



Pilot's Operating Handbook

- AS-POH-10-508 ----

4.21.6 Glider Release

a.	Towed glider	Give sign to release (via radio or by other appropriate means)	
b.	Rear-view mirrors	Monitor the glider position	
c.	After release	Perform descending turn to the opposite side than the released glider	

4.21.7 Approach with Tow Rope

a.	Airspeed	130 – 140 IAS / 70 – 75 KIAS	
b.	During approach	Observe all aircraft limitations according to the POH, beware of the hanging rope, avoid sudden changes of modes or steep turns and low flying above the terrain	

WARNINGDo not fly low above terrain with attached tow rope. Be aware
that persons or objects may be hit or tangled by the tow rope!

4.21.8 Tow Rope Drop

a.	Place of assumed drop	Check suitability (clear area, no persons)
b.	On final approach	Adjust the descent so that the altitude of 164 ft / 50 m AGL will be achieved in the place of assumed tow rope drop
c.	TOW RELEASE	PULL repeatedly, verify the tow rope has been released
d.	Rear-view mirrors	Check release of tow rope



4.21.9 Landing with Tow Rope

Landing approach is conducted at a small glide slope angle due to the long distance of the float before touchdown. Avoid any obstacles before the touchdown area.



Pilot's Operating Handbook AS-POH-10-508



5 PERFORMANCE

TABLE OF CONTENTS

J.1		5-2
5.2	AIRSPEED CALIBRATION	5-3
5.3	STALL SPEEDS	5-5
5.4	TAKEOFF DISTANCE	5-7
5.5	RATE OF CLIMB	5-9
5.6	CRUISE PERFORMANCE AND FUEL CONSUMPTION	5-10
5.7	LANDING DISTANCE	5-12
5.8	DEMONSTRATED CROSSWIND PERFORMANCE	5-14
5.9	TOWING OPERATION	5-16



Pilot's Operating Handbook

- AS-POH-10-508 -

5.1 General

Chapter 5 provides performance data for takeoff, climb, cruise and landing. If not stated otherwise, the data in this chapter are valid for aircraft at maximum takeoff weight.

The performance tables on the Chapter 5 have been prepared to illustrate the performance you may expect from your aircraft as well as to assist you in precise flight planning. The data presented in these tables has been derived from test flights using an aircraft and engine in good operating condition, and was corrected to standard atmospheric conditions 15 °C and 1013.25 mbar at sea level.

The performance tables do not take into account the expertise of the pilot or the maintenance condition of the aircraft. The performance illustrated in the tables can be achieved if the indicated procedures are followed and the aircraft is in good maintenance condition.

Note that the flight duration data does not include unusable fuel. The fuel consumption during cruise is based on engine RPM and manifold pressure settings. Some undefined variables such as the operating condition of the engine, contamination of the aircraft surface, or turbulence could influence the flight distance and flight duration. For this reason, it is important that all available data is used when calculating the required amount of fuel for a flight.



Pilot's Operating Handbook

- AS-POH-10-508-

5.2 Airspeed Calibration

Associated conditions:

Power for level flight or maximum continuous, whichever is less.

Example:

Calibrated airspeed

Indicated airspeed 125 km/h

Flaps	FLAPS 1 (15°)
•	

126 km/h

NOTE

Indicated airspeed assumes zero instrument error.

			CAS				
	IAS	FLAPS 0	FLAPS 1	FLAPS 2	FLAPS 3		
		(0°)	(15°)	(24°)	(35°)		
V _{so}	61	-	-	-	74		
	64	-	-	75	76		
	68	-	80	79	79		
Vs	78	88	88	87	88		
	80	90	90	89	89		
	85	94	94	93	94		
	90	98	98	97	98		
	95	103	102	101	102		
	100	107	106	105	106		
	110	115	114	114	114		
	120	124	122	122	123		
	130	132	130	130	131		
V _{FE}	140	141	138	139	139		
	150	150					
	160	158					
	170	167					
	180	176					
	190	185					
	200	194					
	210	203					
V _{NO}	218	210					
	220	212					
	230	221					
	240	231					
	250	240]				
	260	249]				
	270	259]				
V _{NE}	275	263]				



Pilot's Operating Handbook

- AS-POH-10-508 -

Associated conditions:

Power for level flight or maximum continuous, whichever is less.

Example:

Indicated airspeed	72 knots
Flaps	FLAPS 1 (15°)
Calibrated airspeed	72 knots

NOTE

Indicated airspeed assumes zero instrument error.

		KCAS				
	KIAS	FLAPS 0	FLAPS 1	FLAPS 2	FLAPS 3	
		(0°)	(15°)	(24°)	(35°)	
V _{so}	33	-	-	-	40	
	35	-	-	41	41	
	37	-	43	42	43	
Vs	42	48	48	47	47	
	45	50	50	50	50	
	50	54	54	53	54	
	55	58	58	57	58	
	60	63	62	62	62	
	65	67	66	66	66	
	70	71	70	70	70	
	75	75	74	74	74	
V _{FE}	76	77	75	75	76	
	85	84				
	90	88				
	95	93				
	100	98				
	105	102				
	110	106				
	115	111	-			
V _{NO}	118	113	-			
	120	116	-			
	125	120				
	130	125				
	135	130				
	140	134				
	145	139]			
V _{NE}	148	142	1			



Pilot's Operating Handbook

- AS-POH-10-508-

5.3 Stall Speeds

Associated conditions:				
Weight	600 kg / 1323 lb			
CG	Most FWD at MTOW			
Engine power at	Idle			
Wing level stall				

Example:

Flaps

FLAPS 3 (35°)

Stall speed

61 IAS / 74 CAS 33 KIAS / 40 KCAS

Wing level stalls	Flaps positions	IAS	CAS	KIAS	KCAS
Cruise	FLAPS 0 (0°)	78	88	42	48
Takeoff	FLAPS 1 (15°)	68	80	37	43
Landing – normal	FLAPS 2 (24°)	64	75	35	41
Landing – emergency	FLAPS 3 (35°)	61	74	33	40

NOTE

Maximum altitude lost during wing level stall is 300 ft.

Altitude loss is maximum value determined during flight tests using an average piloting technique.

NOTE

Airspeeds values may not be accurate at stall.



Pilot's Operating Handbook

- AS-POH-10-508 ----

Associated conditions:

Turning flight stall

Weight	600 kg / 1323 lb
CG	Allowable at MTOW
Engine power at	From idle to 55% max.
	continuous

Example: Flaps

FLAPS 3 (15°)

Stall speed

74 IAS / 85 CAS 45 KIAS / 50 KCAS

Turning flights (30° bank angle)	Flaps positions	IAS	CAS	KIAS	KCAS
Cruise	FLAPS 0 (0°)	83	92	45	50
Takeoff	FLAPS 1 (15°)				
Landing – normal	FLAPS 2 (24°)	74	85	40	46
Landing – emergency	FLAPS 3 (35°)				

NOTE

Maximum altitude lost during turning stall is 490 ft.

Altitude loss is maximum value determined during flight tests using an average piloting technique.

NOTE

The aircraft is not approved for pitch attitudes greater than 30°. The engine power must be reduced to 55% max. continuous power to avoid of exceeding 30° pitch angle.

NOTE

The stall speed increases as the angle of bank increases.

NOTE

Airspeeds values may not be accurate at stall.


Pilot's Operating Handbook

- AS-POH-10-508-

5.4 Takeoff Distance

Associated conditions:		Example:	
Weight	600 kg / 1323 lb	Pressure altitude	2000
CG	Most FWD at MTOW	Outside air temperature	15 °C
Flaps	FLAPS 1 (15°)	Runway	Paved (dry asphalt)
Engine power	Max. takeoff	Tailwind	2 knots
Procedure	Normal takeoff		
Wind	Zero		
Runway slope	Zero		
Speed VLOF	80 IAS / 43 KIAS		
Speed V ₅₀	100 IAS / 54 KIAS		
		Takeoff ground roll	568 ft / 173 m

Distance over 50 ft (15 m) obstacle

568 ft / 173 m 1098 ft / 335 m

NOTE

Poor maintenance condition of the aircraft, deviation from the given procedures as well as unfavorable outside conditions (rain, unfavorable wind conditions, including crosswind) could increase the takeoff distance considerably.

RW	/Y surface:			PAVED (d	ry asphalt)		N	NON - PAVED (dry grass)			
ISA conditions		Ground roll		Takeoff	Takeoff distance		Ground roll		Takeoff distance		
Pressure altitude	Δ OAT ISA	ΟΑΤ			over 50	ft (15 m)			over 50 ft (15 m)		
ft	°C	°C	ft	m	ft	m	ft	m	ft	m	
	-30	-15	358	109	693	211	403	123	751	229	
	-20	-5	386	118	747	228	435	132	810	247	
	-10	5	416	127	804	245	468	143	871	266	
SL	0	15	446	136	863	263	502	153	935	285	
	10	25	478	146	924	282	537	164	1001	305	
	20	35	510	156	987	301	574	175	1069	326	
	30	45	544	166	1052	321	612	187	1140	347	
	-30	-19	402	122	777	237	452	138	842	257	
	-20	-9	434	132	839	256	488	149	909	277	
	-10	1	467	142	904	275	526	160	979	298	
2000	0	11	502	153	971	296	565	172	1052	321	
	10	21	538	164	1040	317	605	184	1127	344	
	20	31	575	175	1112	339	647	197	1205	367	
	30	41	614	187	1187	362	690	210	1286	392	
	Influence	e of wind:	- Add 5% t	o table dis	tances for	each 1 knc	o ts tailwind	l up to 10 l	knots.		



Pilot's Operating Handbook

- AS-POH-10-508 -----

RWY surface:				PAVED (di	ry asphalt)		NON - PAVED (dry grass)			
ISA	conditions	5	Grou	nd roll	Takeoff	distance	Grour	nd roll	Takeoff	distance
Pressure		ΟΑΤ				ft (15 m)				ft (15 m)
altitude	ISA °C	°C	f+	m	f+	m	f+		ft	m
	-30	-23	151	138	873	266	508	155	946	288
	-30	12	400	140	014	200	508	167	1022	200
	-20	-15	400 526	149	1019	200	545	107	1025	226
4000	-10	-5 7	520	172	1018	310	592 637	100	1105	350
4000	10	17	500	172	1094	354	637	194	100	301
	10	17	607	185	11/4	358	083	208	1272	388
	20	27	650	198	1256	383	731	223	1361	415
	30	37	693	211	1341	409	/80	238	1453	443
	-30	-27	507	155	981	299	571	174	1063	324
	-20	-17	549	167	1063	324	618	188	1151	351
	-10	-7	593	181	1147	350	667	203	1243	379
6000	0	3	639	195	1235	376	718	219	1338	408
	10	13	686	209	1326	404	771	235	1437	438
	20	23	734	224	1420	433	826	252	1539	469
	30	33	785	239	1518	463	883	269	1645	501
	-30	-31	572	174	1105	337	643	196	1198	365
	-20	-21	620	189	1198	365	697	212	1299	396
	-10	-11	670	204	1295	395	753	230	1404	428
8000	0	-1	722	220	1396	425	812	247	1513	461
	10	9	776	236	1500	457	873	266	1626	495
	20	19	832	253	1608	490	936	285	1743	531
	30	29	890	271	1720	524	1001	305	1864	568
	-30	-35	645	197	1248	380	726	221	1352	412
	-20	-25	700	213	1355	413	788	240	1468	447
	-10	-15	758	231	1466	447	853	260	1589	484
10000	0	-5	818	249	1582	482	920	280	1714	522
	10	5	880	268	1702	519	990	302	1844	562
	20	15	944	288	1826	557	1062	324	1979	603
	30	25	1011	308	1955	596	1137	347	2119	646
	Influence	o of wind.	- Vqq E% +	o tablo dici	tances for	each 1 kng	te tailwind	un to 10	note	
	muenc	e or wind:	- Auu 3% [Lances IOF		La Lanwina	αρ το το ι		



Pilot's Operating Handbook

- AS-POH-10-508-

5.5 Rate of Climb

Weight	600 kg / 1323 lb
CG	Most FWD at MTOW
Flaps	FLAPS 0 (0°)
Engine power	Max. takeoff

Example:	
----------	--

Pressure altitude	6000 ft
Outside air temperature	-7 °C

Climb speed	127 IAS / 69 KIAS
Rate of climb	836 fpm (4.2 m/s)

Pressure altitude	Climb	speed		Rate of climb (fpm)					
ft	IAS	KIAS	ISA - 30°C	ISA - 20°C	ISA - 10°C	ISA	ISA + 10°C	ISA + 20°C	ISA + 30°C
SL	127	69	1287	1255	1223	1190	1157	1123	1089
2000	127	69	1160	1127	1094	1060	1026	991	956
4000	127	69	1033	1000	966	931	896	861	825
6000	127	69	906	871	836	801	765	729	692
8000	127	69	778	743	707	671	634	597	559
10000	127	69	652	616	579	542	504	466	427

Pressure altitude	Climb	speed		Rate of climb (m/s)					
ft	IAS	KIAS	ISA - 30°C	ISA - 20°C	ISA - 10°C	ISA	ISA + 10°C	ISA + 20°C	ISA + 30°C
SL	127	69	6.5	6.4	6.2	6.0	5.9	5.7	5.5
2000	127	69	5.9	5.7	5.6	5.4	5.2	5.0	4.9
4000	127	69	5.2	5.1	4.9	4.7	4.6	4.4	4.2
6000	127	69	4.6	4.4	4.2	4.1	3.9	3.7	3.5
8000	127	69	4.0	3.8	3.6	3.4	3.2	3.0	2.8
10000	127	69	3.3	3.1	2.9	2.8	2.6	2.4	2.2

Best angle of climb airspeed V _x (at SL)	104 IAS 57 KIAS			
Rate of climb at V _x (at SL)	1127 fpm (5.7 m/s)			
Best rate of climb airspeed V _Y (at SL)	127 IAS	69 KIAS		
Rate of climb at V_Y (at SL)	1190 fpm	(6.0 m/s)		



Pilot's Operating Handbook

AS-POH-10-508 -

5.6 Cruise Performance and Fuel Consumption

Associated conditions:

Weight	600 kg / 1323 lb
Flaps	FLAPS 0 (0°)
Winds	Zero

Example:	
Cruise pressure altitude	6000 ft
Engine speed	5500 rpm
MAP	21.1 inHg
Airspeed	185 IAS / 181 CAS / 198 TAS
Fuel consumption	19.0 l/h
·	5.0 U. S. gal/h

Pressure altitude	Engine speed	Airspeed		ΜΑΡ	Fuel cons	sumption	
ft	rpm	IAS	CAS	TAS	inHg	(l/h)	U. S. gal/h
		229	221	228	27.1	27.8	7.3
		218	211	217	26.1	22.8	6.0
2000	5 500	207	201	207	25.1	20.9	5.5
		195	190	196	24.1	18.9	5.0
		184	180	185	23.1	17.9	4.7
		219	212	225	25.1	25.8	6.8
		207	201	214	24.1	22.8	6.0
4000	5 500	196	191	202	23.1	19.8	5.2
	184	180	191	22.1	17.8	4.7	
	171	169	179	21.1	16.8	4.4	
		209	203	222	23.1	26.0	6.8
6000	C000 5 500	197	191	209	22.1	21.0	5.5
6000	5 500	185	181	198	21.1	19.0	5.0
		173	170	186	20.1	18.0	4.7
		199	194	219	21.3	24.0	6.3
8000	5 500	184	180	203	20.0	18.0	4.7
		173	170	192	19.0	16.0	4.2
		191	186	216	20.1	22.0	5.8
10000	5 500	181	177	206	19.1	19.0	5.0
		168	166	193	18.1	17.0	4.5



Pilot's Operating Handbook

- AS-POH-10-508-

Associated conditions:				
Weight	600 kg / 1323 lb			
Flaps	FLAPS 0 (0°)			
Winds	Zero			

Examp	le:

Cruise pressure altitude	6000 ft
Engine speed	5500 rpm
MAP	21.1 inHg
Airspeed	100 KIAS / 98 KCAS / 107 KTAS
Fuel consumption	19.0 l/h
·	5.0 U. S. gal/h

Pressure altitude	Engine speed		Airspeed		МАР	Fuel consumption	
ft	rpm	KIAS	KCAS	KTAS	inHg	(l/h)	U.S.gal/h
		124	119	123	27.1	27.8	7.3
		118	114	117	26.1	22.8	6.0
2000	2000 5 500	112	109	112	25.1	20.9	5.5
		105	103	106	24.1	18.9	5.0
		99	97	100	23.1	17.9	4.7
		118	114	121	25.1	25.8	6.8
		112	109	115	24.1	22.8	6.0
4000	4000 5 500	106	103	109	23.1	19.8	5.2
		99	97	103	22.1	17.8	4.7
		93	91	97	21.1	16.8	4.4
		113	110	120	23.1	26.0	6.8
6000	C000 5 500	106	103	113	22.1	21.0	5.5
6000	5 500	100	98	107	21.1	19.0	5.0
		93	92	100	20.1	18.0	4.7
		108	105	118	21.3	24.0	6.3
8000	5 500	99	97	110	20.0	18.0	4.7
		93	92	104	19.0	16.0	4.2
		103	100	117	20.1	22.0	5.8
10000	5 500	97	96	111	19.1	19.0	5.0
		91	90	104	18.1	17.0	4.5



Pilot's Operating Handbook

- AS-POH-10-508 -

5.7 Landing Distance

Associated conditions:

Weight	600 kg / 1323 lb
CG (22.0 %MAC)	Most FWD at MTOW
Flaps	FLAPS 2 (24°)
Engine power	IDLE
Procedure	Normal landing
Wind	Zero
Runway slope	Zero
Braking	During ground roll

Example:	
Pressure altitude	2000
Outside air temperature	15 °C
Runway	Paved (dry asphalt)
Tailwind	2 knots

Distance over 50 ft (15 m) obstacle1729 ft / 527 mLanding ground roll514 ft / 156 m

NOTE

Poor maintenance condition of the aircraft, deviation from the given procedures as well as unfavourable outside conditions (rain, unfavourable wind conditions, including crosswind) could increase the landing distance considerably.

RW	'Y surface	•	PAVED (dry asphalt)			:)	NON - PAVED (dry grass)			
ISA	condition	S	Landing distance		e Ground roll		Landing distance		Ground roll	
Pressure altitude	Δ OAT ISA	ΟΑΤ	over 50	ft (15 m)	(bra	ked)	over 50	ft (15 m)	(bra	ked)
ft	°C	°C	ft	m	ft	m	ft	m	ft	m
	-30	-15	1090	332	324	99	1380	421	606	185
	-20	-5	1176	359	349	107	1489	454	654	199
	-10	5	1266	386	376	115	1602	488	703	214
SL	0	15	1358	414	404	123	1719	524	755	230
	10	25	1454	443	432	132	1841	561	808	246
	20	35	1553	473	462	141	1966	599	863	263
	30	45	1656	505	492	150	2096	639	920	280
	-30	-19	1223	373	363	111	1547	472	679	207
	-20	-9	1321	403	392	120	1672	509	734	224
	-10	1	1423	434	423	129	1801	549	790	241
2000	0	11	1528	466	454	138	1934	590	849	259
	10	21	1638	499	487	148	2073	632	910	277
	20	31	1751	534	520	159	2216	675	973	296
	30	41	1868	569	555	169	2364	721	1038	316
Inf	luence of	wind: - /	Add 5% to	table dist	ances for	each 1 k i	nots tailw	ind up to	10 knots.	



Pilot's Operating Handbook

AS-POH-10-508 —

RW	XWY surface: PAVED (dry asphalt) NON - PAVED (d			D (dry gra	(dry grass)					
ISA	condition	S	Landing	distance	Groui (bro	nd roll	Landing	distance	Grour	nd roll
Pressure altitude	Δ OAT ISA	ΟΑΤ	over 50	it (15 iii)	(bra	keu)	over 50	it (15 iii)	(Dra	keu)
ft	°C	°C	ft	m	ft	m	ft	m	ft	m
	-30	-23	1374	419	408	124	1738	530	763	233
	-20	-13	1485	453	441	135	1880	573	825	252
	-10	-3	1602	488	476	145	2027	618	890	271
4000	0	7	1723	525	512	156	2180	665	957	292
	10	17	1848	563	549	167	2339	713	1026	313
	20	27	1977	603	587	179	2503	763	1098	335
	30	37	2111	643	627	191	2672	814	1173	357
	-30	-27	1545	471	459	140	1955	596	858	262
	-20	-17	1673	510	497	151	2117	645	929	283
	-10	-7	1806	550	537	164	2286	697	1003	306
6000	0	3	1944	593	578	176	2461	750	1080	329
	10	13	2087	636	620	189	2642	805	1160	353
	20	23	2236	681	664	202	2830	862	1242	379
	30	33	2389	728	710	216	3024	922	1327	405
	-30	-31	1740	530	517	158	2202	671	967	295
	-20	-21	1886	575	560	171	2388	728	1048	319
	-10	-11	2039	621	606	185	2581	787	1133	345
8000	0	-1	2197	670	653	199	2781	848	1221	372
	10	9	2362	720	702	214	2989	911	1312	400
	20	19	2532	772	752	229	3204	977	1407	429
	30	29	2708	825	805	245	3427	1045	1504	459
	-30	-35	1964	599	584	178	2486	758	1091	333
	-20	-25	2132	650	634	193	2699	823	1185	361
	-10	-15	2308	703	686	209	2921	890	1282	391
10000	0	-5	2490	759	740	225	3151	960	1383	422
	10	5	2679	816	796	243	3390	1033	1488	454
	20	15	2875	876	854	260	3638	1109	1597	487
	30	25	3077	938	914	279	3895	1187	1710	521
Inf	fluence of	wind: -	Add 5% to	table dist	ances for	each 1 k i	nots tailw	ind up to	10 knots.	



Pilot's Operating Handbook

- AS-POH-10-508 -

5.8 Demonstrated Crosswind Performance

Associated conditions:		Example:			
Runway heading	15°	Wind / Flight path angle	60°		
Wind direction	75°				
Wind velocity	6.0 m/s (11.7 knots)				
		Crosswind component	5.2 m/s (10.1 knots)		
		Headwind component	3.0 m/s (5.8 knots)		

The maximum demonstrated crosswind speed for takeoff was 8.3 m/s (16.1 knots) and for landing was 7.5 m/s (14.6 knots).

The maximum demonstrated crosswind values are not considered limiting.



Pilot's Operating Handbook









Pilot's Operating Handbook

· AS-POH-10-508 -

5.9 Towing Operation

Takeoff distance 1640 ft / 500 m when taking off from dry, level, hard surface at sea level (ISA conditions), is achieved at following conditions:

Tow aircraft crew – 1 person:

Maximum tow aircraft weight 490 kg / 1080 lb.

Maximum glider weight according to the table for selected towing speed at takeoff (up to 50 ft / 15 m).

Towing spee	ed at takeoff	Maximum g	lider weight
IAS	KIAS	kg	lb
110	59	545	1202
115	62	422	930
120	65	310	683

Tow aircraft crew – 2 persons, training only:

Maximum tow aircraft weight 580 kg / 1278 lb.

Maximum glider weight 380 kg / 838 lb for towing speed 115 IAS / 62 KIAS at takeoff (up to 50 ft / 15 m).

WARNING

Do not exceed the maximum weight of tow aircraft!

WARNING

Do not exceed the maximum weight of glider for selected towing speed at takeoff!

CAUTION

Takeoff distance 1640 ft / 500 m limited by certification basis is achieved by limiting of tow aircraft and glider takeoff weight. Increasing of towing speed at takeoff will result in increasing of takeoff distance!

NOTE

Operating weight and forward CG limits are restricted for towing operation.

NOTE

During the flight testing the rate of climb 430 fpm (2.1 m/s) has been demonstrated for 490 kg tow aircraft and 600 kg glider (Duo Discus XLT), altitude 1400 ft (ISA conditions), $V_T = 110$ IAS / 59 KIAS.



- AS-POH-10-508-----

AEROSPOOL

6 WEIGHT AND BALANCE, AND EQUIPMENT LIST

TABLE OF CONTENTS

6.1	GENERAL	6-2
6.2	AIRCRAFT WEIGHING PROCEDURE	6-3
6.2.1	Calculation Method	6-3
6.2.2	Weighing Method	6-4
6.2.3	Aircraft Weighing Form	6-6
6.3	WEIGHT AND BALANCE RECORD	6-7
6.4	WEIGHT AND BALANCE DETERMINATION FOR FLIGHT	6-8
6.4.1	Aircraft Weight and CG Limits	6-8
6.4.2	Weight and Balance Loading Form	6-11
6.4.3	Example of Calculation	6-13
6.5	LOADING DATA	6-14
6.5.1	Weights and Moments of Variable Masses – Metric Units	6-14
6.5.2	Weights and Moments of Variable Masses – U. S. Standard Units	6-16
6.5.3	Fuel Quantity and Weight Conversion Chart – Metric Units	6-18
6.5.4	Fuel Quantity and Weight Conversion Chart – U. S. Standard Units	6-19
6.6	WEIGHT AND MOMENT LIMITS CHART	6-20
6.6.1	Metric Units	6-20
6.6.2	U. S. Standard Units	6-21
6.7	EQUIPMENT LIST	6-22



Pilot's Operating Handbook

AS-POH-10-508 -

6.1 General

This Chapter contains weight and balance records and the loading range for safe operation of WT9 Dynamic LSA aircraft. As a pre-requisite for safe flight the pilot in command must ensure that the loaded and fueled aircraft's weight and moment are within approved limits during takeoff, flight and landing.

The Basic Empty Weight / Moment are initially specified by the aircraft's manufacturer and are recorded into the Weight and Balance Record (Chapter 6.3). Installation or removal of any equipment will influence this initial data. It is the duty of any authorized organization installing (or removing) any equipment on (or from) the aircraft to determine the resulting new Basic Empty Weight / Moment for the aircraft.

The Weight and Balance Record must be maintained current and up-to-date. In simple cases the new Basic Empty Weight / Moment may be calculated. In more complex cases the new Basic Empty Weight / Moment must be determined by weighing the newly configured aircraft. The new Basic Empty Weight / Moment values shall be recorded immediately, along with all other pertinent information into the aircraft's Weight and Balance Record Chapter 6.3). The updated Weight and Balance Record must be used when calculating loading plans for all future flights.

The WT9 Dynamic LSA center of gravity is expressed as a moment. The moment represents the sum of each individual load's moment. Each individual load's moment is the multiple of its applied load and its distance from a Reference Datum. The distance from the Reference Datum to the point of each load's application is known as the CG Arm. The Reference Datum is located 1.975 m / 77.76 in forward from inner surface of the firewall. The inner surface of the firewall is identical with the engine cowlings and fuselage vertical border line in which the reference point (RP) lies (see Chapter 6.2.3).

The approved Aircraft Weight and Moment Limit are presented graphically in the Weight and Moment Limits Chart (see Chapter 6.6). The limitations presented in the Weight and Moment Limits Chart must be adhered to. If the aircraft is improperly loaded or overloaded with co-pilot (passenger), baggage or fuel the aircraft's performance, structural strength and center of gravity may be dangerously influenced. If the center of gravity is too far forward it may be difficult, or impossible, to rotate for takeoff and to flare for landing. If the center of gravity is too far aft longitudinal stability and aircraft controllability may be dangerously influenced.



The total weight and cumulative moment of a loaded and fuelled aircraft is simply calculated using the Weight and Balance Loading Form (Chapter 6.4.2). This calculation requires the aircraft's Basic Empty Weight / Moment, the weight of pilot/co-pilot (passenger), the total weight of baggage in the baggage compartment, and the usable weight of fuel. The aircraft's Basic Empty Weight / Moment are obtained from the aircraft's Weight and Balance Record (Chapter 6.3).



Pilot's Operating Handbook

AS-POH-10-508-

6.2 Aircraft Weighing Procedure

6.2.1 Calculation Method

When a compact piece of equipment is installed on (or removed from) the aircraft and an accurate weight and center of gravity arm (distance from the aircraft's Reference Datum to the installed equipment's center of gravity) can be accurately specified, the newly configured aircraft's Basic Empty Weight / Moment can be calculated using the aircraft's Weight and Balance Record (Chapter 6.3).

CAUTION

When calculating a new Basic Empty Weight / Moment pay close attention to ensure consistent usage of measuring units (U. S. Standard or Metric).

- 1. Record the date the item was installed on (or removed from) to the aircraft in the "Date" column.
- 2. Mark an "X" into the "Item No. In" column if the equipment was installed.
- 3. Mark an "X" into the "Item No. Out " column if the equipment was removed.
- 4. Record a brief description of the item or modification into the "Description of Article or Modification" column.
- 5. Record the item's weight into the "Weight Change" column's "Weight" column:
 - a) "Added (+)" column for installed items.
 - b) "Removed (–)" column for removed items.
- 6. Record the item's CG arm into the "Weight Change" column's "Arm" column:
 - a) "Added (+)" column for installed items.
 - b) "Removed (–)" column for removed items.
- 7. Calculate the moment by multiplying the item's weight and arm together and enter the resulting value into the "Weight Change" column's "Moment" column:
 - a) "Added (+)" column for installed items.
 - b) "Removed (–)" column for removed items.
- 8. Calculate the aircraft's new Basic Empty Weight and enter the value into the "Basic Empty Weight" column:
 - a) For added items, calculate the aircraft's new Basic Empty Weight by adding the item's weight to the aircraft's previous Basic Empty Weight.
 - b) For removed items, calculate the aircraft's new Basic Empty Weight by subtracting the item's weight from the aircraft's previous Basic Empty Weight.
- 9. Calculate the aircraft's new Basic Empty Moment and enter the value into the "Basic Empty Moment" column:
 - a) For added items, calculate the aircraft's new Basic Empty Moment by adding the item's moment to the aircraft's previous Basic Empty Moment.
 - b) For removed items, calculate the aircraft's new Basic Empty Moment by subtracting the item's moment from the aircraft's previous Basic Empty Moment.



Pilot's Operating Handbook

AS-POH-10-508 -

6.2.2 Weighing Method

When complex modifications, accomplishment of service bulletins, removing/installation of equipment or loss of records have occurred, the new Basic Empty Weight / Moment must be determined by weighing the aircraft. The new values must be recorded into the aircraft's Weight and Balance Record (Chapter 6.3).

- 1. Aircraft preparation for weighing:
 - a) Defuel the aircraft's fuel system (see 8.3.2).
 - b) Weigh the aircraft in a closed building to prevent errors due to wind gusts.
 - c) Remove all snow, ice, dirt and water from the aircraft's surfaces.
 - d) Remove all snow, ice and dirt from the wheel fairings.
 - e) Remove all objects not included in the aircraft's Approved Equipment List.
 - f) Remove all objects not included in the aircraft's Weight and Balance Record.
 - g) Verify all items in the Equipment List are installed in their correct location.
 - h) Inflate the aircraft's tires to their recommended operating pressures.
 - i) Verify oil, brake fluid and coolant are at their prescribed maximum levels.
 - j) Close covers and other lids.
 - k) Place scales under each wheel (minimum scale capacity 300 kg / 660 lb).
 - I) Brake lever to PARK position.
 - m) Remove the external control locks and place all controls to their neutral position. Retract the wing flaps.
- 2. Aircraft leveling:
 - a) Level laterally with a bubble-level placed across the cabin sills above the main spar with the canopy opened (Fig. 6-1). If the bubble-level is not long enough, a suitable extension (e.g. even wooden plank) may be used with the bubble-level placed on top. Be careful not to damage the cabin sills when leveling.
 - b) Remove bubble-level and close the canopy.
 - c) Level longitudinally with a bubble-level placed on the canopy frame (Fig. 6-1). Adjust the level by deflating the nose wheel's tire or install suitable pads under the nose/main wheel scales.







Pilot's Operating Handbook

- AS-POH-10-508-

3. Weighing (see Chapter 6.2.3):

- a) With the aircraft leveled and canopy closed, obtain and record the aircraft data into a photocopy of the Aircraft Weighing Form (Chapter 6.2.3).
- b) Obtain and record the value "X" by measuring horizontally and parallel to the aircraft center line, from a line stretched between main wheel centers to a plumb line dropped from the Reference Point (RP).
- c) Obtain and record the value "Y" by measuring horizontally and parallel to the aircraft center line, from a line stretched between main wheel centers to a plumb line dropped from the center of nose wheel axle.
- d) Obtain and record the weights shown on each scale, deduct the tare (if any) and calculate the net weights.
- e) Determine and record the arms "A" and "B".
- f) Determine and record the moment for each weighting point using following formula:

Moment = *Net* weight x *Arm*

- g) Calculate and record the Empty Weight / Moment by totaling the appropriate columns. Calculate and record the Empty Weight CG using formula given in the form.
- h) Calculate the correction for unusable fuel and record the Basic Empty Weight / Moment. Calculate and record the Basic Empty Weight CG using formula given in the form.
- i) Compare the calculated values with the permitted limits given in the Chapter 6.4.1.
- j) Record the new Basic Empty Weight / Moment in the Weight and Balance Record (Chapter 6.3).
- 4. After weighing:
 - a) Ensure all air is removed from the fuel system.
 - b) Inflate the nose and main landing gear tires to their prescribed operating pressures.

CAUTION

Remove all items, which are not a part of the aircraft equipment (including bubble-level) and close the canopy before weighing!

CAUTION

When calculating a new Basic Empty Weight / Moment pay close attention to ensure consistent usage of measuring units (U. S. Standard or Metric).

NOTE

If the deflation of the nose wheel's tire is not sufficient, install suitable pads under the nose/main wheel scales.



Pilot's Operating Handbook

- AS-POH-10-508 -----

6.2.3 Aircraft Weighing Form

Aircraft:		Serial Nu	mber: Reg.	Number:	Date:
WT9 Dynamic LS	SA / Club				
LEMAC	CG CG CG CG CG CG CG CG CG CG CG	MAC = 1.172 m 46.14 in IIIVIT LIV WW WW WW WW WW WW WW WW WW WW	2 RH		
Measured:			Calculated:		
X =	m (in)		A = X + 1.975 n	n (77.76 in)	
Y = m (in)			B=A-Y		
AIRCRAFT EMPTY WEIGHT / MOMENT AND CG AS WEIGHED (Including operating fluids without unusable fuel)					
Weighing point	Scale reading (kg / lb)	- Tare (kg / lb)	= Net weight (kg / lb)	x Arm (m / in)	= Moment (kg.m / lb.in/100)
Main LH				A =	
Main RH				A =	
Nose				B =	
Empty Weight /	Moment			CG =	
		$CG = \frac{Toto}{-}$	l Moment		
		Toto	al Weight		
	BAS (Incl	IC EMPTY WEIGH uding operating flu	HT / MOMENT AI	ND CG e fuel)_	
Unusable fuel (Add to empty air	craft weight and m	oment)	5.0 kg / 11 lb	2.580 m / 101.57 in	12.90 kg.m / 11.17 lb.in/100
Basic Empty We	eight / Moment			CG =	



Pilot's Operating Handbook

- AS-POH-10-508-

6.3 Weight and Balance Record

Aircraft: WT9 Dyn	amic	° LS∕	A / Club	Serial Nur	nber: DY-50	11/2014 LSA	Reg. Num	ber:		Page:	of:
	Ite	E E				Weight	Change			Basic	Empty
	Z	<u>.</u>	Description of Article		Added (+)		4	Removed (-)	_	, , , , , , , , , , , , , , , , , , ,	1
Late		Ċ	or Modification	Weight	Arm	Moment	Weight	Arm	Moment	weight	NOTIERI
	£	INC		kg/lb	m/in	kg.m/ Ib.in/100	kg/lb	m/in	kg.m/ Ib.in/100	kg/lb	kg.m/ Ib.in/100
24.03.2020		ı	SBLSA-916-2019	ı	ı		1	I	ı	344.6	911.16



Pilot's Operating Handbook

- AS-POH-10-508 -

6.4 Weight and Balance Determination for Flight

This part describes the procedure for calculating the weight and moment for various phases of a planned flight and ensuring the center of gravity is within approved limits. To calculate the weight and moment of a loaded aircraft use a Weight and Balance Loading Form (Chapter 6.4.2).

6.4.1 Aircraft Weight and CG Limits

The charts on Fig. 6-2 (Metric Units) and Fig. 6-3 (U. S. Standard Units) depict the aircraft's operational CG envelope in the terms of CG arm aft of reference datum and as a percentage of the MAC. The relationship between CG arm and percentage of the MAC is detailed in the Chapter 6.2.3.

	Metric Units	U. S. Standard Units
Empty weight	Max. 410.8 kg	Max. 906 lb
Empty CG range	12.5 to 13.5 %MAC	12.5 to 13.5 %MAC
Empty contaige	2.637 to 2.648 m (aft of Datum)	103.80 to 104.26 in (aft of Datum)
Basic empty CG	12.4 to 13.4 %MAC	12.4 to 13.4 %MAC
range	2.636 to 2.647 m (aft of Datum)	103.77 to 104.22 in (aft of Datum)
Forward CG	2.704 m (18.3 %MAC) at 542.5 kg	106.48 in (18.3 %MAC) at 1196 lb
(on orating limit)	with straight line taper to	with straight line taper to
(operating limit)	2.748 m (22.0 %MAC) at 600.0 kg	108.18 in (22.0 %MAC) at 1323 lb
Rearward CG	2.824 m (28.5 %) MAC) at 600.0 kg	111 19 in (28 5 % MAC) at 1222 lb
(operating limit)	2.824 III (28.3 /0MAC) at 600.0 kg	111.10 III (20.5 //IMAC) at 1525 ID

For towing operation is forward CG limited as follows:

	Metric Units	U. S. Standard Units
Forward CG (operating limit for towing operation)	2.730 m (20.5 %MAC) at 500.0 kg with straight line taper to 2.783 m (25.0 %MAC) at 600.0 kg	107.48 in (20.5 %MAC) at 1103 lb with straight line taper to 109.57 in (25.0 %MAC) at 1323 lb

ΝΟΤΕ
Operating weight and forward CG limits are restricted for towing operation.



Pilot's Operating Handbook

- AS-POH-10-508-



Fig. 6-2 Operating Weight /CG limit – Metric Units



Pilot's Operating Handbook

- AS-POH-10-508 -----



Fig. 6-3 Operating Weight /CG limit – U. S. Standard Units



Pilot's Operating Handbook AS-POH-10-508

6.4.2 Weight and Balance Loading Form

It is the responsibility of the pilot in command to ensure that the aircraft will be properly loaded within the weight and moment limits during takeoff, flight and landing. The weight and balance loading form enables the pilot to determine the aircraft loading using Loading Data (6.5) and to compare with the limits given in Weight and Moment Limits Chart (6.6).

The example is shown in the table below and on Fig. 6-4. For blank Weight and Moment Limits Chart refer to Chapter 6.6.

Weight and Balance Loading Form						
Aircraf	t:	Serial Number:	Reg. Number	:	Date:	
WT9 D	ynamic LSA / Club					
			Example	e aircraft	Your a	aircraft
No.	Item		Weight	Moment	Weight	Moment
			kg / Ib	kg.m / lb.in/100	kg / Ib	kg.m / lb.in/100
1.	Basic Empty Wei (See Chapter 6.3) (Including unusable	g ht / Moment e fuel)	350.0	922.90		
2.	Pilot (Min. 55 kg / 121 lb	o, Max. 120 kg / 265 lb)	90.0	281.70		
3.	Co-pilot (passeng (Max. 120 kg / 265	er) lb)	81.0	253.53		
4.	Baggage compart (Max. 2 x 20 kg / 2 x	ment x 44 lb)	10.0	37.95		
5.	Usable fuel (max. 85.7 kg / 189	lb)	57.6	148.61		
6.	Takeoff Weight / (Sum of lines No.	Moment 1 through 5)	588.6	1644.69		
7.	Zero Fuel Weight (Sum of lines No.	f / Moment 1 through 4)	531.0	1496.08		



Pilot's Operating Handbook

- AS-POH-10- 508 -----



Fig. 6-4 Check of flight weight/moment limits – Example (Metric Units)



Pilot's Operating Handbook AS-POH-10-508

6.4.3 Example of Calculation

TASK:

Determine the aircraft takeoff weight and moment for the following flight conditions:

- Aircraft basic empty weight 350.0 kg
- Aircraft basic empty moment 922.90 kg.m
- Pilot 90.0 kg
- Co-pilot (passenger) 81.0 kg
- Baggage

10.0 kg

• Usable fuel in tanks 57.6 kg (80 l)

CALCULATION:

NOTE Calculations of the loaded aircraft's weight and moment example are made in the metric system.

- 1. Obtain and record the aircraft data into a photocopy of the Weight and Balance Loading Form (Chapter 6.4.2).
- 2. Obtain and record the Basic Empty Weight and Moment of the aircraft in line No. 1, from the Weight and Balance Record (Chapter 6.3). For the purpose of example, the values given in the task have been used.
- 3. Obtain and record the pilot, co-pilot (passenger), baggage, usable fuel weights and moments using the loading data (Chapter 6.5) and record them appropriately in lines No. 2 through 6.
- Adding the weights in lines No. 1 through 5 the takeoff weight (line No. 6) is obtained (this must be lower than the weight limits given in Chapter 2.4. Adding the static moments in lines No. 1 through 5 the resulting static takeoff moment (line No. 6) is obtained.
- 5. Adding the weights in lines No. 1 through 4 **the zero fuel weight** (line No. 7) is obtained. Adding the static moments in lines No. 1 through 4 the resulting static **zero fuel moment** (line No. 7) is obtained.
- 6. Plot the takeoff weight and moment from line No. 6 and the zero fuel weight and moment from line No. 7 into the appropriate Weight and Moment Limits Chart (Chapter 6.6). The intersection of both values must be within the represented approved limits envelope.

The example is shown on Fig. 6-4. The aircraft's Center of Gravity Arm is calculated by dividing the aircraft's moment by the aircraft's weight.

CONCLUSION

The intersection of the takeoff weight and moment and zero fuel weight and moment are within the approved limits of the Weight and Moment Limits Chart (see Fig. 6-4). From the point of view of the aircraft weight and CG, the flight can be realized.

WARNING

Takeoff weight and CG must be calculated before each flight! Fuel consumption moves the CG rearwards, therefore the CG must be calculated for zero fuel as well!



Pilot's Operating Handbook

- AS-POH-10-508 -

6.5 Loading Data

6.5.1 Weights and Moments of Variable Masses – Metric Units

	Moment		
Weight	Pilot / co-pilot (passenger) (Arm 3.130 m)	Baggage (Arm 3.795 m)	Fuel (Arm 2.580 m)
kg	kg.m	kg.m	kg.m
2		7.59	5.16
4		15.18	10.32
6		22.77	15.48
8		30.36	20.64
10		37.95	25.80
12		45.54	30.96
14		53.13	36.12
16		60.72	41.28
18		68.31	46.44
20		75.90	51.60
25		94.88	64.50
30		113.85	77.40
35		132.83	90.30
40		151.80	103.20
45			116.10
50			129.00
55	172.15		141.90
60	187.80		154.80
65	203.45		167.70
70	219.10		180.60
75	234.75		193.50
80	250.40		206.40
85	266.05		219.30
90	281.70		232.20
95	297.35		
100	313.00		
105	328.65		
110	344.30		
115	359.95		
120	375.60		



Pilot's Operating Handbook

- AS-POH-10-508-



Fig. 6-5 Weights and moments of variable masses chart – Metric Units



Pilot's Operating Handbook

- AS-POH-10-508 -

6.5.2 Weights and Moments of Variable Masses – U. S. Standard Units

Moment			
Weight	Occupants (Arm 123.23 in)	Baggage (Arm 149.41 in)	Fuel (Arm 101.57 in)
lb	lb.in/100	lb.in/100	lb.in/100
5		7.47	5.08
10		14.94	10.16
15		22.41	15.24
20		29.88	20.31
25		37.35	25.39
30		44.82	30.47
35		52.29	35.55
40		59.76	40.63
45		67.23	45.71
50		74.70	50.79
60		89.65	60.94
70		104.59	71.10
80		119.53	81.26
90		134.47	91.42
100			101.57
110			111.73
120	147.87		121.89
130	160.20		132.05
140	172.52		142.20
150	184.84		152.36
160	197.16		162.52
170	209.49		172.68
180	221.81		182.83
190	234.13		192.99
200	246.46		203.15
210	258.78		
220	271.10		
230	283.42		
240	295.75		
250	308.07		
260	320.39		
270	332.72		



Pilot's Operating Handbook

- AS-POH-10-508-



Fig. 6-6 Weights and moments of variable masses chart – U. S. Standard Units



Pilot's Operating Handbook

- AS-POH-10-508 ----

6.5.3 Fuel Quantity and Weight Conversion Chart – Metric Units



Fig. 6-7 Fuel quantity and weight conversion chart – Metric Units



Pilot's Operating Handbook

- AS-POH-10-508-

6.5.4 Fuel Quantity and Weight Conversion Chart – U. S. Standard Units



Fig. 6-8 Fuel quantity and weight conversion chart – U. S. Standard Units



Pilot's Operating Handbook

- AS-POH-10-508 -

6.6 Weight and Moment Limits Chart

6.6.1 Metric Units



Fig. 6-9 Operating weight and moment chart – Metric Units



Pilot's Operating Handbook

- AS-POH-10-508-

6.6.2 U. S. Standard Units



Fig. 6-10 Operating weight and moment chart – U. S. Standard Units



Pilot's Operating Handbook

- AS-POH-10-508 ----

6.7 Equipment List

Item	Type, model or P/N	Qty	Installed
Engine	Rotax 912 ULS2	1	V
Propeller	SR 2000DN	1	V
Battery	GP12170	1	V
ELT	406 AF-COMPACT	1	V
Parachute rescue system	Magnum 601 S-LSA	1	M
Safety belts	Schroth 4-01-4J0215	2	V
Fuel selector	FS15x2	1	M
Nose wheel rim	Beringer RA-009; 4.00-6" SL,	1	M
Nose wheel tire	13x5.00-6	1	V
Nose wheel fairing	D32200900A	1	V
Main wheel rims	Beringer RF-004; 4.00-6" SL	2	M
Main wheel tires	15x6.00-6	2	V
Main wheel fairing - left	D32110100A	1	V
Main wheel fairing - right	D32120100A	1	V
Brake system	Beringer	1	V
NAV/ACL lights	AVE-WPSTR/G-64T	2	V
Landing lights	LED N6130-001	1	V
Flight Display screen	SV-D1000	1	V
MFD screen	SV-D1000	1	V
ADAHRS module	SV-ADAHRS-200	1	V
EMS module	SV-EMS-220	1	V
GPS module	SV-GPS-250	1	V
SkyView backup battery	SV-BAT-320	2	V
OAT probe	SV-OAT-340	1	V
Transponder Mode S	GTX328	1	\checkmark
Magnetic compass	C2400P	1	V
VHF/VOR	GNC 255A	1	V
Airspeed indicator	7FMS511	1	V
Altimeter	4FGH40	1	V
Vertical speed indicator	5StVM10	1	V
Slip indicator	QMII	1	V
Intercom	PM1000II	1	$\mathbf{\nabla}$
Engine hours counter	Honeywell 85094	1	\checkmark
Flight hours counter	Winter FSZM	1	\checkmark
Fuel pressure indicator	FP-912/12	1	V
Prop. regulator / RPM indicator	PR1-P	1	V
Pitot-static probe	D34100100A	1	V



Pilot's Operating Handbook

- AS-POH-10-508----

Item	Type, model or P/N	Qty	Installed
VHF antenna	SP 2000	1	V
Transponder antenna	AV-22	1	V
ELT antenna	AK 451.017-1B	1	V
GPS antenna	SV-GPS-250	1	V
VOR antenna	CI 158C	1	V
Water thermostat	Silent Hektik F1102	1	V
Oil thermostat	Silent Hektik F1110	1	M
Electric fuel pump	MSI E1F	1	V
Fuel flow transducer	FT-60	1	V
Autopilot roll / pitch servos	SV-32 / SV-42	1/1	M
Drain fuel valves	CAV-180	4	V
Keyed ignition switch	Hella 6JK 007 232-001	1	V
Master switch	Arco C3960BB	1	V
	ETA 106-M2-P10-xA	18	V
Circuit breakers	Klixon 7277-2-x	1	V



Pilot's Operating Handbook

- AS-POH-10-508 -----

This page is left blank intentionally





7 DESCRIPTION OF AIRCRAFT AND SYSTEMS

TABLE OF CONTENTS

7.1	GENERAL	7-3
7.2	AIRFRAME	7-3
7.2.1	Fuselage	7-3
7.2.2	Wing	7-3
7.2.3	Empennage	7-3
7.3	FLIGHT CONTROLS	7-4
7.3.1	Aileron Control System	7-4
7.3.2	Elevator Control System and Pitch Trim	7-5
7.3.3	Rudder Control System	7-6
7.4	FLIGHT DECK ARRANGEMENT	7-7
7.4.1	Left Section of Instrument Panel	7-9
7.4.2	Center Section of Instrument Panel	7-9
7.4.3	Right Section of Instrument Panel	
7.4.4	Center Console and Pedestal Panel	7-11
7.5	FLIGHT INSTRUMENTS	7-12
7.5.1	Altitude Indicator	7-12
7.5.2	Airspeed Indicator	7-12
7.5.3	Magnetic Compass	7-12
7.5.4	Flight Display	7-13
7.5.5	Vertical Speed Indicator	7-17
7.5.6	Slip Indicator	7-17
7.6	GROUND CONTROL	7-17
7.7	WING FLAPS	7-18
7.8	LANDING GEAR	7-19
7.8.1	Main Gear	7-19
7.8.2	Nose Gear	



Pilot's Operating Handbook

- AS-POH-10-508 ----

7.9	BAGGAGE COMPARTMENT7-19
7.10	SEATS AND SAFETY BELTS7-20
7.11	RUDDER PEDALS
7.12	CANOPY
7.13	CONTROL SYSTEM LOCK
7.14	ENGINE
7.14.1	Engine Controls
7.14.2	Cooling System
7.14.3	Exhaust System
7.14.4	Air Induction System
7.14.5	Oil System
7.14.6	Ignition and Starter System7-26
7.14.7	Engine Instruments
7.15	PROPELLER
740	
7.16	FUEL SYSTEM
7.16 7.16.1	FUEL SYSTEM 7-33 System Description 7-33
7.16 7.16.1 7.16.2	FUEL SYSTEM 7-33 System Description 7-33 Fuel Management 7-35
7.16.1 7.16.2 7.16.3	FUEL SYSTEM7-33System Description7-33Fuel Management7-35Fuel Measurement System7-35
7.16.1 7.16.2 7.16.3 7.17	FUEL SYSTEM7-33System Description7-33Fuel Management7-35Fuel Measurement System7-35BRAKE SYSTEM7-37
7.16.1 7.16.2 7.16.3 7.17 7.18	FUEL SYSTEM 7-33 System Description 7-33 Fuel Management 7-35 Fuel Measurement System 7-35 BRAKE SYSTEM 7-37 ELECTRIC SYSTEM 7-38
7.16.1 7.16.2 7.16.3 7.17 7.18 7.19	FUEL SYSTEM7-33System Description7-33Fuel Management7-35Fuel Measurement System7-35BRAKE SYSTEM7-37ELECTRIC SYSTEM7-38CABIN HEATING AND VENTILATION7-39
7.16 7.16.1 7.16.2 7.16.3 7.17 7.18 7.19 7.20	FUEL SYSTEM7-33System Description7-33Fuel Management7-35Fuel Measurement System7-35BRAKE SYSTEM7-37ELECTRIC SYSTEM7-38CABIN HEATING AND VENTILATION7-39PITOT-STATIC SYSTEM7-41
7.16 7.16.1 7.16.2 7.16.3 7.17 7.18 7.19 7.20 7.21	FUEL SYSTEM7-33System Description7-33Fuel Management7-35Fuel Measurement System7-35BRAKE SYSTEM7-37ELECTRIC SYSTEM7-38CABIN HEATING AND VENTILATION7-39PITOT-STATIC SYSTEM7-41STALL WARNING SYSTEM7-42
7.16 7.16.1 7.16.2 7.16.3 7.17 7.18 7.19 7.20 7.21 7.22	FUEL SYSTEM7-33System Description7-33Fuel Management7-35Fuel Measurement System7-35BRAKE SYSTEM7-37ELECTRIC SYSTEM7-38CABIN HEATING AND VENTILATION7-39PITOT-STATIC SYSTEM7-41STALL WARNING SYSTEM7-42EMERGENCY PARACHUTE SYSTEM7-43
AEROSPOOL

Pilot's Operating Handbook AS-POH-10-508

7.1 General

This chapter provides a description and operation of the aircraft and its systems. Some equipment, primarily avionics is not described in this section. For detailed description and operation of this equipment refer to OEM manual.

7.2 Airframe

7.2.1 Fuselage

The fuselage structure consists of glass and carbon fiber sandwich composite, that produces a smooth and seamless surface. The structure is stiffened using firewall, bulkheads, ribs, stiffeners and interior components creating the cockpit. Major items of the structure are main and auxiliary spars to which the wings are attached. Each wing is attached to the fuselage by means of two main pins and one auxiliary pin.

The cockpit is limited by a firewall in the front and backrest in the rear. In the middle of the cockpit there is a center tunnel which divides the cockpit for left and right side. The cockpit provides seating for two adults and the seats are arranged side by side. The cockpit is non-pressurized.

The baggage compartment is located between the backrest and baggage compartment bulkhead. The baggage compartment is divided in two sections by a center tunnel.

Integral fuel tanks are located in the forward box of the wing center section on the left and right side of the fuselage.

7.2.2 Wing

The wing consists of glass and carbon fiber sandwich composite, that produces a smooth and seamless surface. The construction of the wing includes conventional design with main spar, rear shear web, root rib and fuel tank ribs. The upper and lower skins are bonded to the spars, ribs and rear shear web. Wing spar, rear shear web and skins form two torsion boxes. The wing tip is fitted a winglet.

The wing main spar is attached to the center section spar by means of two main pins. The rear shear web of the wing is attached to the auxiliary spar by means of one auxiliary pin.

There are integral fuel tank situated in the forward box of the wing root section in both wings. The wing fuel tanks are connected to the fuselage fuel tank by a simple hose connection. The wing and fuselage tanks are also conductively connected.

Stall strips, which improve the stall characteristics are installed on the wing leading edges.

7.2.3 Empennage

The conventional cruciform tail consists of a vertical stabilizer with a rudder, and horizontal stabilizer with elevator.

The vertical stabilizer consists of glass and carbon fiber sandwich composite. The construction of the vertical stabilizer includes skin, rear web and tip rib. The vertical stabilizer is an integral part of the fuselage. The rudder is attached to the vertical stabilizer's rear web by means of three hinges.

The horizontal stabilizer consists of glass and carbon fiber sandwich composite. The horizontal stabilizer is a single composite structure from tip to tip. It is bonded to the fuselage. The construction of the horizontal stabilizer includes upper and lower skin, partial span middle webs, rear web and root ribs. The two-piece elevator is attached to the horizontal stabilizer rear web by means of four hinges and one center hinge.



Pilot's Operating Handbook

AS-POH-10-508 -

7.3 Flight Controls

The aircraft has conventional flight control systems for ailerons, elevator and rudder. The aircraft has dual controls with two control sticks and two pairs of rudder pedals.

7.3.1 Aileron Control System

The ailerons provide aircraft roll control. The aileron consists of glass fiber sandwich composite, that produces a smooth and seamless surface. The construction of the aileron includes skin, web, root and tip ribs. The aileron is attached to the upper skin of the wing by means of three hinges. The aileron has a mass balance weight attached in front of hinge line. The gap between aileron and wing is sealed using sealing tapes. The effectiveness of the control surface decreases if the sealing tapes become unglued.

The ailerons are controlled by control sticks through a mechanical linkage consisting of push-pull rods and levers (Fig. 7-1).



Fig. 7-1 Aileron control

AERO

Pilot's Operating Handbook

- AS-POH-10-508-

7.3.2 Elevator Control System and Pitch Trim

The two-piece elevator provides aircraft pitch control. The elevator consists of glass fiber sandwich composite, that produces a smooth and seamless surface. The construction of the elevator includes skin, root and tip rib. Each piece of elevator is attached to the horizontal stabilizer by means of two hinges and one center hinge in the middle that joints both pieces of the elevator. Each piece of elevator has a mass balance weight located in its horn. The gap between elevator and horizontal stabilizer is sealed by the sealing tapes. Unglued sealing tapes cause a significant decrease of the effectiveness of the control surfaces.

The elevator is controlled by control sticks through mechanical linkage consisting of push-pull rods and levers (Fig. 7-2).

The aircraft is equipped with a manually operated pitch trim. The pitch trim system deflects the elevator. The pitch trim consists of one carbon composite leaf spring located in the central tunnel in front of the main spar and connected to the control stick's torsion tube. The pitch trim is operated by a lever on the pedestal panel with a toothed self-locking mechanism. The trim position is indicated by the trim lever.



Fig. 7-2 Elevator control



Pilot's Operating Handbook

- AS-POH-10-508 ----

7.3.3 Rudder Control System

The rudder provides aircraft directional (yaw) control. The rudder consists of glass fiber sandwich composite, that produces a smooth and seamless surface. The construction of rudder includes skin, root and tip rib. The rudder is attached to the vertical stabilizer's rear web by means of three hinges. The rudder has a mass balance weight located in its horn. The gap between rudder and vertical stabilizer is sealed by the sealing tapes. Unglued sealing tapes cause a decrease of the effectiveness of the control surface.

The rudder is controlled by rudder pedals through a mechanical linkage consisting of steel cables. Rudder pedals also control steering of the nose gear leg to which is connected by means of push-pull rods (Fig. 7-3).



Fig. 7-3 Rudder control

Page 7-6



- AS-POH-10-508-

7.4 Flight Deck Arrangement

The instrument panel is glass/carbon composite construction attached to the center tunnel and both sides of fuselage. In the middle, the top edge is supported with a strut. Glare shield overlaps the instrument panel to limits undesirable reflections on instruments. The instrument panel is divided into three sections: left, center and right. Controls are also installed on the center console and pedestal panel. On both the left and right side under the instrument panel there are remote controls for adjustment of rudder pedals. The instrument panel is arranged primarily for use by the pilot sitting in the left seat (Fig. 7-4).



1.	Flight display	10.	RH FUEL RES. warning lamp - right tank
2.	Multifunction display (MFD)	11.	EMS warning lamp
3.	Altimeter	12.	OIL PRESS. warning lamp
4.	Airspeed indicator	13.	CHARGE warning lamp
5.	USB connector (LH-D1000)	14.	TEST button
6.	FUEL PUMP control lamp	15.	Radio
7.	ENGINE FIRE warning lamp	16.	Intercom
8.	STALL warning lamp	17.	Variometer
9.	LH FUEL RES. warning lamp - left tank	18.	Magnetic compass

Fig. 7-4 Instrument panel and controllers layout (Continued on following page)



Pilot's Operating Handbook

- AS-POH-10-508 ----



19.	Propeller regulator	35.	FUEL PUMP switch
20.	Transponder	36.	IGNITION switches
21.	ELT remote control	37.	TOW RELEASE handle
22.	Engine hours counter Hobbs	38.	THROTTLE controller
23.	USB connector (RH-D1000)	39.	CARBUR. PREHEATING controller
24.	Fuel pressure indicator	40.	FUEL selector
25.	Flight hours counter	41.	TRIM controller
26.	Circuit breakers (see 7.4.3)	42.	Brake lever
27.	Pedals adjustment handle	43.	MASTER SWITCH
28.	12 V / 10 A Power outlet	44.	Starter key
29.	Slip indicator	45.	RESCUE SYSTEM actuator
30.	AP/CWS ON/OFF switch (autopilot)	46.	CABIN HEATING control
31.	AVIONICS switch	47.	CABIN VENTILATION control
32.	AP switch (autopilot)	48.	CHOKE control
33.	NAV / ACL lights switch	49.	Flaps controller
34.	LAND lights switch	-	-

Fig. 7-4 Instrument panel and controllers layout



· AS-POH-10-508-

7.4.1 Left Section of Instrument Panel

The Flight Display Dynon SkyView SV-D1000 is installed in the middle of the left section. The Flight Display is landscape oriented and displays the flight parameters.

To the left from the Flight Display the airspeed indicator, altimeter and slip indicator are installed, together with the USB connector labelled **LH D1000** that is intended to import flight plans and export logs.

Under the Flight Display the following switches are installed: **AP/CWS ON/OFF, AVIONICS**, **AP, NAV/ACL** (anti-collision lights), **LAND** (landing lights) and **FUEL PUMP**.

Above the Flight Display is an area for control and warning lamps **FUEL PUMP, ENGINE FIRE, STALL, LH FUEL RES., RH FUEL RES., EMS, OIL PRESS.** and **CHARGE** and **TEST** button.

In the left lower corner 12 V / 10 A power socket output is located.



7.4.2 Center Section of Instrument Panel

In the center section there are installed transponder, radio, intercom, vertical speed indicator and propeller regulator. At the bottom of center section there are installed **IGNITION** switches, starter key and **MASTER SWITCH**.

NOTE

For complete operating procedures of appropriate equipment refer to OEM manuals.



Pilot's Operating Handbook

- AS-POH-10-508 -

7.4.3 Right Section of Instrument Panel

Engine Monitoring System Display (EMS) Dynon SkyView SV-D1000 is installed in the middle of right section. The EMS is landscape oriented display intended to display engine information.

The engine hours counter and ELT remote control are installed above the EMS display.

In the right section the fuel pressure indicator and flight hours counter are installed together with the USB connector labelled **RH D1000** that is intended to import flight plans and export logs.

In the right lower corner 12 V / 10 A power socket output is located.

Circuit breakers are placed in a row at the lower and right part of the right section. A list of circuit breakers with their values is shown in the table below.

CAUTION The USB connector is not intended for charging devices! The power socket is intended for power supply of external devices only! NOTE For complete operating procedures of appropriate equipment

refer to OEM manuals.

Marking	Protected instrument	Circuit breaker value (A)
AVIONICS	Avionics relay	1
NAV/ACL	Anti-collision lights	5
LAND	Landing lights	1
FUEL PUMP	Fuel pump	2
СОММ	Radio (COMM)	10
XPDR	Transponder	5
LH D1000	LH Dynon SkyView SV-D1000	8
RH D1000	RH Dynon SkyView SV-D1000	8
OIL PRESS.	Low oil pressure warning	1
FUEL RES.	Low fuel level warning	1
SOC. 12V	LH and RH socket 12 V / 10 A	10
АР	Autopilot	5
SVI	Engine hours counter Flight hours counter	1
TIS	Traffic Information System	1
PROPELLER	Propeller regulator	10
ENGINE FIRE	Engine fire detector	1
STALL	Stall warning system	1
NAV	Radio (NAV)	4
INTERCOM	Intercom	1



Pilot's Operating Handbook AS-POH-10-508

7.4.4 Center Console and Pedestal Panel

The center console is located under the instrument panel and contains the following controls:

- Throttle control labelled THROTTLE
- Emergency parachute system actuator labelled RESCUE SYSTEM
- Carburetor preheating control labelled CARBUR. PREHEATING PULL TO OPEN
- Cabin venting control labelled CABIN VENTILATION PULL TO OPEN
- Cabin heating control labelled CABIN HEATING PULL TO OPEN
- FUEL selector
- Choke control labelled CHOKE PULL TO OPEN

The pedestal panel is located between pilot and co-pilot and contains the following controls:

- Wing flap control with positions FLAPS 0, FLAPS 1, FLAPS 2 and FLAPS 3
- Pitch trim control labelled TRIM
- Brake lever with positions **PARK** and **MAX**



Pilot's Operating Handbook

- AS-POH-10-508 ----

7.5 Flight Instruments

WARNING

Carefully read the accompanying documentation of all installed avionics before the flight! Do not learn how to operate the avionics during flight!

7.5.1 Altitude Indicator

The primary altitude indicator is analogue three-pointer altimeter Winter. The backup altitude is displayed by Dynon SkyView SV-D1000.

The analogue altimeter and backup ADAHRS module sense the local barometric pressure adjusted for altimeter setting and display the result on the instruments.

Barometric window allows barometric calibration in millibars (mbar). The barometric altimeter setting of analogue altimeter is input through the barometric adjustment knob at the lower left of the instrument. The barometric altimeter setting of Dynon SkyView SV-D1000 altimeter is input through the knob when set to **BARO**.

7.5.2 Airspeed Indicator

The primary airspeed indicator is an analogue airspeed indicator Winter. Backup airspeed is displayed by Dynon SkyView SV-D1000.

The analogue airspeed indicator and backup ADAHRS module sense the difference in static and total pressure and display the airspeed.

Airspeed indicator on Dynon SkyView SV-D1000 displays indicated airspeed, true airspeed (TAS) and ground airspeed (GS).

Airspeed indicators have marking according to Chapter 2.2.1.

7.5.3 Magnetic Compass

The primary magnetic compass is installed in the center section on the instrument panel glare shield. Backup compass is displayed by Dynon SkyView SV-D1000.



Pilot's Operating Handbook

- AS-POH-10-508-

7.5.4 Flight Display

Aircraft is fitted with Flight Display Dynon SkyView SV-D1000 (LH display) which displays flight parameters listed below. Flight Display also displays engine parameters listed in the Chapter 7.14.7.

- Airspeed indicator
- Altimeter
- Attitude indicator
- Vertical speed indicator
- Slip/Skid ball
- Compass rose / directional gyro
- G-meter
- OAT
- Angle of attack indicator
- Other data: time, radio and transponder status

NOTE

For more details refer to Dynon Avionics SkyView System Pilot's Guide, Document No. 101321-016 (revision Q or later).

Flight Display displays the information in the following screen arrangements:

- EFIS with compass rose / EMS arrangement screen 1 (Fig. 7-5)
- EFIS with g-load indication / EMS arrangement screen 2 (Fig. 7-6)
- EFIS with analogue instruments design / EMS arrangement screen 3 (Fig. 7-7)
- EFIS with compass rose / MAP / EMS arrangement screen 4 (Fig. 7-8)
- EFIS with g-load indication / MAP / EMS arrangement screen 5 (Fig. 7-9)
- EFIS with analogue instruments design / MAP / EMS arrangement screen 6 (Fig. 7-10)

Note: If g-loads (0.0 / +2.0) are exceeded, the compass rose is automatically replaced by g-load indication.

NOTE

The airspeed indicator on the screen arrangements is displayed in km/h only for illustration.



Pilot's Operating Handbook

- AS-POH-10-508 ----



Fig. 7-5 Arrangement screen 1



Fig. 7-6 Arrangement screen 2



Pilot's Operating Handbook

AS-POH-10-508-



Fig. 7-7 Arrangement screen 3



Fig. 7-8 Arrangement screen 4



Pilot's Operating Handbook

- AS-POH-10-508 ----



Fig. 7-9 Arrangement screen 5



Fig. 7-10 Arrangement screen 6



- AS-POH-10-508-

7.5.5 Vertical Speed Indicator

Aircraft rate of climb is displayed by Dynon SkyView SV-D1000 and analogue vertical speed indicator. The ADAHRS module and analogue vertical speed indicator sense the rate of change in static pressure from a reference pressure and displays the result in climb or descent.

7.5.6 Slip Indicator

Slip indicator is displayed by the Dynon SkyView SV-D1000. In addition a slip indicator is installed in the left section of the instrument panel.

7.6 Ground Control

Rudder pedals (see Chapter 7.11) are connected to the nose gear leg by means of push-pull rods and allow steering of nose wheel (Fig. 7-3). Minimum radius of turn for ground handling is in Chapter 1.3.5.



Pilot's Operating Handbook

AS-POH-10-508 -

7.7 Wing Flaps

The single-slotted wing flaps provide low speed lift enhancement. The wing flap consists of glass fiber sandwich composite, that produces a smooth and seamless surface. The construction of flap includes skin, web, root and tip rib. The flap is attached to the wing and fuselage by means of four hinges.

The wing flaps are operated manually by a lever on the pedestal panel. The wing flap lever moves in a slotted link which indicates four positions: **FLAPS 0** (flaps retracted 0°), **FLAPS 1** (takeoff position 15°), **FLAPS 2** (landing position 24°) and **FLAPS 3** (emergency landing position 35°). Wing flap lever is joined to the flap's torsion tube by means of push-pull rod and lever. Torsion tube mechanically interconnects both wing flaps. There is a booster (gas strut) in the flap control system. The booster decreases the pilot effort when extending the wing flaps.

The flaps position is set by gripping the handle, pressing the buttons on the underside of the handle with fingers and pulling the handle to the desired position. The position is automatically locked after the buttons are released (Fig. 7-11).



Fig. 7-11 Wing flaps control



Pilot's Operating Handbook AS-POH-10-508

7.8 Landing Gear

7.8.1 Main Gear

The aircraft is equipped with a fixed landing gear nose wheel. Main landing gear consists of composite legs that are attached to the ribs of fuselage center section. The main wheels are bolted to the composite legs. The main wheels are equipped with hydraulically operated single-disc type brakes.

Each main wheel has a 15x6.00-6 tubeless tire installed.

The main wheels are equipped with wheel fairings. The wheel fairings are removable to provide access to the tires and brakes.

7.8.2 Nose Gear

The nose gear leg is tubular steel construction attached to the firewall. The nose wheel is steerable, controlled by the rudder pedals. The suspension is ensured by means of rubber damper and rubber bungies.

The nose wheel has a 13x5.00-6 tubeless tire installed.

The nose wheel is equipped with a wheel fairing. The wheel fairing is removable to provide access to the tire.

7.9 Baggage Compartment

The baggage compartment is located between the occupant's backrest and baggage bulkhead. A center tunnel divides the baggage compartment into left and right sections. Each section is equipped with 4 attachment points for baggage restraints. The baggage compartment is suitable for longer or bulky items. The baggage must be restrained.

To restrain the baggage:

- Thread the straps through the attachment points and position them over baggage. If possible, thread the straps through the baggage handles.
- Tighten the straps to restrain the baggage and lock the buckle.

To loosen the baggage:

- Release the buckle and loosen the straps.
- Slip out the baggage from the straps

WARNING

All baggage must be safely restrained before the flight!

Loose objects in the baggage comp. may injure the occupants!

WARNING

The maximum baggage weight must not be exceeded!

The baggage weight must be included in the weight and balance

calculation!



Pilot's Operating Handbook

- AS-POH-10-508 -

7.10 Seats and Safety Belts

There are seats for two occupants in the cockpit. The shape of cockpit and removable composite seat pan forms the seat. The seat is equipped with removable upholstered cushions.

Each seat is equipped with 4-point safety belts. Waist belts are attached to the center tunnel and interior sidewalls and harness belts are attached to the backrest.

To use the safety belts (Fig. 7-12):

- Sit in a comfortable position and centre the buckle (F) over hips for maximum comfort and safety.
- Insert the waist belt anchor (A) into buckle (F) and lock it.
- Thread the harness belts over the shoulders, insert the belt anchors (B) into the buckle (F) and lock them. To loosen the belts, pull the top edge of adjusting clip (D) outwards and loosen the belt (E) as required.
- Tighten the seat belts by pulling the loose ends (C). Seat belts should fit snugly against the shoulder with the lap buckle centre and tightened around the hips.

To release the safety belts (Fig. 7-12):

• Turn the buckle (F) to release the belt anchors (G).

WARNING

The pilot and passenger must use the safety belts during all phases of the flight! The safety belts (waist and shoulder belts) must be securely fastened!

WARNING

Safety belts must be fastened even if the seat is unoccupied during the flight!

CAUTION

The seat bottom has a composite sandwich construction. To avoid crushing the seat structure, do not kneel or stand on the seats!



Fig. 7-12 Safety belts



- AS-POH-10-508-

7.11 Rudder Pedals

Position of rudder pedals is adjustable to three positions individually for both pilot and co-pilot. To adjust the pedals first set the rudder control to neutral position (nose gear straight). Pull the pedal's adjustment handle (Fig. 7-4). When the pedals are released, the springs will automatically try to set the pedals to aft position. Push both pedals equally to set them in mid or forward position. The position is locked when the handle is released.





Pilot's Operating Handbook

AS-POH-10-508 -

7.12 Canopy

The cockpit canopy consists of one part. The windshield is bonded on the composite frame.

The canopy is hinged forward and opens upside-forward directions with the assistance of gas struts that counterbalance the weight of the canopy and hold the canopy open. Access to the cockpit is from both sides.

Canopy handle and lock levers are located in the center of canopy frame above the pilot / co-pilot. Canopy handle is used for lifting and closing the canopy from interior. The locking mechanism is used for safe locking of canopy and can be operated from interior and exterior by lock levers. The lock lever in the interior is equipped with a red ring indicating locked position of the canopy.

To open the canopy from outside, push the lock lever forwards with one hand (Fig. 7-13, A), grab the NACA intake on the canopy side with the other hand and pull to lift the canopy. To open the canopy from inside, pull the lock lever forwards with one hand (Fig. 7-13, A), grab the canopy handle with the other hand and push to lift the canopy.

To close the canopy from outside, grab the canopy handle and pull the canopy downwards until it latches, then press slightly on the canopy near the lock until the lock lever slides rearwards (Fig. 7-13, B). To close the canopy from inside, grab the canopy frame with one hand and lower the canopy. Then grab the canopy handle with the other hand and pull downwards until the lock lever slides rearwards and the red ring indicates correct locking. Push the canopy handle upwards slightly to ensure the canopy is properly latched and locked (Fig. 7-13, B).

Make sure that the canopy is latched and locked before operating the aircraft. Due to airflow and function of gas struts the canopy can open spontaneously during straight line flight or sideslip. Correct/incorrect latching and locking are illustrated on Fig. 7-13.



CORRECT latching and locking

WRONG!

CORRECT latching and locking



Latched (2) but partially locked (1) Clearly locked (1) but unlatched (2)
WRONG! WRONG!





- AS-POH-10-508-

7.13 Control System Lock

The aircraft control system is not equipped with control locks.

The pitch trim spring has a sufficient power to act as a gust damper when the pitch trim is set fully forward.

The rudder control is connected with the nose wheel and this connection acts as a control lock.

To lock the aileron control systems set the ailerons to neutral position and fix them to the wing on the trailing edge using adhesive tape.

WARNING

Remove the aileron control locks before flight!

CAUTION

Set the pitch trim fully forward and engage the aileron control locks when parking the aircraft in windy weather to avoid of control system damage due to gusts!



Pilot's Operating Handbook

AS-POH-10-508 -

7.14 Engine

Aircraft is powered by a 4 cylinder, horizontally opposed, air and water cooled, carburetor 4-stroke engine ROTAX 912 ULS2 with maximum takeoff power 73.5 kW (100 hp) at 5800 rpm (Fig. 7-14). Major accessories include gearbox, starter, dual capacitor discharge ignition, alternator, engine driven fuel pump and oil filter mounted on the left side of engine block.

Engine is attached to the airframe by means of a metal tube engine mount through the rubber engine mounts.



1.	Overflow bottle	9.	Air filter
2.	Oil tank	10.	Airbox
3.	Carburetor	11.	Engine air intake hose
4.	Oil thermostat	12.	Cabin venting air hose
5.	Oil cooler	13.	Ram air tunnel
6.	Ignition	14.	Oil cooler holder
7.	Expansion tank	15.	Cooling air distributor
8.	Regulator	-	-

Fig. 7-14 Engine installation components





AS-POH-10-508

7.14.1 Engine Controls

The throttle control labelled **THROTTLE** is a black knob installed in the center console (Fig. 7-15). It is configured so that the throttle is opened in the forward position and closed in the full aft position. Throttle control is operated by rotating the knob in clockwise direction for increase (A) or counter clockwise for decrease (B) of engine speed. For rapid or large adjustments, the knob may be moved forward for increase (D) or backward for decrease (E) of engine speed by depressing the lock button (C) at the end of throttle control and then re-positioning the throttle control as desired. Friction of the throttle control is adjusted by rotating the knob (F) on the bottom of the control handle clockwise

Friction of the throttle control is adjusted by rotating the knob (F) on the bottom of the control handle clockwise for increase and counter clockwise for decrease of friction. The throttle control is mechanically linked by steel cables with the carburetors.

The choke control, labelled **CHOKE** is a grey handle located in the center console. The mixture is enrichened as the controller is pulled out. The richest mixture is set at the full aft position of the controller The **CHOKE** may be used only on the ground and for cold engine start only.



Fig. 7-15 Throttle controller

7.14.2 Cooling System

The engine has both a water and an air cooling system.

The water cooling system consists of a water radiator installed in the lower engine cowling. The system is equipped with a water thermostat that keeps the coolant temperature in optimum range.

The air intakes to cool the engine compartment are located on the upper engine cowling and on the left side from spinner. The cooling air from spinner left side is distributed directly to the cylinders by means of cooling air distributor. Cooling air baffled in the engine compartment discharges under the aircraft.



Never check the coolant level when the engine is hot! Always let the engine cool down to ambient temperature!



Pilot's Operating Handbook

AS-POH-10-508 -

7.14.3 Exhaust System

Exhaust gases from each cylinder pass through the exhaust manifolds to a muffler that is attached to the engine mount. Exhaust gases exit through an exhaust pipe on the left side.

A shroud around the muffler forms a heating exchanger providing warm air for cabin heating.

7.14.4 Air Induction System

The engine air induction system receives air through an intake tunnel bonded to the left side of lower engine cowling. The air flows through an air hose to the air filter holder. There is a shroud on the muffler which preheats the air flowing to the air filter holder.

The air filter holder is equipped with a preheating system controlled by a yellow square control knob labelled **CARBUR. PREHEATING**. Warm intake air is adjusted at full aft position and the ambient temperature intake air is adjusted at full forward position of the carburetor preheating control. Depending on the carburetor preheating control setting, ram air and preheated air are mixed together and enter through the air filter to the airbox. The airbox is connected to both carburetors.

The use of carburetor preheating results in engine power and engine speed decrease. The temperature of air in the airbox is indicated the airbox temperature indicator on the instrument panel. Carburetor preheating is used only in the case of carburetor or air filter icing.



7.14.5 Oil System

The engine is provided with a dry sump forced lubrication system with a main oil pump, integrated pressure regulator and oil pressure sensor. The oil pump draws the engine oil from the oil tank through the oil thermostat (low oil temperature) or also through oil cooler (high oil temperature). Oil cooler is attached in the ram air tunnel on the right side of lower engine cowling.

The oil pump forces the oil through the oil filter to the points of lubrication in the engine. The surplus oil emerging from the points of lubrication accumulates in the bottom of crankcase and is forced back to the oil tank by the piston blow-by gases. The oil pump is driven by the camshaft.

The oil temperature sensor for reading of the oil inlet temperature, and the oil pressure sensor are located on the oil pump housing.

The oil tank is attached to the firewall on the right side and oil level check is available through the cowl oil door in the upper engine cowling. The oil tank is vented and discharges under the aircraft.

7.14.6 Ignition and Starter System

The engine is equipped with dual ignition electronic modules, with an integrated AC generator. The ignition unit needs no external power supply. Two independent charging coils located on the generator stator supply one ignition circuit each. The energy is stored in capacitors of the electronic modules.

There are two spark plugs in each cylinder. Normal operation is conducted with both ignition circuits ON due to the more complete burning of the fuel/air mixture with dual ignition.

Ignition circuits are controlled by switches on the instrument panel labelled **IGNITION**. Starter is operated by a keyed ignition switch installed in the instrument panel. When the key is rotated to **START** position (with **MASTER SWITCH** in the ON position), the starter is energized and will crank the engine.



Pilot's Operating Handbook

- AS-POH-10-508-

7.14.7 Engine Instruments

Aircraft is fitted with Multi-Function Display (MFD) Dynon SkyView SV-D1000 (RH display) which displays engine parameters listed below. MFD also display flight parameters listed in the Chapter 7.5.4. Exceeding any of the engine parameters (any parameter is in red range) is signalized by a warning lamp **EMS** on the instrument panel.

- Manifold pressure (MAP)
- Engine RPM (RPM)
- Exhaust gas temperature (EGT)
- Oil temperature (OIL °C)
- Oil pressure (OIL BAR)
- Coolant (COOLNT °C)
- Airbox temperature (AIRBOX °C)
- Fuel pressure (FUEL BAR)
- Fuel flow (FLOW LTR/HR)
- Fuel level (LEFT LTR, RIGHT LTR)
- Voltage (BATT VOLTS)
- Current (AMPS AMPS)
- Ignition (MAG A, MAG B)
- Other data: consumed fuel volume (LTRS USED), remaining flight time (TIME REM), actual operational range (RANGE), fuel volume at next way-point (WPT LTR)

NOTE For more details refer to Dynon Avionics SkyView System Pilot's Guide, Document No. 101321-016 (revision Q or later).

As a backup are installed RPM indicator (propeller governor), fuel pressure indicator, engine hours counter and flight hours counter.

MFD displays the information in the following screen arrangements:

- EMS (Fig. 7-16)
- EMS / MAP (Fig. 7-17)
- EMS / EFIS with compass rose (Fig. 7-18)
- EMS / EFIS with g-load indication (Fig. 7-19)
- EMS / EFIS with analogue instruments design (Fig. 7-20)
- EMS / EFIS with compass rose / MAP (Fig. 7-21)
- EMS / EFIS with g-load indication / MAP (Fig. 7-22)
- EMS / EFIS with analogue instruments design / MAP (Fig. 7-23)



Pilot's Operating Handbook

- AS-POH-10-508 -----



Fig. 7-16 Arrangement screen 1



Fig. 7-17 Arrangement screen 2



Pilot's Operating Handbook

AS-POH-10-508



Fig. 7-18 Arrangement screen 3



Fig. 7-19 Arrangement screen 4



Pilot's Operating Handbook

- AS-POH-10-508 ----



Fig. 7-20 Arrangement screen 5



Fig. 7-21 Arrangement screen 6



Pilot's Operating Handbook

- AS-POH-10-508-



Fig. 7-22 Arrangement screen 7



Fig. 7-23 Arrangement screen 8



Pilot's Operating Handbook

AS-POH-10-508 -

7.15 Propeller

The aircraft is equipped with a propeller SR 2000DN. It is a 3-bladed in-flight electrically adjustable propeller with diameter 1.726 m (67.95 in). The propeller blades are made of a wooden composite with the blade leading edges covered by a wear-resistant material. Blades are mounted in an aluminum hub. The propeller hub is attached to a flange and base plate and fixed to the engine's propeller flange. Composite spinner is fixed to the base plate.

The angle of blades setting is adjusted by servomotor controlled from the cockpit. The propeller pitch can be adjusted smoothly in range from the minimum angle intended for take-off up to maximum angle for cruise.



Propeller regulator (Fig. 7-24) on the instrument panel consists of a display with the indication of the propeller blades adjusting direction, together with control LED diodes of **MIN. PITCH** and **MAX. PITCH** and also the operating mode switch **CONSTANT SPEED** or **MANUAL**. The meaning of the control LED diodes signals is:

- Green LED of adjusting the fine angle (MIN. PITCH):
 - Shines after reaching the min. angle.
 - Blinks when adjusting the finer angle.
- Yellow LED of adjusting the rough angle (MAX. PITCH):
 - Shines after reaching the stop at max. angle.
 - Blinks when adjusting the rougher angle.

The propeller regulator has also a function of a standby engine rpm indicator. The engine rpm is shown on the display.









- AS-POH-10-508-

7.16 Fuel System

7.16.1 System Description

Fuel is supplied to the engine depending on the **FUEL** selector valve position (**LEFT** - **RIGHT** - **OFF**). To select the left tank rotate the knob to position "A" or to select the right tank rotate the knob to position "B". To shut off the fuel valve, lift the lock "D" and rotate the knob to position "C" (Fig. 7-25).



Fig. 7-25 Fuel selector

From the both fuel tanks the fuel flows through the coarse fuel filters and fine fuel filters to the **FUEL** selector valve inlets. From the **FUEL** selector valve the fuel flows through the electric fuel pump (by-passed with check valve) to the engine driven fuel pump and then to a distributor inlet. One of distributor's outlets is connected to carburetors through the fuel flow meter sensor and 3-way distributor. Fuel flow meter measures only the fuel consumed by the engine. Second one is fitted with a restrictor jet to which a return line is connected. Return line leads back to the left fuel tank only.

Fuel pressure sensor and analogue fuel pressure indicator are installed in the fuel system and connected through the 3-way distributor with restrictor jets in its outlets to the 4-way distributor. Both check the actual pressure in the fuel supply line. Fuel pressure data from sensor are processed and displayed by Dynon SkyView SV-D1000.

The wing fuel tanks are connected with the fuselage wing tanks using a simple hose connection with clamps. Fuel tanks are vented from the highest point and discharge through hoses protruding under the aircraft through the fuselage skin inside of the center tunnel.

Fuel system diagram is shown at Fig. 7-26.



Pilot's Operating Handbook

- AS-POH-10-508 -----



1.	Engine fuel pump	13.	Check valve
2.	LH carburetor	14.	Filler cap
3.	RH carburetor	15.	Fuel level sensor
4.	4-way distributor	16.	LH wing fuel tank (26 l)
5.	3-way distributor	17.	LH center section fuel tank (37 l)
6.	Restrictor jet	18.	RH center section fuel tank (37 l)
7.	Fuel flow transducer	19.	RH wing fuel tank (26 l)
8.	EMS module	20.	Drain valve
9.	Fuel pressure sensor	21.	Fuel filter
10.	EFIS display	22.	FUEL selector
11.	Fuel pressure indicator	23.	Hose socket with coarse filter
12.	Electric fuel pump	-	-

Fig. 7-26 Fuel system diagram



Pilot's Operating Handbook

- AS-POH-10-508-

7.16.2 Fuel Management

The return line directs fuel to the left fuel tank only. The left tank must be used for all takeoffs and initial flight when there is more than ½ of fuel in the left tank to avoid its overflowing. Therefore, use the left tank until 1/2 of its capacity is consumed before changing to the right tank. This procedure makes enough space in the left tank for returning fuel. For maximum fuel utilization, when LH/RH reserve warning lights illuminate, switch to the right tank and consume all available fuel. In horizontal flight it is possible to consume almost all the fuel in the tank. After the right fuel tank is empty, switch to the left tank.



7.16.3 Fuel Measurement System

There is a fuel float type of fuel level sensor in the both left and right fuel tank. Fuel level sensor is installed in the root rib of fuselage fuel tanks.

Fuel quantity is displayed by Dynon SkyView SV-D1000. Due to the fuel tank geometry and position of fuel level sensor, it is possible to indicate the fuel quantity only in the range 0 - 45 l. If the fuel quantity in the tank is above 45 l, Dynon SkyView SV-D1000 displays "45+". Determining of fuel quantity in the tank above 45 l is possible only on the ground by using a dipstick (Fig. 7-27).

The fuel level sensors are calibrated in the aircraft's level position to indicate the correct fuel quantity during horizontal flight. The dipstick is calibrated in the aircraft's parking position on a level surface to indicate the correct fuel quantity in the tank above 45 l during refueling.

LH FUEL RES. / **RH FUEL RES.** warning lamps illuminate when the fuel quantity goes below 16 liters / 4.23 U. S. gal in each tank (aircraft in level flight). The fuel in each tank is sufficient for half-hour flight at maximum continuous power.



Fig. 7-27 Fuel quantity measurement



Pilot's Operating Handbook

AS-POH-10-508 -

Dynon SkyView SV-D1000 has a fuel computer function. To obtain accurate data, the fuel computer must be reset every time when the fuel has been added to the aircraft. Fuel computer adjustments are made under the EMS > FUEL menu. When the FUEL is pressed, the window Fig. 7-28 is displayed. In addition, the fuel computer is configured to detect when the fuel has been added while SkyView was off, as would be the case during normal refueling operation (Auto Fuel Detect). SkyView will automatically display the fuel menu upon startup as a reminder to adjust the fuel computer.



Fig. 7-28 Fuel computer window

FUEL COMPUTER QUANTITY ADJUSTMENT – displays the quantity of fuel that the fuel computer will add/subtract from the previous total fuel state.

CURRENT FUEL COMPUTER QUANTITY – is the total amount of fuel on board. This is the number that ultimately needs to be correct in order for the fuel computer to accurately perform its calculations.

MEASURED FUEL (IN-TANK SENSORS) – is the amount of fuel measured by the fuel level sensors. Fuel level sensor indicates the fuel amount in the tank only up to 45 l and is calibrated to show the correct amount when the aircraft is level. The aircraft on the ground is in a slightly tail down position, therefore the TOTAL FUEL and MEASURED FUEL may differ from each other.

There are a few different ways to adjust the fuel computer's fuel state:

- While FUEL menu is displayed, turn the FUEL knob to add or subtract fuel. This is limited to adjustments that set the Total Fuel to between 0 and the total fuel capacity as defined in the Setup Menu.
- Press FULL to have SkyView recall a previously programmed amount of fuel which represents the full fuel load of the aircraft. SkyView FULL is set to 100 l.
- Press PRESET to have SkyView recall a previously programmed amount of fuel which represents different fuel loading besides "full". This is commonly used in aircraft that have visual tabs in the tanks to easily fill to a non-full but well-defined fuel state. SkyView PRESET is set to 40 l.
- Press MATCH to have SkyView automatically add/subtract the appropriate amount of fuel so that Total Fuel matches the Measured Fuel value that the physical fuel tank sensors are measuring. Press ACCEPT to confirm the new displayed Total Fuel and exits the FUEL menu.
- Press CANCEL to discard any changes made to the Total Fuel and exits the FUEL menu.

Dynon SkyView SV-D1000 fuel computer displays following information (see the screens in the Chapter 7.14.7):

The consumed fuel marked "LTRS USED" is calculated based upon measured flow rates and user input of fuel quantity. It resets itself when the unit detects that oil pressure has exceeded 15 PSI for the first time after being powered on. This allows you to view the fuel used value from your last flight before engine start.

The time remaining info item marked "TIME REM" displays how much time is estimated remaining before the aircraft is out of fuel.

The fuel range info item marked "**RANGE**" displays the distance the aircraft can travel at its current GPS ground speed before it is out of fuel.

The fuel at waypoint info item marked "**WPT LTR**" displays how much fuel will remain at the next waypoint. This info item uses the current HIS nav source for waypoint information, and only displays information when there is a waypoint being navigated to. It assumes you are flying directly at the waypoint and does not adjust for non-direct flights.

- AS-POH-10-508-

7.17 Brake System

The main wheels have hydraulically operated single-disc type brakes. The brakes also function as parking brake.

Brake system consists of a brake lever, master cylinder, brake fluid reservoir, brake pressure limiter and calipers. Braking pressure is initiated by pulling the brake lever backward which distributes to both calipers.

The brake lever protrudes from the pedestal panel and moves in the slotted link with two positions labelled **PARK** and **MAX**. To apply the brakes, pull the brake lever backward as required.

When parking the aircraft set the brake lever to position **PARK**. When the maximum brake action is required, set the brake lever to position **MAX**.

A brake system malfunction or the onset of brake failure may be indicated by a gradual decrease of brake action, noisy or dragging brakes, soft, spongy or excessive travel of the brake lever and weak braking action. When these symptoms are observed, immediate maintenance is required. If the brakes are soft or spongy or brake lever travel increases, pumping the brake lever may build braking pressure.

WARNING

Never operate the brake lever in-flight!

WARNING

Do not simultaneously increase power and apply brakes during taxiing!







AS-POH-10-508 -

7.18 Electric System

The aircraft has 12 V DC system. Installation is dual-wire type.

Board network is supplied by maintenance free accumulator 12 V / 17 Ah that is installed on firewall in the engine compartment. Network is supplied with AC generator with external rectifier regulator (12 V DC).

Circuit breakers are installed at the lower edge of instrument panel's right side.

Dual contactless ignition of the engine is a separate part of electrical installation. Each ignition circuit can be switched ON/OFF independently using corresponding switches labelled **IGNITION**.

Keyed ignition switch is connected to the accumulator through the master switch labelled **MASTER SWITCH**. It has positions **OFF** - **INST.** - **CHARGE** - **START**. In the **OFF** position, the starter is electrically isolated. In the **INST.** position are energized single value instruments (engine hours and flight hours counter) and fuel pump. In the **CHARGE** position also a warning lamp **CHARGE** is energized and indicates the charging status. In the **START** position, the starter is energized and will automatically return to the position **CHARGE** when released. Before repeated engine starting, it is necessary to turn the keyed ignition switch to **OFF** position first, and then to position **START**.

Dynon SkyView SV-D1000 displays are connected through a circuit breaker directly to the **MASTER SWITCH**.

Avionics (RDST, XPDR, intercom) are activated by a separate switch labelled **AVIONICS** and are connected through a circuit breaker to the **MASTER SWITCH**.

Navigation and anti-collision lights are activated by a switch labelled **NAV/ACL** and are connected through a circuit breaker to the **MASTER SWITCH**. Landing lights are activated by a switch labelled **LAND** and are connected through a circuit breaker to the **MASTER SWITCH**.

Fuel pump is activated by a separate switch labelled **FUEL PUMP** and is connected through a circuit breaker to the **INST.** position of keyed ignition switch.

Propeller regulator is connected through a circuit breaker directly to the **MASTER SWITCH**. Propeller is power supplied and controlled by propeller regulator.

Stall warning system consists of buzzer and warning lamp that are triggered by ACI Stall Warner (AoA flap). Stall warning system is connected through a circuit breaker to the **MASTER SWITCH**.

Function of warning and control lamps and stall warning horn can be verified by pressing the test button labelled **TEST**. 12 V / 10 A sockets of an automotive type are installed at both lower corners of the instrument panel and are connected through a circuit breaker to the **MASTER SWITCH**.

Engine hours counter and flight hours counter are power supplied through a circuit breaker from the **INST**. position of keyed ignition switch.

Switch is ON with a lever switched UP and OFF with a lever switched DOWN (Fig. 7-29).



Fig. 7-29 Switch ON / OFF position


Pilot's Operating Handbook AS-POH-10-508

7.19 Cabin Heating and Ventilation

Cabin heating and ventilation supply conditioned air for cabin heating/venting and windshield demist.

Cabin heating and venting air is provided by a control box and enters the cabin through the firewall. The air is received from the deflector installed behind the water radiator and flows through the air hose to the heat exchanger on the muffler to be heated. Heated air from the exchanger flows through the air hose to the control box. Fresh air is received from the ram air tunnel installed on the left side of lower engine cowling and is directed through the air hose to the control box.

The proportion of heated to fresh air is controllable by means of controllers labelled **CABIN HEATING** and **CABIN VENTILATION** (Fig. 7-4). The means of control is as follows: PULL to OPEN, PUSH to CLOSE.

There are venting windows on the both sides of windshield (Fig. 7-30).

Fresh air for cabin venting and windshield demisting is received from the NACA intakes on both sides of the canopy. The fresh air flows through the canopy frame and enters the cockpit through the air outlets on both sides of the canopy. The air outlets control the amount and direction of air (Fig. 7-31).

The fresh air for windshield demisting flows through the holes located in the front section of canopy frame. The amount of air is controlled by knobs on both sides of canopy (Fig. 7-32).



Fig. 7-30 Venting window



Pilot's Operating Handbook

- AS-POH-10-508 -----



Fig. 7-31 Air outlets for cockpit venting



Fig. 7-32 Windshield demist knob



Pilot's Operating Handbook AS-POH-10-508

7.20 Pitot-Static System

The pitot-static system consists of a single pitot probe located under the right wing. The pitot probe includes total pressure, static pressure and AoA ports. In each line a drain sump is installed under the co-pilot seat to trap water and moisture that enters the system. The drain sumps should be checked at the annual inspection or in any case when water in the system is known or suspected.

Pressure distribution to individual instruments in the cockpit is done through flexible plastic hoses (Fig. 7-33).



1.	Pitot probe	6.	Flight hours counter
2.	ADAHRS module	7.	Altitude encoder
3.	Airspeed indicator	8.	Expansion bottle
4.	Altimeter	9.	Drain sumps
5.	Vertical speed indicator	-	-





Pilot's Operating Handbook

AS-POH-10-508 -

7.21 Stall Warning System

The Stall Warning System of WT9 Dynamic LSA consists of two independent stall warning sensors. The first sensor is the Stall Warning Port (AoA port) located on the pitot probe under the right wing. The second sensor is ACI Warner (AoA flap) installed on the left wing leading edge (Fig. 7-34).

The stall warning system starts the warning within the range 9-19 km/h (5-10 kts) before stalling in wing level flight and at slightly greater margins in turning and accelerated flight.

In some emergencies when the **MASTER SWITCH** has to be set **OFF**, only the stall warning of Dynon SkyView D1000 will be available (visual indication on EFIS screen and headset sound).

Stall warning system has following indication of imminent stall:

- Visual Indication
 - Indicator on the EFIS screen (Dynon SkyView D1000)
 - o STALL warning lamp on the instrument panel
- Aural Indication
 - Headset sound (Dynon SkyView D1000)
 - o Buzzer

To perform a ground test of the stall warning system, the aircraft is equipped with a test button. The test button activates:

- Stall warning lamp on the instrument panel
- Buzzer
- All warning/check lamps



Fig. 7-34 Stall warning system schematic



Pilot's Operating Handbook AS-POH-10-508

7.22 Emergency Parachute System

The aircraft is equipped with the emergency parachute system MAGNUM 601 S-LSA. The emergency parachute system (EPS) is intended to save lives of occupants, but the activation of the system will most likely destroy the aircraft. In adverse circumstances, the activation may cause serious injury or death to the occupants. It is important to read carefully the EPS system description in this chapter and Chapter 3 - EMERGENCY PROCEDURES.

The EPS consists of a parachute, extraction device (rocket), activation handle and harnesses that are attached to the fuselage structure.

A textile container with a parachute is attached to the board behind the instrument panel. The parachute is connected to the fuselage structure by means of two main straps and one stabilizing strap. The main straps are fixed to the attachment points on the firewall. The stabilizing strap that consists of steel rope is imbedded in the fuselage shell and attached to the auxiliary spar of the fuselage. When the parachute deploys, the steel rope is pulled out from the fuselage skin.

A weakened composite cover to enable rocket's smooth egress and parachute extraction closes the opening in the fuselage.

The rocket is attached to the firewall and it is connected to an actuator installed in the center console accessible for both pilot and co-pilot. The actuator is labelled **RESCUE SYSTEM**. The lock securing the actuator has to be removed before flight. Even after the lock is removed, the actuator protector secures the actuator from unintentional activation of rescue system (Fig. 7-35).

Before activation, if possible, minimize the flight speed. If time permits, stop the engine to prevent the straps from getting to the propeller.

Activation of EPS is performed by opening the rescue system actuator protector (I.) and pulling the actuator (II.) (Fig. 7-35). Pull the actuator straight backward with a strong, steady and continuous force until the rocket activates. Up to 12 kg / 26.5 lb force or greater may be required to activate the rocket.



1.	RESCUE SYSTEM actuator	3.	Lock
2.	RESCUE SYSTEM actuator protector	-	-

Fig. 7-35 Activating of EPS



Pilot's Operating Handbook

- AS-POH-10-508 -

After activation of EPS the rocket ignites, egresses the fuselage and pulls out the parachute that starts to inflate. The aircraft begins to decelerate and there is a gentle jerk as the parachute is fully inflated. The parachute is equipped with a slider to soften the loading that may momentarily reach the peak value 5g. The aircraft may swing but with a stabilizing tendency. The exact sequence depends on the situation, circumstances of the activation, position and the altitude. Activation at higher altitude will give more time to stabilize from the swinging. The length of straps is designed so that the aircraft descends in the landing gear down position with tail and left wing slightly sloped down. Descent rate at maximum weight is expected to be maximum 1400 fpm (7 m/s).

After landing, leave the aircraft as quickly as possible. In windy weather an inflated parachute may drag the aircraft. By pulling several parachute lines that are beside one another, the parachute will become empty and minimize the dragging. After landing on water exit the aircraft promptly prior to its sinking. There is a danger of entangling yourself in the parachute.

WARNING

Remove the actuator lock before flight!

WARNING

The rocket force is used as an extraction device! The EPS does not require electrical power for activation! Stay clear of parachute egress point when the aircraft is occupied!

CAUTION

Ground impact is expected to be equivalent to touchdown from a height of approximately 8.2-9.8 ft (2.5-3.0 m)! Occupants must prepare for it in accordance with the EPS deployment procedure in Chapter 3 - EMERGENCY PROCEDURES!

NOTE

For more details refer to "MANUAL FOR MOUNTING AND USE OF RESCUE BALLISTIC PARACHUTE SYSTEMS SERIES MAGNUM", latest edition.

NOTE

EPS is designed to work in a variety of aircraft attitudes. However, deployment in an attitude other than level flight may yield deployment characteristics other than described above.

AERO

Pilot's Operating Handbook

- AS-POH-10-508-

7.23 Towing Equipment

The aircraft has installed equipment necessary for towing operationn. Tow release system consists of:

- Tow release mechanism
- Rear-view mirrors

The aircraft is equipped with a tow release mechanism installed in the rear section of the fuselage under the rudder (1, Fig. 7-36). It is operated by the **TOW RELEASE** handle (36, Fig. 7-4) installed on the left side of the central tunnel. **TOW RELEASE** handle is connected to the tow release mechanism by means of steel ropes.

The **TOW RELEASE** handle, when released, must be fully returned to the initial position (Fig. 7-37), otherwise there may be a problem with a tow release mechanism jamming or incorrect adjustment of tow release system.

The aircraft is equipped with rear-view mirrors for glider position monitoring. The mirrors are installed on the left and right side of the canopy frame (Fig. 7-38). The rear-view mirrors are manually adjustable.



Fig. 7-37 Tow release handle positions



Pilot's Operating Handbook AS-POH-10- 508

Fig. 7-38 Rear-view mirrors



Pilot's Operating Handbook
AS-POH-10-508

8 HANDLING AND SERVICING

TABLE OF CONTENTS

8.1	INTRODUCTION	8-2
8.2	GROUND HANDLING	8-3
8.2.1	Towing	8-3
8.2.2	Parking	8-4
8.2.3	Tie-Down Instructions	8-5
8.2.4	Jacking and Leveling	8-6
8.3	SERVICING OF OPERATING FLUIDS	8-7
8.3.1	Fuel Servicing	8-7
8.3.2	Fuel Contamination and Sampling	8-9
8.3.3	Oil Servicing	8-11
8.3.4	Coolant Servicing	8-13
8.3.5	Brake Fluid Servicing	8-13
8.4	TIRE INFLATING	8-14
8.5	CLEANING AND CARE	8-15
8.6	WINTER OPERATION	8-18



Pilot's Operating Handbook

AS-POH-10-508 -

8.1 Introduction

This Chapter contains factory recommended procedures for proper ground handling and servicing of the WT9 Dynamic LSA / Club.

In order to ensure continued safe and efficient operation, keep in contact with your local dealer or aircraft manufacturer to obtain the latest information pertaining to your aircraft.

The following service publications are available to be obtained from the aircraft manufacturer of WT9 Dynamic LSA:

- Pilot's Operating Handbook (POH) Pilot's Operating Handbook is structured into chapters as specified by CS-LSA. A current copy of the POH is provided at delivery.
- Aircraft Maintenance Manual (AMM) Aircraft Maintenance Manual is divided into chapters as specified by ATA. A current copy of the AMM is provided at delivery.
- Service Bulletins (SB) Pay special importance to the Service Bulletins. When you receive a Service Bulletin, comply
 with it as stated in the Service Bulletin. Service Bulletins are updated and available on the manufacturer's website
 (www.aerospool.sk).

WT9 Dynamic LSA publications may be obtained by contacting customer service of aircraft manufacturer as follows:

Aerospool spol. s r. o. Letisková 10 971 03 Prievidza Slovak republic Web: <u>www.aerospool.sk</u> E-mail: <u>lsa-documents@aerospool.sk</u>

In the correspondence regarding the aircraft include the aircraft serial number for accurate processing of your documentation needs.



Pilot's Operating Handbook

- AS-POH-10-508-

8.2 Ground Handling

The aircraft can suffer higher stress loads on the ground than in the air. Do not push the aircraft on the ground by leaning on the control surfaces or the wing tips. Extreme caution must be taken when taxiing on rough or uneven ground because it could damage the integrity of the aircraft.

CAUTION

Do not move the aircraft by pushing on control surfaces or the wing tips because applied pressure on the surface can create depressions which weaken the sandwich shell!

8.2.1 Towing

The aircraft is most easily towed and safely maneuvered on the ground by using a tow bar. The tow bar is engaged to the nose leg by means of a pin.

It is also possible to tow the aircraft by holding the propeller blades at the blade root. Before towing check if the space around the aircraft is clear of obstacles and people, and nobody is in the cockpit.

WARNING

Remove the tow bar before starting the engine!

WARNING

MASTER SWITCH and IGNITION must be switched OFF! Nobody is allowed to be in the cockpit!

CAUTION

Push or pull the aircraft from the propeller blade root only, never at the wing tips or the control surfaces!

CAUTION

Do not tow the aircraft with the canopy open!

a.	Wing flaps	Check FLAPS 0
b.	MASTER SWITCH	Check OFF
с.	IGNITION	Check OFF both circuits
d.	Brake	Check PARK
e.	Tow bar	Engage to nose leg by means of pin
f.	Brake	Release
g.	Aircraft	Move to desired locations
h.	BRAKE	PARK
i.	Tow bar	Remove



Pilot's Operating Handbook

AS-POH-10-508 -

8.2.2 Parking

It is advisable to park the aircraft inside a hangar or eventually inside a weather-proof space with stable temperature, good ventilation, low humidity and a dust-free environment. The parking place should be protected against possible damage caused by sun radiation, humidity and wind. Sunbeams reflected through the canopy can generate spot heating and damage the cockpit area and the upholstery (Fig. 8-1).

For short term parking, the aircraft must be orientated in headwind direction, the parking brake must be engaged, the wing flaps must be in the retracted position, pitch trim fully forward and the wheels must be chocked.

For extended and unattended parking, as well as in unpredictable wind conditions, in areas where a danger of propwash from another aircraft or helicopter is present, the aircraft must be tied down to the ground or placed in a hangar. For parking, head the aircraft into the wind if possible.

WARNING

Parking the aircraft with canopy open and tail directed towards the sun can cause damage in the cockpit area!

a.	Wing flaps	Check FLAPS 0
b.	MASTER SWITCH	ON
C.	TRIM	Fully forward
d.	MASTER SWITCH	OFF
e.	IGNITION	Check OFF both circuits
f.	Brake	PARK
g.	Canopy	Close, lock and cover with the cloth dust-cover, as necessary
h.	Tie-down	As required (see Chapter 8.2.3)



Fig. 8-1 Canopy sunbeams reflection



Pilot's Operating Handbook

- AS-POH-10-508-

8.2.3 Tie-Down Instructions

Proper tie-down procedure is the best precaution against damage to a parked aircraft by gusts, strong winds or in areas where a danger of propwash from another aircraft or helicopter is present (Fig. 8-2). To securely tie-down the aircraft, proceed as follows:

a.	Wing flaps	Check FLAPS 0
b.	MASTER SWITCH	ON
c.	TRIM	Fully forward
d.	MASTER SWITCH	OFF
e.	IGNITION	Check OFF both circuits
f.	Brake	Check PARK
g.	Wheel chocks	Put the chocks (1) in front of and behind the main wheels
h.	Mooring eyes	Screw mooring eyes (2) into the left and right lower wing surface (near inspection hole)
i.	Aircraft	Tie-down to the ground through the mooring eyes (2) using ropes or chains
j.	Ailerons	Put into neutral position and lock them using an adhesive tape
k.	Fuel tank caps	Protect from water accumulation around the caps using adhesive tape
Ι.	Pitot probe	Install cover (3)
m.	Canopy	Close the sliding windows; close and lock the canopy and cover using textile canopy cover



Fig. 8-2 Tied-down aircraft



Pilot's Operating Handbook

AS-POH-10-508 ----

8.2.4 Jacking and Leveling

The aircraft can be jacked and leveled using three jacks (1) at the jack points located on the bottom side of the fuselage. One jack point is located in the front section under the firewall and two jack points are located in the wing center section under the auxiliary spar. Each jack point is labelled **LIFT HERE**.

To prevent the aircraft from upset, install the tail stand (2) under the aircraft's tail (Fig. 8-3).



Raise aircraft:

a.	MASTER SWITCH	Check OFF
b.	IGNITION	Check OFF both circuits
c.	Brake	Check PARK
d.	Aircraft	Position on a hard, flat and level surface
e.	Jacks	Position the jacks (1) under the jack points and raise the jacks to firmly contact the jack points
		Raise the aircraft keeping the aircraft as level as possible
f.	Tail stand	Position the tail stand (2) under the tail and secure the aircraft

Lower aircraft:

a.	Tail stand	Remove
b	Jacks	Release the jacks as simultaneously as necessary to keep aircraft as level as possible and remove







Pilot's Operating Handbook

AS-POH-10-508-

8.3 Servicing of Operating Fluids

8.3.1 Fuel Servicing

Observe all safety precautions required when handling gasoline. Filler necks are located on the upper surface of wings (Fig. 8-4). Fill up only with suitable fuel according to specification in Chapter 2.9.1.

Keep in mind maximum permitted takeoff weight and CG position when refueling the aircraft. The fuel should be distributed equally between each side.

WARNING

Have a fire extinguisher available when refuelling!

Smoking and naked flames during fuelling is prohibited within

10 m radius from the aircraft!

Obey the local valid fire hazard legislation!

WARNING

Never fill up the fuel tanks with the engine running!

MASTER SWITCH and IGNITION must be switched OFF!

Nobody is allowed to be in the cockpit!

WARNING

Ground the aircraft before refuelling!

If a funnel is used, it must be conductively connected to the filler neck before refuelling!

WARNING

Never use cloths, which produce static electricity for cleaning the area around the filler necks! Never clean the aircraft during fueling!

NOTE

The tank in wing is connected to the fuselage tank with a hose. The hose diameter is not sufficient for the fuel to flow immediately into the fuselage tank when refueling. Please wait until the fuel from the wing tank flows into the fuselage tank and then continue refueling.

NOTE

Keep the fuel tanks at least half full at all times to minimize condensation and moisture accumulation in tanks. In extremely humid areas, the fuel supply should be checked frequently and drained of condensation to prevent possible distribution problems.



Pilot's Operating Handbook

- AS-POH-10-508 -

NOTE

For complete oil grades and specifications see OPERATORS MANUAL FOR ROTAX ENGINE TYPE 912 SERIES, Doc. No. OM-912 and Rotax Service Instructions SI-912-016, latest edition.

Filling of fuel tanks:

a.	MASTER SWITCH	Check OFF
b.	IGNITION	Check OFF both circuits
c.	BRAKE	Check PARK
d.	Fire extinguisher	Place near fuel tank being filled
e.	Ground wires	Attach to the exhaust tube
f.	Fuel tank cap	Remove
g.	Fueling	Pour the suitable fuel type to desired level considering weight and CG limits
h.	Fuel tank cap	Install and make sure that opening arm directs rearward
i.	Spilled fuel	Make sure that no spilled fuel is on the plane; clean if necessary
j.	Ground wires	Remove
k.	Fire extinguisher	Remove



Fig. 8-4 Fuel servicing



Pilot's Operating Handbook

- AS-POH-10-508-

8.3.2 Fuel Contamination and Sampling

Each fuel system drain must be sampled by draining into a clear sample cup. If sampling reveals contamination, sample again repeatedly until all contamination is removed. If evidence of significant contamination remains, do not fly until a mechanic is consulted. The fuel system must be drained and purged and the source of contamination determined. If improper fuel grade has been used, do not fly until the fuel system is drained and refueled with an approved fuel grade.

The fuel drain valves are located in the lowest point of each tank on wings and fuselage bottom surfaces (Fig. 8-5). Drain each fuel tank to remove accumulated water if any as follows:

- VI	ГАГ	IN C

MASTER SWITCH and IGNITION must be switched OFF! Nobody is allowed to be in the cockpit!

WARNING

Smoking and naked flames during fuel draining is prohibited!

WARNING

Do not use materials which can cause static electricity during fuel draining!

Fuel sampling:

a.	MASTER SWITCH	Check OFF
b.	IGNITION	Check OFF both circuits
C.	BRAKE	Check PARK
d.	Fuel tank cap	Open
e.	Suitable bottle	Place below the drain valve
f.	Drain valve	Push and drain a small quantity of fuel and check
g.	Drain valve	Close and check
h.	Fuel tank cap	Close and make sure that opening arm directs rearward



Pilot's Operating Handbook



Fig. 8-5 Fuel draining



Pilot's Operating Handbook AS-POH-10-508

8.3.3 Oil Servicing

The oil tank is located in the engine compartment (Fig. 7-14). The capacity of oil system is 3.0-3.5 l / 0.79-0.92 U. S. gal. Maintain required oil level in the oil tank according to the dipstick. Fill up only with suitable oil according to specification in Chapter 2.9.2. Used oil is stated on the placard in the engine compartment.

When operating primarily on unleaded fuels or MOGAS, the maintenance intervals remain unchanged in regard to the maintenance schedule according to the Maintenance Manual for Rotax engine type 912 Series or Rotax Service Instructions SI-912-016, latest edition.

In the case of severe operating conditions (operation in cold/hot weather areas, interference by and/or salt), the time between maintenance intervals must generally be shorter, and in particular, the frequency of oil changes must be increased regardless of the type of fuel mainly used (MOGAS or AVGAS).

When operating with leaded AVGAS fuels, perform maintenance checks according to the latest Maintenance Manual for Rotax engine type 912 Series. More frequent oil changes will assure timely removal of residues and oil sludge thus avoiding increased wear or operating troubles.

Motor oils tested and released by BRP-Rotax (for use with unleaded fuel or MOGAS and leaded AVGAS) which engine manufacturer recommends for use with their Rotax Engine Type 912 Series are in the table below.

WARNING

MASTER SWITCH and IGNITION must be switched OFF! Nobody is allowed to be in the cockpit!

WARNING

Never crank the propeller when the engine is hot! Never service the oil if the engine is hot! Wait until the engine cools down to ambient temperature!

CAUTION

Use only suitable oil according to the specification stated at placard in the engine compartment!

CAUTION

Never use AVGAS, LB 95 with fully synthetic engine oils!

NOTE

For complete oil grades and specifications see OPERATORS MANUAL FOR ROTAX ENGINE TYPE 912 SERIES, Doc. No. OM-912 and Rotax Service Instructions SI-912-016, latest edition.



Pilot's Operating Handbook

- AS-POH-10-508 ----

Oil check and replenishing:

a.	MASTER SWITCH	Check OFF
b.	IGNITION	Check OFF both circuits
c.	BRAKE	Check PARK
d.	Oil cowl door	Open
e.	Oil tank cap	Open
f.	Propeller	Crank (in direction of the engine rotation) by hand several times until a noticeable gurgle is heard, check for odd noises or excessive resistance and normal compression
g.	Oil quantity	Check the level with a dipstick and replenish as required
h.	Oil tank cap	Close
i.	Oil cowl door	Close



Pilot's Operating Handbook

- AS-POH-10-508-

8.3.4 Coolant Servicing

The expansion tank is located in the engine compartment on the top of engine (Fig. 7-14). An overflow bottle is attached to the firewall (Fig. 7-14). Keep coolant level between the min. and max. level marks. Fill up only with suitable coolant according to specification in Chapter 2.9.3. Used coolant is stated on the placard in the engine compartment.

WARNING

MASTER SWITCH and IGNITION must be switched OFF! Nobody is allowed to be in the cockpit!

WARNING

Do not replenish the coolant if the engine is hot! Always let the engine cool down to ambient temperature!

CAUTION

Use only suitable coolant according to the specification stated on placard in the engine compartment! Never mix different types of coolants!

NOTE

For complete coolant specifications see OPERATORS MANUAL FOR ROTAX ENGINE TYPE 912 SERIES, Doc. No. OM-912 and Rotax Service Instructions SI-912-016, latest edition.

Coolant replenishing:

a.	MASTER SWITCH	Check OFF
b.	IGNITION	Check OFF both circuits
C.	Brake	Check PARK
d.	Upper engine cowling	Remove
e.	Engine temperature	Check that the engine is cooled down to ambient temperature to avoid injury from hot coolant
f.	Expansion tank	Open the expansion tank cap; add coolant if necessary and close the expansion tank cap
g.	Overflow bottle	Open the overflow bottle cap; add coolant if necessary and close the overflow bottle cap
h.	Upper engine cowling	Install

8.3.5 Brake Fluid Servicing

Brake fluid of D.O.T.4. should be used for the brake system. The brake fluid level should be checked at the annual or 100-hour inspection. For brake fluid check refer to the aircraft maintenance manual. Used brake fluid is stated on the placard in the engine compartment.



Pilot's Operating Handbook

- AS-POH-10-508 -

8.4 Tire Inflating

Keep the tires inflated to the proper pressure. The nose wheel tire pressure is 200 kPa and the main gear tire pressure is 250 kPa. When checking the tire pressure, also examine the tires for wear, cuts and nicks.

All wheels and tires are balanced before original installation. In the case of new tire installation, it is necessary to rebalance the wheels with the tires fitted. Unbalanced wheels can cause vibration in the landing gear.

WARNING MASTER SWITCH and IGNITION must be switched OFF!

Nobody is allowed to be in the cockpit!

Tire inflating:

a.	BRAKE	PARK
b.	IGNITION	Check both circuits OFF
c.	Wheel fairings	Remove the access hole's sticker to gain access to the tire valves of main wheels
d.	Brake	Release
e.	Aircraft	Move to gain access to the tire valves through the access hole in the wheel fairings
f.	Brake	PARK
g.	Nose wheel tire	Remove the tire valve cap, check/inflate 200 kPa and install the cap
h.	Main wheel tires	Remove the tire valve caps, check/inflate 250 kPa and install the caps
i.	Wheel fairings	Install the access hole's stickers



Pilot's Operating Handbook

AS-POH-10-508 —

8.5 Cleaning and Care

Regular cleaning and care of the aircraft is the first consideration for safe and efficient operation. Cleaning and care should be based on climatic and flying conditions.

Before cleaning the aircraft cover the pitot probe ports.

Do not use abrasive cleaners or detergents that can make scratches on the paint or corrode the metal. Do not use a pressure washer to clean the aircraft or engine compartment to avoid damage.

CAUTION

A dirty aircraft downgrades the flight performance!

CAUTION

Before cleaning the aircraft cover the pitot probe ports!

CAUTION

Do not use a pressure washer to clean the aircraft!

Cleaning windshield and windows:

Rinse away all dirt particles from windshield and windows before applying cloth or chamois. The windshield and windows should be cleaned with an aircraft windshield cleaner or water mixed with detergent. Apply the cleaner sparingly with a soft cloth or chamois and rub with moderate pressure until all dirt, oil scum and bug stains are removed. Never rub a dry windshield or windows. Finally wipe the cleaner off with soft flannel cloths.

CAUTION

Do not clean the windshield and windows with alcohol, acetone or lacquer thinner, because they are made from acrylic. Acrylic becomes fragile after contact with these liquids!

CAUTION

Never rub a dry windshield or windows!

Exterior cleaning:

Flush away loose dirt with water first. The exterior surfaces should be cleaned with a mild soap and water using a sponge or soft cotton towel and chamois. These surfaces may be finally protected using good commercial wax reapplied at least once a year by hand or with a rotating cloth disc. A thin coat of polished wax will fill minor scratches and help prevent further scratching.

Interior cleaning:

The interior painted surfaces should be cleaned with water mixed with detergent using a sponge or soft cotton towel. Seats, carpet and upholstery panels should be vacuumed to remove surface dirt and dust. While vacuuming, use a fine bristle nylon brush to help loosen particles.



Pilot's Operating Handbook

AS-POH-10-508 —

Engine compartment cleaning:

When cleaning the engine, the dissolved residues of fuel, oil and other environment contaminating agents are rinsed off. Collect the cleaning water and dispose of it in accordance with applicable environmental regulations. Do not use easily inflammable liquids or caustic cleaning agents for cleaning the engine. Take care to avoid solvents or water from entering electric parts of the engine installation.

a.	MASTER SWITCH	Check OFF
b.	IGNITION	Check OFF both circuits
c.	Brake	Check PARK
d.	Upper engine cowling	Remove
e.	Engine temperature	Check if the engine is cooled down to ambient temperature
f.	Engine compartment	Clean as required
g.	Upper engine cowling	Install

WARNING

MASTER SWITCH and IGNITION must be switched OFF! Nobody is allowed to be in the cockpit!

CAUTION

Do not clean the engine if it is hot! Always let the engine cool down to ambient temperature!

CAUTION

Do not spray solvents into the alternator, starter or induction air intakes! Do not operate the engine until excess solvent has evaporated or otherwise been removed!

NOTE

For more details refer to MAINTENANCE MANUAL FOR ROTAX ENGINE TYPE 912 SERIES, Doc. No. MM-912, latest edition.



Pilot's Operating Handbook

- AS-POH-10-508-

Propeller cleaning:

Cleaning the propeller is performed using water mixed with soap or detergent applied with a sponge and finished with a chamois.

a.	MASTER SWITCH	Check OFF
b.	IGNITION	Check OFF both circuits
c.	Brake	Check PARK
d.	Propeller	Clean as required

	WARNING		
MASTER SWITCH and IGNITION must be switched OFF! Nobody is allowed to be in the cockpit!			
	NUTE		

Cleaning the rear-view mirrors:

Clean the rear-view mirrors with a soft wet cloth to remove any dirt. Dry out the remaining moisture with a soft dry cloth.

CAUTION

Do not use a pressure washer to clean the rear-view mirrors!

Cleaning the tow release mechanism:

Remove any dirt or grass from the tow mechanism using a soft brush. Clean the outer surface with a wet cloth.

CAUTION

Do not use a pressure washer to clean the tow release mechanism!



Pilot's Operating Handbook

AS-POH-10-508 -

8.6 Winter Operation

Pre-flight inspection:

During the pre-flight inspection in winter additional checks must be done:

- Remove the frost, ice, snow or other contamination from the aircraft surfaces
- Check the control surfaces and flaps for free movement, full deflections and cleanness of slots
- Check the cleanness of the fuel tank venting

WARNING

During winter operations, snow can accumulate in the wheel fairings, which may result in increased aircraft weight and change of CG position!

Engine preheating:

It is possible to start the engine without needing to preheat if the outside temperature is above +5 °C. It is recommended to preheat the engine and oil if the temperature falls below +5 °C.

Blow hot air into the nose wheel well from the underside (Fig. 8-6). Temperature of the hot air should not exceed 50 °C. Preheat until coolant and oil temperature exceed +20 °C.

Use a suitable air heater and read the heater manual first. Obey local valid fire hazard legislation.

WARNING

Never use open fire to preheat the engine!

Obey the local valid fire hazard legislation!

Never leave the aircraft unattended while pre-heating!



Fig. 8-6 Engine preheating



Pilot's Operating Handbook

- AS-POH-10-508-

Parking and taxiing:

Check wheel brakes for freezing when parking outside and the temperature is below 0 °C. Check the wheels are not obstructed (push/pull the aircraft by hand to ensure free rotation of the wheels) prior to taxiing. Heat the brakes with the hot air to remove ice. Do not try to remove the ice by braking during taxiing!

CAUTION

Do not try to remove the ice by braking during taxiing!

Coolant:

The water cooling system is originally filled with a coolant mixture protecting the cooling system against freezing up to temperature -38 °C. Check the condition of coolant mixture before winter operation to prevent the failure of the radiator or cooling system due to ice.

If the outside temperature is below coolant mixture freezing point, the coolant mixture must be drained or renewed using a pure coolant to gain a lower freezing point. If the entire system must be refilled, refer to the aircraft maintenance manual. Use only coolant according to the specification stated on the placard in the engine compartment.

WARNING

Do not replenish the coolant if the engine is hot! Always let the engine cool down to ambient temperature!

CAUTION

Use only suitable coolant according to the specification stated on the placard in the engine compartment! Never mix different types of coolants!

NOTE

For complete coolant specifications see OPERATORS MANUAL FOR ROTAX ENGINE TYPE 912 SERIES, Doc. No. OM-912 and Rotax Service Instructions SI-912-016, latest edition.



Pilot's Operating Handbook

- AS-POH-10-508 ----

This page is left blank intentionally



Pilot's Operating Handbook AS-POH-10-508



9 SUPPLEMENTS

TABLE OF CONTENTS

9.1	INTRODUCTION	9-2
9.2	MANUAL IMPROVEMENT REQUEST FORM	9-3
9.3	SAFETY OF FLIGHT AND SERVICE DIFFICULTY REPORT FORM	9-4
9.4	CHANGE OF AIRCRAFT OWNER ADDRESS NOTIFICATION FORM	9-5



Pilot's Operating Handbook

- AS-POH-10-508 -

9.1 Introduction

This chapter contains all supplements available for WT9 Dynamic LSA / Club necessary to safely and efficiently operate the aircraft when equipped with various optional systems and equipment not provided with the standard aircraft.

ΝΟΤΕ
Additional individual equipment in accordance with a customer's request may increase the aircraft empty weight and reduce the
allowed useful load!

If there are any suggestions for improvements to the content of the manual, please use the form in the Chapter 9.2. If there are any safety of flight difficulty is observed, please use the form in the Chapter 9.3.

For the change of aircraft owner address notification, please use the form in the Chapter 9.4.

The forms can be delivered to the aircraft manufacturer by means of a post or via email. Contact data are stated at the top of the forms.

Pilot's Operating Handbook

- AS-POH-10-508-



9.2 Manual Improvement Request Form

Aerospool spol. s r. o. Letisková 10 973 01 Prievidza Slovak republic airworthiness@aerospool.sk www.aerospool.sk	erospool spol. s r. o. Letisková 10 973 01 Prievidza Slovak republic worthiness@aerospool.sk www.aerospool.sk			Aerospool reference No.: Date:	
Dear owner / operator / In the case of suggesti were found, please s REQUEST form. Fill the	maintain ons for im ubmit the e form and	er: provement to th proposed cha d sent it to the al	ne content of the anges by means bove stated addr	manual, c s of MAN ess via po	or if errors or omissions IUAL IMPROVEMENT st or email.
Your contact informatio	n:				
Name:		Telephone:		Email:	
Manual information:		<u> </u>		J	
Document number:		Revision:	Document nam	IE:	
Description of change request (attach more sheets if necessary):					
	····				
Reason of change requ	iest:				



Pilot's Operating Handbook

- AS-POH-10-508 ----

9.3 Safety of Flight and Service Difficulty Report Form

Aerospool spol. s r. o.	
Letisková 10	
973 01 Prievidza	
Slovak republic	SF
airworthiness@aerospool.sk	
www.aerospool.sk	

SAFETY OF FLIGHT AND SERVICE DIFFICULTY REPORT

Aerospool reference No.:

Date:

www.aerospoor.sk				
Dear owner / operator / maintainer: For continued increasing reliability of aircraft, we would like to ask you for your assistance in the case of safety of flight or service difficulty. Fill the feedback form and sent it to the above stated address via post or email.				
Type of report:				
□ SAFETY OF FLIGHT ISSUE □ SERV	/ICE DIFFICULTY			
Name:				
Contact information (telephone, email, address):				
Date of detection:				
Aircraft type / model:	S/N:			
Engine:	S/N:			
Propeller:	S/N:			
Flight hours:	Engine operation hours:			
Safety of flight / service difficulty description	(attach more sheets if necessary):			

Pilot's Operating Handbook

- AS-POH-10-508-



9.4 Change of Aircraft Owner Address Notification Form

Aerospool spol. s r. o. Letisková 10 973 01 Prievidza Slovak republic <u>airworthiness@aerospool.sk</u> <u>www.aerospool.sk</u>	CHANGE OF AIRCRAFT OWNER ADDRESS NOTIFICATION		Aerospool reference No.: Date:		
Dear owner: Fill the change of address notification form and sent it to the above stated address via post or email.					
Name of registered owner:		Aircraft registration number:			
		Aircraft type:			
		Aircraft model:			
		Serial number:			
Mailing address (if PO Box, include physical address):					
City:		Zip code:			
State:		Email:			
Date:		Signature:			



Pilot's Operating Handbook

- AS-POH-10-508 ----

This page is left blank intentionally